

WSTER WS-660

WSTER WS-660 Hypercar Bluetooth Replica Speaker User Manual

INTRODUCTION

Welcome to the WSTER WS-660 Hypercar Bluetooth Replica Speaker. This portable speaker combines a unique hypercar design with versatile audio playback options and an interactive LED display. Please read this manual carefully to ensure proper use and optimal performance.

PACKAGE CONTENTS

- WS-660 Hypercar Bluetooth Replica Speaker
- Power Cable
- Quick Start Guide

PRODUCT FEATURES

- **Hypercar-Inspired Model Design:** Features a clean, modern car-style body with smooth lines and a compact shape, making it suitable for desktop display or casual decoration.
- **Rhythmic LED Display Panel:** Top LED screen shows building-themed animations and engine-gauge rhythm graphics that move with the music for a steady, coordinated visual effect.
- **Bluetooth 5.4 & Multi-Input Playback:** Supports BT5.4 wireless playback, TF card, USB flash drive input, FM radio mode, and TWS pairing for flexible listening options.
- **Built-in Microphone & Selfie Function:** Allows hands-free calling and provides smartphone selfie triggering, convenient for travel photos and group pictures.
- **Charging Indicator & Portable Size:** Includes a clear charging-status indicator; easy to carry for daily use, desk placement, small gatherings, outdoor scenes, and gift occasions.

Controls and Ports

BLUETOOTH CONNECTION

Automatic pairing|stable transmission
And intuitive audio



Rear view of the WS-660 speaker, showing the DC IN port, TF card slot, USB port, and control buttons for mode, play/pause, previous track, and next track.

WS-660 CAR SPEAKER



WSTER

«» Enjoy Music Enjoy Life »»

Top view of the WS-660 speaker, highlighting the LED display panel and control buttons.

SETUP AND FIRST USE

Charging the Speaker

Before first use, fully charge the speaker. Connect the provided power cable to the DC IN port on the rear of the speaker and to a compatible USB power adapter (not included). The charging indicator on the display will show the charging status.

This video demonstrates connecting the charging cable to the WS-660 speaker and shows the charging indicator.

Powering On/Off

Press and hold the 'M' (Mode) button to turn the speaker on or off.

OPERATING INSTRUCTIONS

Bluetooth Pairing

1. Turn on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a flashing Bluetooth icon on the LED display.
2. On your mobile device, enable Bluetooth and search for "WS-660".
3. Select "WS-660" to connect. A confirmation tone will sound, and the Bluetooth icon will become solid.

This video illustrates the Bluetooth pairing process for the WS-660 speaker with a mobile device.

TWS (True Wireless Stereo) Pairing

To achieve stereo sound, you can pair two WS-660 speakers together:

1. Ensure both speakers are powered on and in Bluetooth mode, but not connected to any device.
2. On one speaker, double-press the Play/Pause button. It will search for the second speaker.
3. Once paired, a confirmation tone will sound. Connect your device to one of the speakers via Bluetooth.

This video demonstrates how to pair two WS-660 speakers for True Wireless Stereo (TWS) audio.

FM Radio Mode

Press the 'M' (Mode) button to switch to FM radio mode. Press and hold the Play/Pause button to auto-scan and save available FM stations. Use the Previous/Next track buttons to navigate between saved stations.

USB/TF Card Playback

Insert a USB flash drive or TF (microSD) card into the corresponding port on the rear of the speaker. The speaker will automatically switch to USB or TF card mode and begin playing audio files.

LED Display and Lights

The LED display shows dynamic animations and audio-reactive graphics. To turn off the LED party lights and display screen, double-press the Previous Track or Next Track button. Double-press again to reactivate.

This video highlights the dynamic LED starry-sky display and engine-gauge rhythm graphics of the WS-660 speaker.

Hands-Free Calling

When connected via Bluetooth, incoming calls will be routed to the speaker. Press the Play/Pause button to answer or end a call.

Selfie Function

In Bluetooth mode, open your smartphone's camera app. Press the Play/Pause button on the speaker to trigger the camera shutter.

MAINTENANCE

Cleaning

Use a soft, dry cloth to clean the speaker's surface. Do not use abrasive cleaners or solvents.

Storage

Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Common Issues

- **Speaker does not turn on:** Ensure the battery is charged. Connect to a power source and try again.
- **Cannot pair via Bluetooth:** Make sure the speaker is in Bluetooth pairing mode and not connected to another device. Disable and re-enable Bluetooth on your device.
- **No sound:** Check the volume level on both the speaker and your connected device. Ensure the correct input mode is selected.
- **Poor FM reception:** Reposition the speaker for better signal.

SPECIFICATIONS

Brand	WSTER
Model Number	WS-660
Speaker Maximum Output Power	15 Watts
Frequency Response	18 KHz
Connectivity Technology	Bluetooth
Audio Output Mode	Stereo
Enclosure Material	Acrylonitrile Butadiene Styrene (ABS)
Speaker Type	Outdoor
Additional Features	Built-in Microphone, Display, FM, LED Light, TWS
Item Dimensions (D x W x H)	12.99"D x 5.91"W x 3.62"H
Item Weight	944.8 Grams
Number of Batteries	2 Nonstandard Battery batteries (included)



WARRANTY AND SUPPORT

Warranty Information

The product information indicates "Warranty Description: NO". Please refer to your retailer or point of purchase for any available warranty details or return policies.

Customer Support

For further assistance, please contact WSTER customer support or visit the official WSTER Store on Amazon: [WSTER Store](#).