

ROBUD RB-WCF59

ROBUD Wooden Play Kitchen Set (Model RB-WCF59) Instruction Manual

For Model: RB-WCF59

PRODUCT OVERVIEW

The ROBUD Wooden Play Kitchen Set, Model RB-WCF59, is designed for children aged 3 years and up. This playset provides a realistic kitchen experience with various interactive features to encourage imaginative play and skill development.

Key components include:

- Microwave
- Sink with faucet
- Stove with sound knobs
- Oven
- Ice Maker
- Storage compartments
- Chalkboard

Included accessories:

- Stew pot
- Frying pan
- Rake, Spatula, Spoon utensils
- Salt & Pepper shakers
- Sink basin
- Ice cubes
- Cup

- Tablecloth
- Play vegetables (Garlic, Carrot, Radish)
- Planting box



Image: The complete ROBUD Wooden Play Kitchen Set in cream color, showcasing its various features.

ALL ACCESSORIES



Image: A visual representation of all included accessories for the play kitchen.

SAFETY INFORMATION

No specific safety information was provided in the product details. However, please observe the following general safety guidelines:

- **Age Recommendation:** This product is recommended for children 3 years and up. Ensure children playing with the set are within the recommended age range.
- **Adult Supervision:** Adult supervision is recommended during play to ensure safe use and prevent misuse.
- **Small Parts:** The set may contain small parts that could pose a choking hazard for very young children. Keep these away from children under 3 years.
- **Assembly:** Ensure all parts are securely assembled before allowing children to play. Regularly check for loose screws or components.
- **Stability:** Place the kitchen set on a flat, stable surface to prevent tipping.
- **Cleaning:** Clean the set with a damp cloth. Avoid harsh chemicals.

SETUP AND ASSEMBLY

This product requires assembly. Please follow the detailed instructions provided in the separate assembly manual included in the packaging. Ensure all components are present before beginning assembly.

Tools Required: Typically, a screwdriver is needed for assembly. Refer to the assembly manual for specific tool requirements.

Assembly Steps (General):

1. Unpack all components and verify against the parts list in the assembly manual.
2. Attach the base and side panels.
3. Install the back panel.
4. Assemble the microwave, sink, stove, and ice maker units.
5. Attach doors, knobs, and other interactive elements.
6. Secure any accessories like hooks and curtains.
7. Perform a final check to ensure all screws are tightened and the structure is stable.



Image: A view of the assembled kitchen set, illustrating the final product after setup.

OPERATING INSTRUCTIONS

The ROBUD Wooden Play Kitchen Set offers various interactive elements for engaging play.

1. Stove and Oven

- **Sound Knobs:** Turn the stove knobs to hear a realistic clicking sound, simulating the activation of burners.
- **Oven Door:** Open the oven door to place play food inside. The oven provides storage space for accessories.



Image: Detailed view of the stove knobs, oven, and ice maker for interactive play.

2. Sink and Faucet

- **Faucet:** Turn the faucet handles to simulate water flow for washing play food or dishes in the sink.
- **Planting Box:** Use the integrated planting box for pretend gardening activities with the included play vegetables.

REALISTIC PLAY KITCHEN



1 Planting



2 Cleaning



3 Cooking



4 Storage

Image: Demonstrates the "planting" and "cleaning" actions using the sink and planting box.

3. Microwave

- **Microwave Door:** Open and close the microwave door to place play food inside.
- **Buttons:** The microwave features non-functional buttons for realistic pretend play.

4. Ice Maker

- **Dispenser:** Press the lever on the ice maker to dispense play ice cubes into a cup.

5. Storage and Accessories

- **Hook Storage:** Hang play utensils on the hooks located above the stove.
- **Shelves and Cabinets:** Utilize the various shelves and cabinets for organizing play food and accessories.
- **Chalkboard:** Use chalk (not included) to write or draw on the side chalkboard.



Image: A child interacting with the chalkboard feature of the play kitchen.

Official Product Video

Your browser does not support the video tag.

Video: Demonstrates the interactive features and overall design of the ROBUD Wooden Play Kitchen Set.

MAINTENANCE AND CARE

- **Cleaning:** Wipe down all surfaces with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the wood finish.
- **Drying:** Ensure the kitchen set is completely dry after cleaning to prevent moisture damage.
- **Inspection:** Periodically inspect the set for any loose screws, damaged parts, or wear and tear. Tighten screws as needed.
- **Storage:** Store the play kitchen in a dry environment, away from direct sunlight or extreme temperatures, to preserve its condition.

TROUBLESHOOTING

If you encounter any issues with your ROBUD Wooden Play Kitchen Set, consider the following:

- **Loose Parts:** If any parts become loose, re-tighten the screws using an appropriate screwdriver. Do not overtighten.
- **Missing Accessories:** If any accessories are missing upon unboxing, refer to the parts list in your assembly manual and contact customer support.
- **Stability Issues:** Ensure the kitchen is placed on a flat, even surface. Check that all assembly connections are secure.
- **Damaged Components:** If any components are damaged, discontinue use and contact customer support for replacement parts or further assistance.

SPECIFICATIONS

Feature	Detail
Model Number	RB-WCF59
Product Dimensions	11.6 x 23.2 x 33.7 inches (29.5 x 59 x 85.5 cm)
Item Weight	24.2 pounds
Recommended Age	3 years and up
Material	Wood
Color	Cream (as per current product variant)
Manufacturer	ROBOTIME (Brand: ROBUD)

WOODEN PLAY KITCHEN DIMIENSIONS



Image: Diagram showing the dimensions of the play kitchen set.

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your product or visit the official ROBUD website. If you require assistance with assembly, missing parts, or have any questions regarding the product, please contact ROBUD customer support. Contact information can typically be found on the product packaging or the manufacturer's website.