

Melchioni Martina 10L

Melchioni Family Martina 10L Digital Air Fryer

Model: Martina 10L (118340057)

INTRODUCTION

The Melchioni Family Martina 10L Digital Air Fryer is an advanced and versatile appliance designed for healthy cooking. Utilizing highly efficient air cooking technology, it allows you to prepare crispy and delicious dishes with significantly less oil, reducing calorie intake by up to 80% compared to traditional frying methods. This manual provides essential information for the safe and effective use of your new air fryer.

Key features include a generous 10-liter capacity, a robust metal interior for optimal temperature management, and an intuitive color digital display for precise control over cooking times, temperatures, and pre-set modes. The dual resistance heating system ensures fast and uniform heat distribution, while the automatic shut-off function enhances safety.

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance to prevent personal injury or property damage. Keep this manual for future reference.

- Always place the air fryer on a stable, heat-resistant surface, away from walls or other appliances to allow adequate air circulation.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- Ensure the voltage indicated on the appliance matches your local power supply before connecting.
- Do not operate the appliance if the plug, power cord, or the appliance itself is damaged. Contact customer support for assistance.
- Close supervision is necessary when any appliance is used by or near children.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
- Always unplug the appliance from the outlet when not in use and before cleaning. Allow it to cool down completely before handling.
- Do not use accessories or attachments not recommended by the manufacturer, as this may cause injuries.
- Do not touch hot surfaces. Use handles or knobs.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

- This appliance is for household use only. Do not use outdoors.
- Never operate the appliance without food inside.
- Do not block the air vents during operation.
- The appliance features an automatic shut-off function. If it turns off unexpectedly, unplug it and allow it to cool before restarting.

PRODUCT OVERVIEW

The Melchioni Family Martina 10L Air Fryer is designed for ease of use and efficient cooking. Familiarize yourself with its components:

- **Main Unit:** Houses the heating elements, fan, and control panel.
- **Digital Control Panel:** Intuitive color display for setting time, temperature, and selecting cooking programs.
- **Cooking Basket/Drawer:** The primary cooking compartment for food. Features a transparent window for monitoring.
- **Handle:** For safely pulling out the cooking basket.
- **Air Vents:** Located at the back and top for air intake and exhaust. Do not block.

MARTINA

Friggitrice ad aria con doppia resistenza



Caratteristiche



Capacità
10 litri



Doppia resistenza



Assorbimento
2.100 W



Timer:
0-60min



Luce
interna



Display digitale
a colori

Image: The Melchioni Family Martina 10L Air Fryer, showcasing its sleek black design, digital control panel, and the transparent cooking window on the front of the basket. French fries are visible inside the basket, and a bowl of fries is next to the unit, highlighting its cooking capabilities.

Freidora de aire con doble resistencia.



Image: A diagram illustrating the dual resistance heating system within the Melchioni Family Martina Air Fryer. Red coils are shown at both the top and bottom of the cooking chamber, indicating even heat distribution for thorough cooking.

SETUP

1. **Unpacking:** Carefully remove all packaging materials, including any stickers or labels. Check that all parts are present and undamaged.
2. **Initial Cleaning:** Before first use, clean the cooking basket and any removable accessories with warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the appliance with a damp cloth. Do not immerse the main unit in water.
3. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is at least 10 cm (4 inches) of clear space around the back and sides of the appliance to allow for proper ventilation. Do not place it

directly under cabinets.

4. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the outlet voltage matches the specifications of the air fryer (220-240V, 50/60Hz).
5. **First Use (Burn-in):** It is recommended to run the air fryer empty for about 10-15 minutes at 180°C (350°F) before cooking food for the first time. This helps to burn off any manufacturing residues and odors. A slight smell or smoke may occur, which is normal. Ensure the area is well-ventilated.

OPERATING INSTRUCTIONS

The Melchioni Family Martina Air Fryer features an intuitive digital control panel for easy operation.

Basic Operation:

1. **Prepare Food:** Place your ingredients into the cooking basket. Do not overfill the basket to ensure even cooking.
2. **Insert Basket:** Slide the cooking basket firmly back into the main unit.
3. **Power On:** Plug in the appliance. The digital display will illuminate.
4. **Set Temperature and Time:** Use the touch controls on the digital display to adjust the desired cooking temperature (up to 200°C) and time (0-60 minutes).
5. **Start Cooking:** Press the Start/Pause button to begin the cooking cycle. The fan and heating elements will activate.
6. **Monitor Cooking:** You can observe the cooking process through the transparent window without opening the basket.
7. **Shake/Flip (Optional):** For some foods, it is recommended to shake or flip the ingredients halfway through the cooking time for more even results. Carefully pull out the basket, shake/flip, and reinsert. The appliance will resume cooking automatically.
8. **End of Cooking:** The air fryer will beep when the set cooking time has elapsed and automatically shut off.
9. **Remove Food:** Carefully pull out the cooking basket using the handle. Use heat-resistant tongs to remove the cooked food.

Using Pre-set Programs:

The air fryer comes with 12 pre-set cooking programs for common dishes. These programs automatically set optimal temperature and time.

1. **Select Program:** After powering on, touch the desired program icon on the digital display.
2. **Adjust (Optional):** You can manually adjust the pre-set temperature or time if needed.
3. **Start Cooking:** Press the Start/Pause button to begin.



12 programas de cocción



Pizza



Pescado



Verduras



Dulces



Pollo



Bistec



Patatas



Descongelador

Image: The digital control panel of the Melchioni Family Martina Air Fryer, displaying 12 distinct cooking program icons. These icons represent various food types such as pizza, fish, vegetables, desserts, chicken, steak, potatoes, and defrost, indicating the appliance's versatility.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

- 1. Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
- 2. Cleaning the Basket and Accessories:** The cooking basket and any removable accessories should be cleaned with warm water, a mild dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely. Note: The basket is not dishwasher safe.
- 3. Cleaning the Interior:** Wipe the interior of the appliance with a damp cloth. For stubborn food residues, use a mild detergent and a soft brush. Avoid abrasive cleaners or metal scouring pads.
- 4. Cleaning the Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not use harsh chemicals or abrasive materials.

5. **Heating Element:** If necessary, gently clean the heating element with a soft brush to remove any food particles. Ensure the appliance is completely cool and unplugged.
6. **Storage:** Store the cleaned and dried air fryer in a cool, dry place.

TROUBLESHOOTING

If you encounter any issues with your air fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in. Power outlet malfunction. Basket not fully inserted.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker. Push the cooking basket firmly into the main unit until it clicks into place.
Food is not cooked evenly.	Basket is overcrowded. Food not shaken/flipped.	Cook food in smaller batches. Shake or flip ingredients halfway through cooking.
Food is not crispy.	Too much moisture in food. Not enough oil (for some foods). Temperature too low or time too short.	Pat food dry before cooking. Lightly brush or spray food with oil. Increase temperature or cooking time.
White smoke coming from appliance.	Greasy food. Residue from previous use.	This is normal for fatty foods. Clean the basket and interior thoroughly after each use.
Appliance smells during first use.	Manufacturing residues.	This is normal. Run the air fryer empty for 10-15 minutes at 180°C in a well-ventilated area.

If the problem persists after checking these solutions, please contact customer support.

SPECIFICATIONS

Detailed technical specifications for the Melchioni Family Martina 10L Digital Air Fryer:

- Model Name:** Martina 10L
- Model Number:** 118340057
- Brand:** Melchioni
- Capacity:** 10 Liters
- Power:** 2100 Watts
- Voltage:** 220-240 V
- Frequency:** 50/60 Hz
- Maximum Temperature:** 200°C (392°F)
- Timer:** 0-60 minutes
- Control Method:** Touch (Digital Display)
- Special Features:** Color digital display, Dual resistance, Automatic shut-off
- Material:** Metal

Color: Black

Product Dimensions (D x W x H): 33 x 43.5 x 34.5 cm (13 x 17.1 x 13.6 inches)

Product Weight: 6.5 kg (14.3 lbs)

Recommended Uses: Roasting, Dehydrating, Frying, Baking, Drying, Toasting



Image: A visual representation of the Melchioni Family Martina Air Fryer with its key dimensions labeled: 43.5 cm width, 33 cm depth, and 34.5 cm height. This image helps users understand the physical footprint of the appliance.

WARRANTY AND SUPPORT

Your Melchioni Family Martina 10L Digital Air Fryer is covered by a standard manufacturer's warranty against defects in materials and workmanship. The specific terms and duration of the warranty may vary by region. Please retain your proof of purchase for warranty claims.

For Warranty Service:

If you experience any issues with your appliance that are not resolved by the troubleshooting guide, please contact the retailer where you purchased the product or Melchioni customer support directly.

Customer Support:

For technical assistance, product information, or to inquire about spare parts, please visit the official Melchioni website or refer to the contact information provided in your product packaging.

Please have your model number (Martina 10L or 118340057) and proof of purchase ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question