

InBrave wagon-5

InBrave Collapsible Wagon Cart Instruction Manual

Model: wagon-5

PRODUCT OVERVIEW

The InBrave Collapsible Wagon Cart is designed for versatile use, offering a spacious and durable solution for transporting items. Its foldable design, all-terrain wheels, and adjustable handle make it suitable for various activities, from grocery shopping to outdoor adventures.

Key features include:

- **Spacious & Versatile:** Deepened design (25.2" x 16.5" x 30.1") with a 120-liter capacity, ideal for camping, beach trips, shopping, and gardening.
- **Effortless Portability:** Folds in under 3 seconds to a compact size (8.3" x 17.0" x 30.0"), reducing footprint by over 80%. Weighs approximately 11 pounds for easy one-hand lifting.
- **Durable & Reliable:** Constructed with a high-strength alloy frame, supporting up to 380 lbs. Features 600D Oxford fabric, which is tear-resistant and waterproof, and can be removed for washing.
- **All-Terrain Ready:** Equipped with thickened all-terrain tires and 360° rotating front wheels for easy maneuvering on various surfaces like sand, gravel, mud, and grass.
- **User-Friendly Features:** Handlebar with 90° angle adjustment and extendable height (30.1"-35.0"). The handlebar automatically returns to a vertical position when released. Includes two mesh cup holders.



Image: The InBrave Collapsible Wagon Cart in Pink, showcasing its overall design.

SETUP INSTRUCTIONS

The InBrave Collapsible Wagon Cart is designed for quick and easy setup. Follow these steps to unfold and prepare your wagon for use:

1. **Unpack the Wagon:** Remove the wagon from its packaging. It will be in a folded, compact state.
2. **Unfold the Frame:** Place the folded wagon on a flat surface. Gently pull the sides of the wagon apart. The frame will begin to expand.
3. **Press Down the Center:** Once the frame is partially open, press down firmly on the center of the wagon's base. This will lock the frame into its open position. Ensure the base is flat and secure.
4. **Adjust the Handle:** Locate the handle. Press the release button on the handle and extend it to your desired height. The handle can be adjusted between 30.1" and 35.0" above ground level.
5. **Verify Stability:** Before loading, ensure all four wheels are on the ground and the wagon feels stable.



Storage Space: **120L**

SMALL SPACE AND BIG CONVENIENCE



Image: The wagon in its open and folded states, highlighting its compact storage dimensions.

FOLDS IN 3 SECOND-SAVING 80% SPACE



OPERATING INSTRUCTIONS

To ensure safe and efficient use of your InBrave Collapsible Wagon Cart, please follow these operating guidelines:

- **Loading the Wagon:** Distribute weight evenly within the wagon to maintain balance. Do not exceed the maximum load capacity of 380 lbs (172 kg).
- **Adjusting the Handle:** The handlebar can be rotated 90 degrees for comfortable pulling or pushing. To adjust the height, press the handle switch and extend or retract the handle. Release the switch to lock it in place. The handle will automatically return to a vertical position when released, preventing it from touching the ground.
- **Maneuvering:** The front wheels feature 360° rotation, allowing for easy steering. For optimal control on uneven terrain, pull the wagon rather than push.
- **Using Cup Holders:** Utilize the two mesh cup holders at the front for beverages or small items.
- **Folding for Storage:** To fold the wagon, pull the center strap upwards. The wagon will collapse inward. Secure it with any integrated straps or clips to keep it compact.

USER-FRIENDLY DESIGN

↑
Height
stretchable
30.3"-35.0"
↓

2 Cup Holders

Reset Device

90°
Rotation

Adjustable length and rotation

Handle Switch

Image: Close-up view of the adjustable handle mechanism and integrated cup holders.



Image: Detail of the all-terrain wheels, designed for various surfaces like gravel, grass, sand, and street.

MAINTENANCE

Regular maintenance will extend the life and performance of your InBrave Collapsible Wagon Cart:

- **Cleaning the Fabric:** The 600D Oxford fabric is removable for cleaning. Hand wash with mild soap and water, then air dry. Do not machine wash or tumble dry.
- **Frame Cleaning:** Wipe the alloy steel frame with a damp cloth to remove dirt and debris. Dry thoroughly to prevent rust.
- **Wheel Inspection:** Periodically check the wheels for any debris, wear, or damage. Ensure they rotate freely. Clean any accumulated dirt from the wheel axles.
- **Storage:** Store the wagon in its folded, compact state in a dry, cool place away from direct sunlight when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Wagon does not unfold or fold smoothly.	Mechanism might be stiff or obstructed.	Ensure no fabric or debris is caught in the folding mechanism. Apply light lubricant to moving joints if necessary. Ensure the center base is pressed down firmly when unfolding, or pulled up completely when folding.
Wheels are difficult to maneuver or do not rotate freely.	Debris caught in wheels or axles; wheels are locked.	Check for and remove any debris (sand, mud, grass) from the wheels and axles. Ensure wheel locks (if present) are disengaged.
Wagon feels unstable when loaded.	Uneven weight distribution or overloaded.	Redistribute items inside the wagon to balance the weight. Do not exceed the maximum load capacity of 380 lbs.
Handle does not adjust or lock in place.	Handle release button/switch not fully engaged or mechanism obstructed.	Ensure the handle switch is fully pressed when adjusting. Check for any obstructions in the handle's telescopic mechanism.

SPECIFICATIONS

Feature	Detail
Product Dimensions (Open)	26.4"D x 17.7"W x 30.3"H (67cm D x 45cm W x 77cm H)
Product Dimensions (Folded)	8.3"D x 17.0"W x 30.0"H (21cm D x 43cm W x 76cm H)
Material	Alloy Steel frame, 600D Oxford fabric, Plastic, Rubber wheels
Color	Pink
Weight Capacity	380 lbs (172 kg)
Volume Capacity	120 Liters
Item Weight	4.65 kg (approx. 10.25 lbs)
Handle Adjustment Height	30.1" - 35.0" (76.5cm - 89cm)
Wheel Type	All-terrain, 360° swivel front wheels
Special Features	Adjustable Handle, Collapsible, Compact, Durable, Lightweight, 2 Mesh Cup Holders

WARRANTY INFORMATION

InBrave products are manufactured to high-quality standards. For specific warranty details regarding your Collapsible Wagon Cart, please refer to the warranty card included with your purchase or visit the official InBrave website. Keep your proof of purchase for any warranty claims.

CUSTOMER SUPPORT

If you have any questions, require assistance with setup, operation, or encounter any issues not covered in this manual, please contact InBrave customer support. You can typically find contact information on the product packaging or the official InBrave website.

For further assistance, please visit the [InBrave Store on Amazon](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question