

Salange 2026

Salange 2026 Mini Projector User Manual

4K Supported, Android 14, WiFi 6, Bluetooth, Auto Keystone

INTRODUCTION

Thank you for choosing the Salange 2026 Mini Projector. This portable smart projector is designed to deliver a high-quality visual experience with its 4K support, Android 14 operating system, and advanced connectivity features like WiFi 6 and Bluetooth 5.4. This manual provides essential information for safe and efficient use of your device. Please read it thoroughly before operation and retain it for future reference.

SAFETY INFORMATION

- Do not look directly into the projector lens when the lamp is on.
- Ensure proper ventilation around the projector to prevent overheating.
- Use only the power adapter supplied with the projector.
- Keep the projector away from water, moisture, and flammable materials.
- Avoid placing the projector on unstable surfaces.
- Do not attempt to disassemble or repair the projector yourself. Contact qualified service personnel.

SETUP

1. Unboxing and Initial Placement

Carefully remove the projector and all accessories from the packaging. Place the projector on a stable, flat surface. For optimal viewing, position the projector perpendicular to the projection surface. The projector features a 270° rotatable design for flexible placement.

2. Power Connection

Connect the power cord to the projector's power input port and then plug it into a power outlet. The projector will typically power on automatically or can be turned on using the power button on the device or remote control.

Weitgehend kompatibel und nahtlos verbunden



HDMI



Laptop



PS5



Switch



TV Stick



AUDIO



Headphones



Speaker



USB



Smartphone



USB-Stick



Image: Rear view of the Salange 2026 Mini Projector with power, HDMI, and USB ports.

3. Focus and Keystone Adjustment

The Salange 2026 Mini Projector supports manual focus adjustment. Rotate the focus ring on the projector to achieve a sharp image. It also features automatic vertical keystone correction ($\pm 45^\circ$) to eliminate image distortion, ensuring a rectangular picture even when the projector is not perfectly aligned. For more precise adjustments, 4-point correction may be available in the settings.



Image: Automatic vertical keystone correction and manual focus adjustment.

4. Network Connection (WiFi 6)

Navigate to the settings menu on the projector. Select 'Network' or 'Wi-Fi' and choose your desired network from the list. Enter the password if prompted. The projector supports dual-band (2.4 GHz + 5 GHz) Wi-Fi 6 for stable and fast connections.

5. Bluetooth Pairing

To connect Bluetooth audio devices, go to the settings menu and select 'Bluetooth'. Turn on Bluetooth and search for available devices. Select your device from the list to pair. This allows for wireless audio output to speakers or headphones.

OPERATING INSTRUCTIONS

1. Power On/Off

Press the power button on the projector or the remote control to turn the device on or off. A short press typically puts the projector into standby mode, while a long press performs a full shutdown.

2. Navigating the Android 14 Interface

The projector runs on Android 14.0, providing access to a wide range of applications. Use the remote control to navigate through the home screen, app drawer, and settings. The interface is similar to a smart TV, allowing for intuitive use.



Image: Android TV 14.0 interface with streaming applications.

3. App Installation

With Android 14, you can install over 8,000 applications directly onto the projector. Access the app store (e.g., Google Play Store) from the home screen, search for desired apps (video players, games, office software), and install them.

4. Screen Mirroring (iOS/Android)

The projector supports screen mirroring for both iOS and Android devices. Ensure your mobile device and the projector are connected to the same Wi-Fi network. On your mobile device, activate the screen mirroring function (e.g., AirPlay for iOS, Cast for Android) and select the projector from the list of available devices.



Image: Wireless casting from mobile devices to the projector.

5. Connecting External Devices (HDMI, USB)

Use the HDMI port to connect devices such as laptops, game consoles (PS5, Switch), or TV sticks. Use the USB port to connect USB drives for media playback or other peripherals. Select the appropriate input source from the projector's input menu.

Ein großer Bildschirm & 0,8:1 Kurzdistanz-Projektion.

Stell einen hundert Zoll großen Riesenbildschirm zwischen jeden Quadratzoll

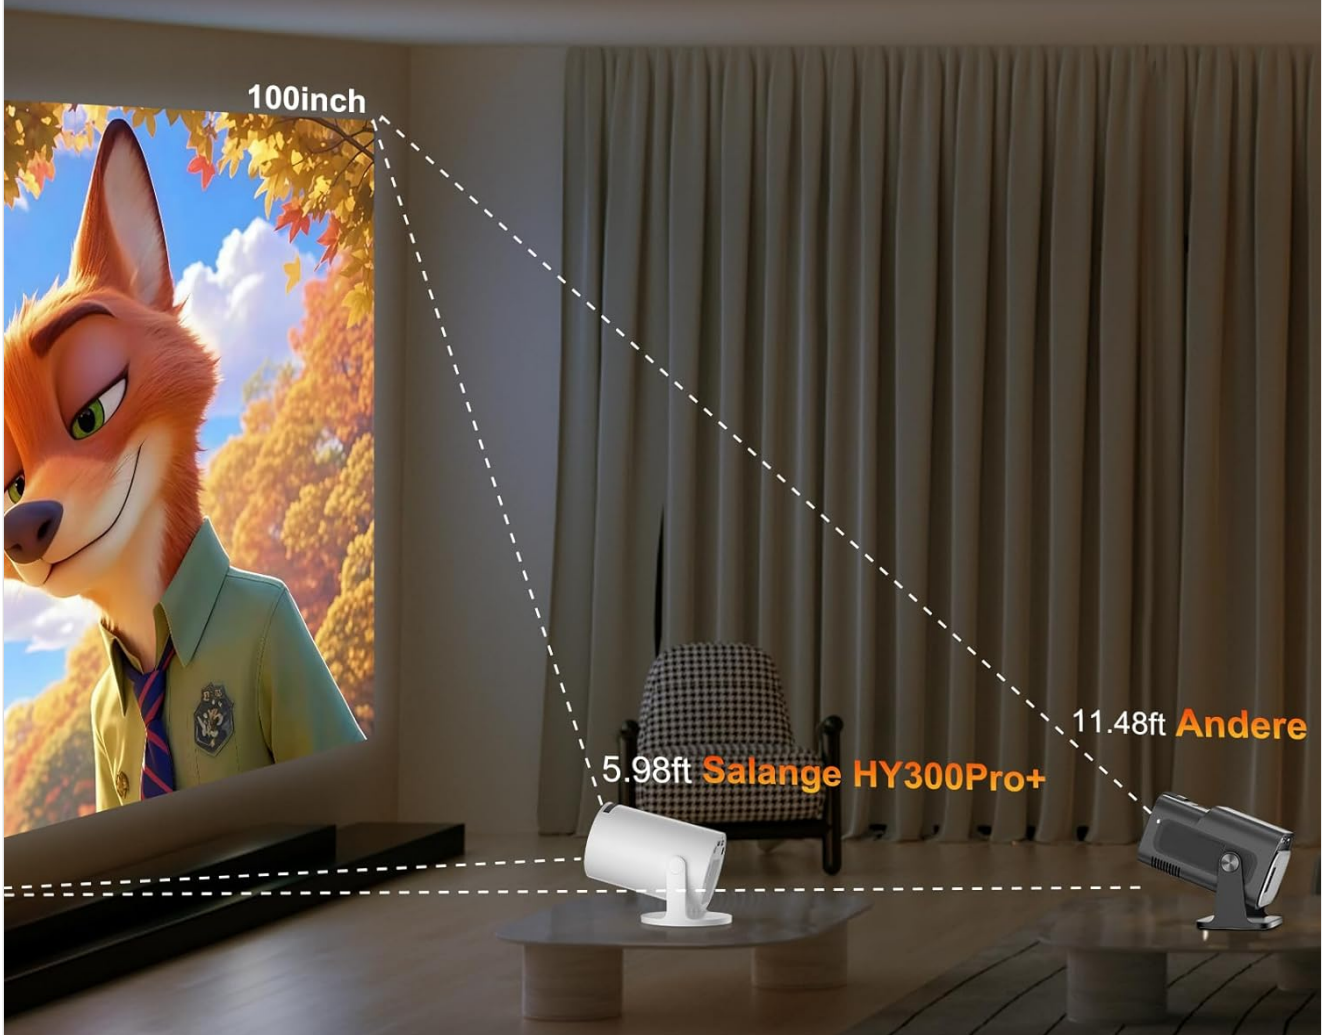


Image: Connectivity options for HDMI, Audio, and USB devices.

6. Audio Output

The projector has built-in speakers. For enhanced audio, connect external speakers or headphones via Bluetooth or the 3.5mm audio jack.

MAINTENANCE

1. Cleaning the Lens

Use a soft, lint-free cloth specifically designed for optical lenses to gently wipe the projector lens. Avoid using abrasive cleaners or excessive pressure, which can scratch the lens.

2. Cleaning the Exterior

Wipe the projector's exterior with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by a dry cloth. Do not use harsh chemicals or solvents.

3. Storage

When not in use for extended periods, store the projector in a cool, dry, and dust-free environment. Use the original packaging or a protective case to prevent damage.

TROUBLESHOOTING

- **No Power:** Ensure the power cord is securely connected to both the projector and the power outlet. Try a different outlet.
- **No Image:** Check if the projector is powered on. Verify the input source is correctly selected (e.g., HDMI 1, USB). Ensure the lens cap is removed.
- **Blurred Image:** Adjust the manual focus ring until the image is sharp. Check if the projector is too close or too far from the screen.
- **Image Distortion (Trapezoid):** The projector has automatic keystone correction. If manual adjustment is needed, check the display settings for keystone correction options.
- **No Sound:** Check the volume level on both the projector and the connected source device. Ensure external audio devices are correctly connected and selected as the output.
- **Wi-Fi/Bluetooth Connection Issues:** Ensure the projector is within range of your router or Bluetooth device. Restart the projector and your network devices. Re-pair Bluetooth devices.
- **Remote Control Not Responding:** Check the batteries in the remote control. Ensure there are no obstructions between the remote and the projector's IR receiver.

PRODUCT SPECIFICATIONS

Feature	Specification
Manufacturer	Salange
ASIN	B0G43FF84L
Country of Origin	China
Recommended Uses	Business, Home Cinema, Gaming, Education
Special Features	Wi-Fi Compatible, Digital Keystone Correction, Lightweight, Portable
Connectivity Technology	Bluetooth, HDMI, USB, Wi-Fi
Native Display Resolution	1280 x 720 pixels
Maximum Display Resolution	3840 x 2160 pixels (4K supported)
Display Type	LCD
Product Dimensions (L x W x H)	10.1 x 10.1 x 17 cm
Form Factor	Portable
Mounting Type	Table Mount

Feature	Specification
Brightness	8000 Lumens
Color	White
Compatible Devices	Game Console, Speaker, Laptop, Smartphone, Television
Contrast Ratio	1500:1
Maximum Image Size	150 Inches
Minimum Image Size	30 Inches
Video Encoding	H.265
Image Enhancement Technology	HDR
Box Contents	1 Projector, 1 Power Cord, 1 Remote Control, 1 User Manual

WARRANTY INFORMATION

The Salange 2026 Mini Projector comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For technical assistance, troubleshooting, or any questions regarding your Salange 2026 Mini Projector, please contact Salange customer support. Contact details can typically be found on the official Salange website or in the warranty information provided with your product.