

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Electactic](#) /

› [Electactic Oil Radiator Heater HD9117E-J7QL User Manual](#)

## Electactic HD9117E-J7QL

# Electactic Oil Radiator Heater HD9117E-J7QL User Manual

Model: HD9117E-J7QL

## IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this heater and save them for future reference. Failure to follow these instructions may result in fire, electric shock, injury to persons, or property damage.

- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handles when moving this heater.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and keep them away from the sides and rear.
- Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Discard heater or return to authorized service facility for examination and/or repair.
- Do not use outdoors.
- To disconnect heater, turn controls to OFF, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- This heater has an automatic tip-over switch that shuts off the heater if it is accidentally tipped over. It also features overheat protection, which automatically turns off the heater if it gets too hot.
- The heater is ETL-certified for safety.

# Efficient & Safty



Image: The Electactic Oil Radiator Heater highlighting its built-in tip-over and overheat protection mechanisms for enhanced safety.

## PRODUCT OVERVIEW

The Electactic Oil Radiator Heater HD9117E-J7QL is designed to provide efficient and quiet warmth for indoor spaces. It features multiple heat settings, an ECO mode, a 24-hour timer, and advanced safety features.

# Silent Embrace. Even Warmth, Everywhere.



**250ft<sup>2</sup>**

Max Coverage



**1500W**

Max Power

Image: The Electactic Oil Radiator Heater, demonstrating its compact design and suitability for indoor use.

## Components:

- Radiator Fins: Oil-filled elements for heat distribution.
- Control Panel: Digital display and touch buttons for settings.
- Remote Control: For convenient operation from a distance.
- Caster Wheels: For easy mobility.
- Heat-Insulated Handle: For safe movement of the unit.
- Power Cord and Plug: For electrical connection.



Image: Detail of the heater's heat-insulated handle and 360-degree rotating caster wheels, illustrating ease of movement.

## SETUP INSTRUCTIONS

- 1. Unpack the Heater:** Carefully remove the heater from its packaging. Retain packaging for off-season storage.
- 2. Inspect for Damage:** Check the heater for any signs of damage during shipping. Do not operate if damaged.
- 3. Position the Heater:** Place the heater on a firm, level surface. Ensure there is at least 3 feet (0.9 m) of clear space around the heater from walls, furniture, and other objects. Do not place it directly under a power outlet.
- 4. Power Connection:** Ensure the heater is unplugged before positioning. Plug the power cord directly into a 120V AC, 60Hz wall outlet. Do not use extension cords or power strips.

## OPERATING INSTRUCTIONS

### Control Panel and Remote Control:

The heater can be operated using the touch controls on the unit's control panel or with the included remote

control. The remote control offers the same functions as the control panel.

### Power On/Off:

- Press the **Power** button (symbol: circle with vertical line) to turn the heater ON or OFF.

### Heat Settings:

The heater offers three power settings for customized comfort:

- **H1 (600W)**: Low power for energy-saving and sustained warmth.
- **H2 (900W)**: Medium power for moderate heating.
- **H3 (1500W)**: High power for rapid heating of larger rooms.

Press the **Mode** button (symbol: three horizontal lines) repeatedly to cycle through H1, H2, H3, and ECO modes.



Image: Visual representation of the three heating modes (H1, H2, H3) and the adjustable temperature range from 41°F to 95°F.

### Smart ECO Mode:

In ECO mode, the heater automatically adjusts its power output (600W, 900W, or 1500W) to maintain your desired temperature, optimizing energy consumption. To activate, press the **Mode** button until "ECO" is

displayed.

## Temperature Control:

The desired temperature can be set between 41°F (5°C) and 95°F (35°C).

- Press the "+" button to increase the target temperature.
- Press the "-" button to decrease the target temperature.
- The display will show the set temperature for a few seconds, then revert to showing the current room temperature.

## 24-Hour Timer:

The timer allows you to program the heater to turn ON or OFF automatically after a set period (1 to 24 hours).

1. Press the **Timer** button (symbol: clock).
2. Use the "+" or "-" buttons to set the desired number of hours.
3. The timer will activate after a few seconds of inactivity, and the display will show a clock icon.

## Child Lock Function:

To prevent accidental changes to settings:

- Press and hold the **Mode** button for 3 seconds to activate or deactivate the child lock. A lock icon will appear on the display when activated.

## Mute Function:

To silence button press sounds:

- Press and hold the **Timer** button for 3 seconds to activate or deactivate the mute function.

## MAINTENANCE

---

Proper maintenance ensures the longevity and efficient operation of your heater.

### Cleaning:

1. **Always unplug the heater** and allow it to cool completely before cleaning.
2. Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
3. Do not immerse the heater in water or allow water to drip into the interior of the heater.
4. Clean the air intake and exhaust openings regularly with a vacuum cleaner attachment to remove dust and lint.

### Storage:

- When not in use, store the heater in a cool, dry location.
- It is recommended to store the heater in its original packaging to protect it from dust and damage.

## TROUBLESHOOTING

---

If your heater is not operating correctly, please refer to the following common issues and solutions:

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Heater does not turn on.	No power to the unit; Power button not pressed; Tip-over switch activated; Overheat protection activated.	Ensure the power cord is securely plugged into a working outlet. Press the Power button. Place the heater upright on a flat surface. Unplug the heater, wait 30 minutes for it to cool down, then plug it back in.
Heater is on but not heating.	Temperature setting is too low; ECO mode is active and room temperature is at or above target.	Increase the target temperature. If in ECO mode, the heater will only activate when the room temperature drops below the set temperature.
Heater makes unusual noises.	Normal expansion/contraction of metal parts; Loose components.	Minor clicking sounds are normal as the heater heats up and cools down. If noises are loud or persistent, discontinue use and contact customer support.

If the problem persists after trying these solutions, please contact customer support.

## SPECIFICATIONS

<b>Brand:</b>	Electactic
<b>Model Number:</b>	HD9117E-J7QL
<b>ASIN:</b>	B0G43HS34L
<b>Power Source:</b>	AC (120V, 60Hz)
<b>Heating Method:</b>	Radiant (Oil-filled)
<b>Heat Settings:</b>	600W, 900W, 1500W
<b>Temperature Range:</b>	41°F - 95°F (5°C - 35°C)
<b>Timer:</b>	24-hour programmable
<b>Product Dimensions (D x W x H):</b>	10.51" x 8.86" x 22.24"
<b>Item Weight:</b>	18.32 pounds
<b>Special Features:</b>	Adjustable Temperature, ECO Mode, Remote Control, Child Lock, Mute Function, Tip-Over Protection, Overheat Protection, ETL-certified.



Image: Dimensions of the Electactic Oil Radiator Heater, showing its height, width, and depth.

## WARRANTY AND CUSTOMER SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official Electactic website. If you have any questions, require technical assistance, or need to report an issue, please contact Electactic customer support.

Please have your model number (HD9117E-J7QL) and purchase date ready when contacting support.