

[Manuals.plus](#) /

› [AGXOV](#) /

› AGXOV D28 128GB MP3 Player with Bluetooth 5.3 User Manual

AGXOV D28

AGXOV D28 128GB MP3 Player with Bluetooth 5.3 User Manual

Model: D28 | Brand: AGXOV

1. INTRODUCTION

This manual provides detailed instructions for the AGXOV D28 128GB MP3 Player. Please read this manual thoroughly before using the device to ensure proper operation and to maximize its features. This device is designed for portable audio playback, recording, and other multimedia functions.

Compact Design Perfect for Sports



Image 1.1: The AGXOV D28 MP3 Player showcasing its compact and portable design, fitting easily into a pocket. This illustrates the device's suitability for on-the-go use.

2. SAFETY INFORMATION

To prevent damage to the device or injury to yourself or others, please observe the following safety precautions:

- Do not expose the device to extreme temperatures, direct sunlight, or high humidity.

- Avoid dropping or subjecting the device to strong impacts.
- Do not attempt to disassemble or modify the device. This will void the warranty.
- Keep the device away from water and other liquids.
- Use only the provided charging cable and adapter.
- Listen at moderate volume levels to prevent hearing damage.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- AGXOV D28 MP3 Player
- USB Charging/Data Cable
- Wired Earphones
- User Manual (this document)



Image 3.1: The AGXOV D28 MP3 Player shown with its included wired earphones and a microSD card, illustrating the complete package contents.

4. DEVICE OVERVIEW

Familiarize yourself with the physical components and controls of your AGXOV D28 MP3 Player.



Image 4.1: A detailed diagram of the AGXOV D28 MP3 Player, highlighting its touchscreen interface and physical buttons for navigation

Controls:

- **Touchscreen:** For navigating menus and selecting options.
- **Back Button:** Returns to the previous screen or menu.
- **Play/Pause Button:** Starts or pauses playback.
- **Previous Button:** Skips to the previous track or navigates left in menus.
- **Next Button:** Skips to the next track or navigates right in menus.
- **Volume/Scroll Knob:** Adjusts volume during playback or scrolls through lists.
- **Power Button:** Press and hold to power on/off. Short press to turn screen on/off.
- **USB Port:** For charging and data transfer.
- **Headphone Jack:** For connecting wired earphones.
- **MicroSD Card Slot:** For expandable storage.

5. SETUP

5.1 Charging the Device

Before first use, fully charge the MP3 player. Connect the USB charging cable to the device's USB port and the other end to a USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging status.

5.2 Powering On/Off

- **To Power On:** Press and hold the Power button until the screen lights up.
- **To Power Off:** Press and hold the Power button until a power-off prompt appears, then confirm.
- **Screen On/Off:** A short press of the Power button will turn the screen on or off without powering down the device.

5.3 Inserting/Removing MicroSD Card

The device has 128GB of built-in storage and supports MicroSD card expansion up to 512GB.



Image 5.1: The AGXOV D28 MP3 Player connected via USB, with an overlay indicating 128GB built-in storage and expandable storage up to 512GB via MicroSD card.

- **To Insert:** Gently push the MicroSD card into the card slot until it clicks into place. Ensure the card is oriented correctly.
- **To Remove:** Gently push the MicroSD card inward until it clicks, then release. The card will spring out.

5.4 Initial Language Setup

Upon first power-on, you may be prompted to select your preferred language. Follow the on-screen instructions.

6. OPERATING INSTRUCTIONS



Image 6.1: The main menu screen of the AGXOV D28 MP3 Player, showing icons for Music, Video, Pictures, Radio, Bluetooth, Recorder, Ebook, Folder, and Settings, along with battery life and playback time estimates.

6.1 Basic Navigation

Use the touchscreen to tap on icons and navigate menus. The physical buttons provide quick access to common functions as described in Section 4.

6.2 Music Playback

- **Transferring Music:** Connect the device to a computer using the USB cable. The device will appear as a removable disk. Drag and drop music files into the 'Music' folder.
- **Playing Music:** From the main menu, tap 'Music'. Browse by artist, album, genre, or folder. Tap a song to begin playback.
- **Supported Formats:** MP3, WMA, APE, WAV, AAC.

HiFi Sound Quality

Supported music formats: MP3, WMA, APE, WAV, AAC



Image 6.2: A person enjoying music with headphones, illustrating the HiFi sound quality of the AGXOV D28 MP3 Player. Supported music formats are listed as MP3, WMA, APE, WAV, AAC.

6.3 FM Radio

From the main menu, tap 'Radio'. Ensure earphones are connected as they act as the antenna. Scan for stations or manually tune to a frequency.

6.4 Voice Recorder

From the main menu, tap 'Recorder'. Select 'Start Recording' to begin. Recordings are saved in the device's memory.

6.5 E-Book Reader

From the main menu, tap 'Ebook'. Transfer compatible text files (e.g., TXT) to the 'Ebook' folder on the device. Select a file to read.

6.6 Video Player

From the main menu, tap 'Video'. Transfer compatible video files to the 'Video' folder. Note that video playback may require specific formats and resolutions for optimal performance.

6.7 Image Viewer

From the main menu, tap 'Pictures'. Transfer compatible image files to the 'Pictures' folder. Browse and view images.

6.8 Other Functions

The device includes additional tools accessible from the main menu or settings:

- **Stopwatch:** For timing events.
- **Alarm Clock:** Set alarms for reminders.
- **Calendar:** View dates and manage schedules.
- **Step Counter:** Tracks steps taken.

Wide Range of Functions



Image 6.3: The AGXOV D28 MP3 Player displaying its main interface with multiple application icons, emphasizing the wide range of functions available on the device.

6.9 Settings

From the main menu, tap 'Settings' to customize various aspects of the device, including:

- Language
- Display brightness and timeout

- Sound equalizer and volume limits
- Date and time
- Bluetooth settings
- System information and reset options

7. CONNECTIVITY

7.1 Bluetooth Pairing

The AGXOV D28 features Bluetooth 5.3 for wireless audio connections.

Bluetooth 5.4

Strong anti-interference, compatible with all Bluetooth headphones/speakers



Image 7.1: The AGXOV D28 MP3 Player screen showing Bluetooth 5.4 connectivity, with wireless earbuds positioned in front, illustrating wireless audio pairing.

1. Ensure the MP3 player's Bluetooth is enabled in 'Settings'.
2. Place your Bluetooth headphones or speaker in pairing mode.
3. On the MP3 player, go to 'Bluetooth' in the main menu or 'Settings'.
4. Select 'Search for devices' and choose your device from the list.
5. Confirm pairing if prompted.

7.2 USB Connection

Connect the device to a computer using the provided USB cable for data transfer (music, photos, e-books) or charging.

8. MAINTENANCE

8.1 Cleaning

Wipe the device with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.

8.2 Storage

Store the device in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.

8.3 Battery Care

To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in active use.

9. TROUBLESHOOTING

If you encounter issues with your AGXOV D28 MP3 Player, refer to the following common problems and solutions:

Problem	Solution
Device does not power on.	Ensure the device is fully charged. If the battery is completely drained, it may take a few minutes of charging before it can power on.
Cannot connect to Bluetooth device.	Ensure both the MP3 player and the Bluetooth device are in pairing mode and within range. Try restarting both devices. Check if the Bluetooth device is already connected to another device.
No sound from earphones.	Check if earphones are properly plugged in. Ensure volume is not muted or set too low. Test with another pair of earphones if possible.
Files not appearing on device.	Ensure files are transferred to the correct folders (e.g., 'Music' for music files). Verify file formats are supported. Disconnect and reconnect the USB cable.
Device freezes or becomes unresponsive.	Press and hold the Power button for approximately 10-15 seconds to force a restart.

10. SPECIFICATIONS

- **Model:** D28
- **Brand:** AGXOV
- **Internal Storage:** 128GB
- **Expandable Storage:** Up to 512GB (MicroSD/TF card)
- **Bluetooth Version:** 5.3
- **Display Size:** 1.77 Inches
- **Battery Type:** Lithium (Rechargeable)
- **Special Features:** FM Radio, Voice Recorder, E-Book Reader, Built-in HD Speaker, Stopwatch, Alarm Clock, Calendar, Step Counter

- **Supported Audio Formats:** MP3, WMA, APE, WAV, AAC

11. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the documentation provided at the time of purchase or contact your retailer. For technical support or further assistance, please refer to the contact information provided by your seller or visit the AGXOV official support channels if available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question