

ZAQE X20

ZAQE X20 128GB Clip MP3 Player User Manual

Model: X20

1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your ZAQE X20 128GB Clip MP3 Player. Please read this manual thoroughly before using the device to ensure proper function and to maximize your user experience. Keep this manual for future reference.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x ZAQE X20 128GB MP3 Player
- 1 x USB Type-C Charging Cable
- 1 x Wired Earphones
- 1 x User Manual (this document)

Packaging item:

Clip player×1

Charging cable×1

Headphones×1

User Manual x1



Image: Contents of the ZAQE X20 MP3 Player package.

3. DEVICE OVERVIEW

The ZAQE X20 is a compact and lightweight MP3 player designed for portability and ease of use. It features a 2.0-inch color display and intuitive physical buttons.

128GB of Extra Internal Storage

Not only comes with 128GB of memory,
But also supports 64GB-128GB of expandable memory!



Image: Front view of the ZAQE X20 MP3 Player, highlighting the screen and navigation buttons.

Multi-functional Sports MP3 player



Image: Back view of the ZAQE X20 MP3 Player, illustrating the integrated clip for attaching to clothing.

4. SETUP

4.1 Charging the Device

Before first use, fully charge the MP3 player. Connect the provided USB Type-C cable to the player's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging status.

4.2 Inserting a MicroSD Card

The ZAQE X20 comes with 128GB of internal storage and supports expandable memory up to 512GB via a microSD card (not included). Locate the microSD card slot on the side of the player. Gently insert the card until it clicks into place. To remove, push the card in slightly until it springs out.

Multiple Playback Modes

There are four playback modes for you to choose from.



Sequential play



Repeat all



Shuffle



Single repetition

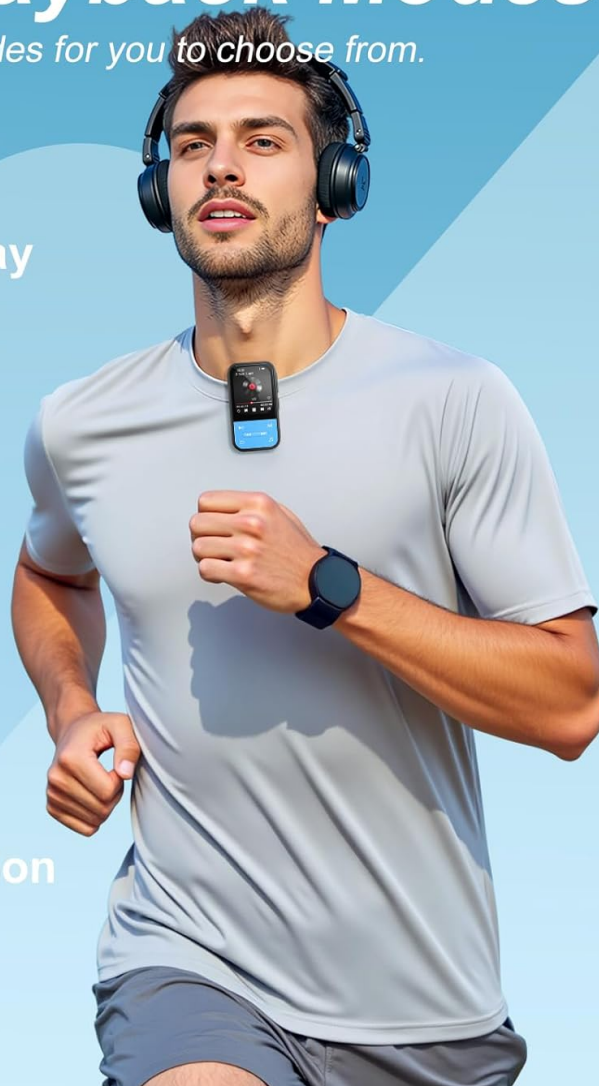 


Image: Illustration of the ZAQE X20 MP3 Player's 128GB internal storage and microSD card expansion capability.

4.3 Transferring Files

Connect the MP3 player to your computer using the USB Type-C cable. The player will appear as a removable disk drive. You can drag and drop music, video, and e-book files directly into the appropriate folders on the player or the inserted microSD card.

4.4 Connecting Headphones

Wired Headphones: Plug the included wired earphones or any standard 3.5mm audio jack headphones into the player's headphone port.

Bluetooth Headphones/Speakers:

1. Ensure your Bluetooth headphones or speaker are in pairing mode.
2. On the MP3 player, navigate to the Bluetooth menu.
3. Select 'Search for devices' and choose your device from the list to pair.

Note: The ZAQE X20 MP3 player cannot pair with smartphones or tablets via Bluetooth. It is designed for audio output to Bluetooth headphones or speakers only.

Bluetooth 5.3

ZAQE

*Faster connection, more stable playback,
greater compatibility*

* 5.3

New upgrade



Image: The ZAQE X20 MP3 Player showcasing its Bluetooth 5.3 capability with various wireless audio devices.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- **Power On:** Press and hold the power button until the screen lights up.
- **Power Off:** Press and hold the power button until the 'Power Off' option appears, then confirm.

5.2 Navigation

Use the physical buttons below the screen to navigate through menus and control playback. The central button typically acts as 'Enter' or 'Play/Pause', while surrounding buttons control direction, volume, and menu access.

5.3 Music Playback

The player supports MP3, OGG, APE, FLAC, WAV, AAC, and ACELP audio formats. Navigate to the 'Music' icon on the main menu to access your audio files.

Playback Modes:

- **Sequential Play:** Plays tracks in order.

- **Repeat All:** Repeats the entire playlist.
- **Shuffle:** Plays tracks in random order.
- **Single Repetition:** Repeats the current track.

Quickly open the music interface

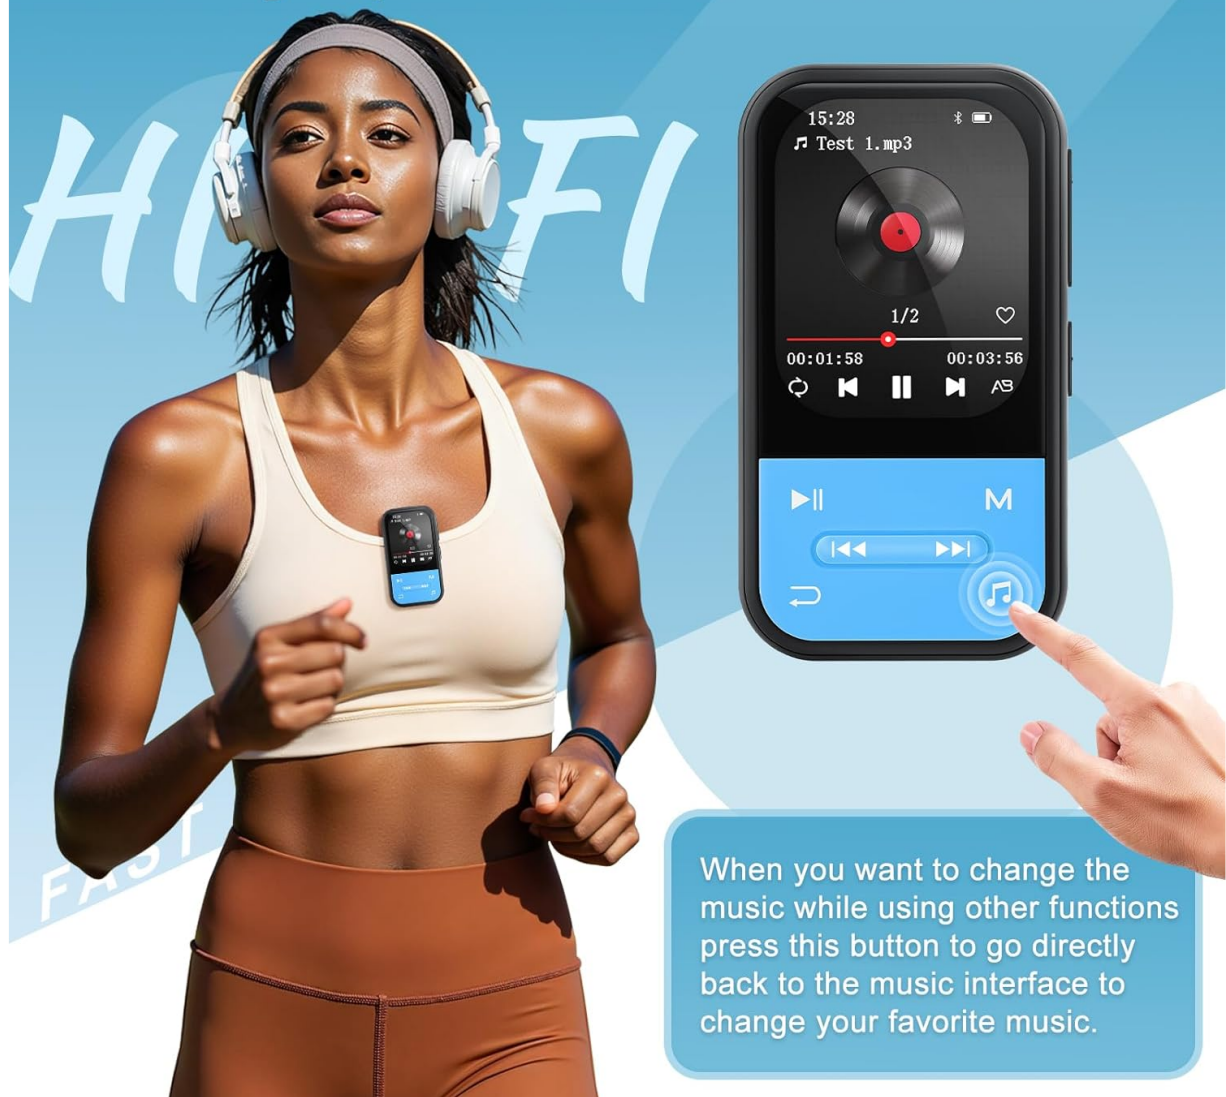 


Image: The ZAQE X20 MP3 Player displaying its various music playback modes.

5.4 FM Radio

To use the FM radio function, ensure wired headphones are plugged into the 3.5mm jack, as they serve as the antenna. Navigate to the 'FM Radio' icon, then use the menu options to scan for stations or manually tune.

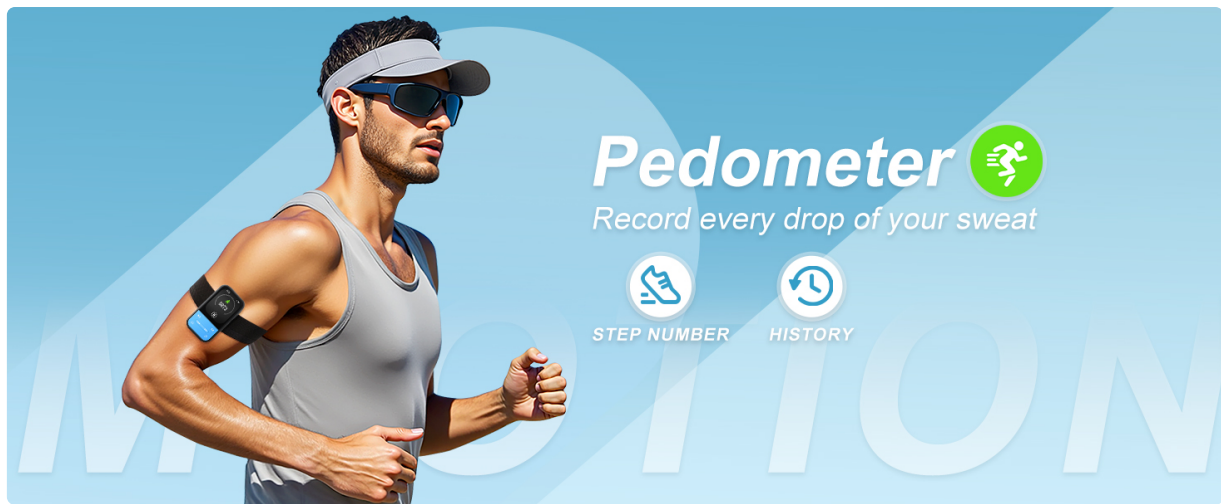 


Image: A user enjoying the FM Radio feature of the ZAQE X20 MP3 Player, emphasizing the need for wired headphones as an antenna.

5.5 Voice Recorder

Select the 'Recording' icon to access the voice recorder. You can record audio in WAV or MP3 format. Use the on-screen controls to start, pause, and save recordings.

5.6 E-Book Reader

The player supports e-book files. Transfer your e-book files to the player and select the 'E-Book' icon to read. Use the navigation buttons to turn pages.

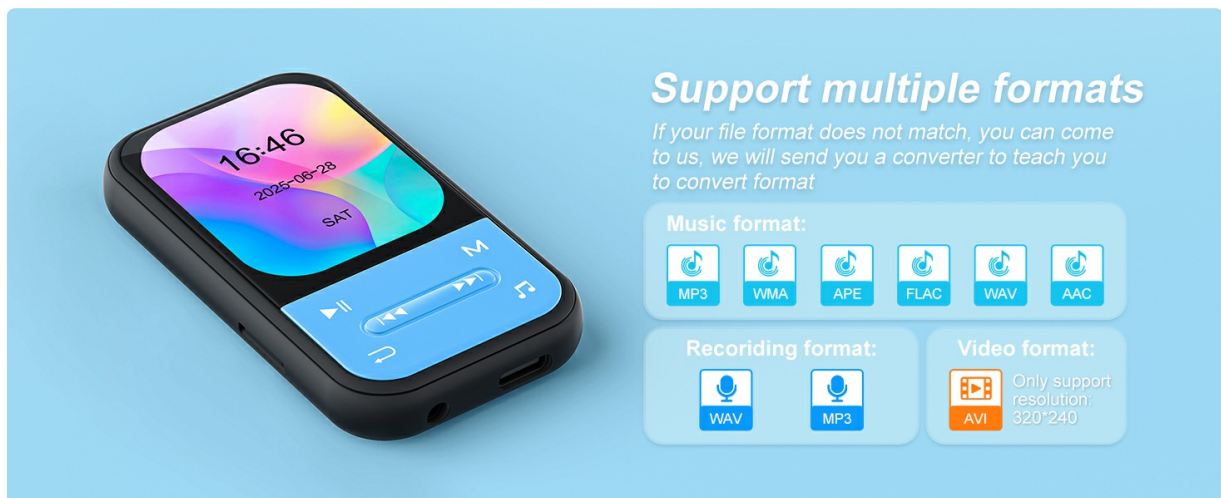 


Image: The ZAQE X20 MP3 Player functioning as an e-book reader, showing text on its display.

5.7 Pedometer

Activate the 'Pedometer' function to track your steps during physical activity. The device can record your step count and history.



Image: A user utilizing the pedometer feature of the ZAQE X20 MP3 Player during a run.

5.8 Useful Tools

The ZAQE X20 includes several utility tools:

- **Alarm Clock:** Set alarms for reminders.
- **Calendar:** View the current date.
- **Stopwatch:** Measure time intervals.



Image: The ZAQE X20 MP3 Player's 'Tools' menu, showing the Alarm Clock, Calendar, and Stopwatch functions.

5.9 Video Playback

The player supports AVI video files with a resolution of 320x240. Transfer compatible video files to the player and select the 'Video' icon to play them.

6. MAINTENANCE

6.1 Cleaning

Wipe the device with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the screen or casing.

6.2 Battery Care

- Avoid fully discharging the battery frequently.

- Do not expose the device to extreme temperatures.
- If storing the device for an extended period, charge it to about 50% to prolong battery life.

6.3 Storage

Store the MP3 player in a cool, dry place away from direct sunlight and moisture when not in use.

7. TROUBLESHOOTING

- **Device does not power on:** Ensure the battery is charged. Connect to a power source and try again.
- **No sound:** Check if headphones are properly connected (wired or Bluetooth). Adjust volume levels. Remember, the player does not have built-in speakers.
- **Cannot transfer files:** Ensure the USB cable is securely connected to both the player and the computer. Try a different USB port or cable.
- **Bluetooth pairing issues:** Ensure the target device is in pairing mode and within range. Restart both devices and try pairing again.
- **FM Radio not working:** Ensure wired headphones are plugged in, as they function as the antenna. Try rescanning for stations.
- **Screen frozen or unresponsive:** Press and hold the power button for about 10-15 seconds to force a restart.

8. SPECIFICATIONS

Feature	Specification
Brand	ZAQE
Model	X20
Internal Memory	128 GB
Expandable Storage	Up to 512 GB (MicroSD card)
Connectivity	Bluetooth 5.3, USB Type-C
Screen Size	2.0 Inches
Supported Audio Formats	MP3, OGG, APE, FLAC, WAV, AAC, ACELP
Supported Video Formats	AVI (320x240 resolution)
Supported Recording Formats	WAV, MP3
Battery Life	Up to 40 Hours
Dimensions	Approx. 2.99 x 1.67 x 0.63 inches
Weight	Approx. 35g

9. WARRANTY AND SUPPORT

9.1 Warranty Information

Please refer to the product packaging or the official ZAQE website for specific warranty terms and conditions applicable to your device. Retain your proof of purchase for warranty claims.

9.2 Customer Support

For technical assistance, troubleshooting, or other inquiries, please visit the official ZAQE store on Amazon: [ZAQE Store](#).