

[Manuals.plus](#) /

› [ASHATA](#) /

› ASHATA Silent Non-Ticking Alarm Clock (Model ASHATA1gtyepdkxi-11) User Manual

ASHATA ASHATA1gtyepdkxi-11

ASHATA Silent Non-Ticking Alarm Clock User Manual

Model: ASHATA1gtyepdkxi-11

INTRODUCTION

This manual provides instructions for the setup, operation, and maintenance of your ASHATA Silent Non-Ticking Alarm Clock. Please read this manual thoroughly before using the product to ensure proper function and longevity.



Image: Front view of the ASHATA Silent Non-Ticking Alarm Clock. The clock features a white spherical body with a clear face, gold hands, and a gold base.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x ASHATA Desk Alarm Clock
- 1 x AA Battery
- 1 x Instruction Manual (this document)

SPECIFICATIONS

Brand	ASHATA
Model Number	ASHATA1gtyepdkxi-11

Dimensions (L x W x H)	12 x 11 x 8.3 cm (4.72 x 4.33 x 3.27 inches)
Power Source	1 x AA Battery
Display Type	Analog
Special Features	Silent Non-Ticking Movement, Soft Night Light

SETUP

1. **Battery Installation:**

Locate the battery compartment on the back of the clock. Open the cover and insert one AA battery, ensuring the polarity (+/-) matches the indicators inside the compartment. Close the battery cover securely.



Image: Rear view of the clock, highlighting the battery compartment.

2. **Identify Controls:**

Familiarize yourself with the control knobs and buttons located on the back of the clock. Refer to the diagram below:

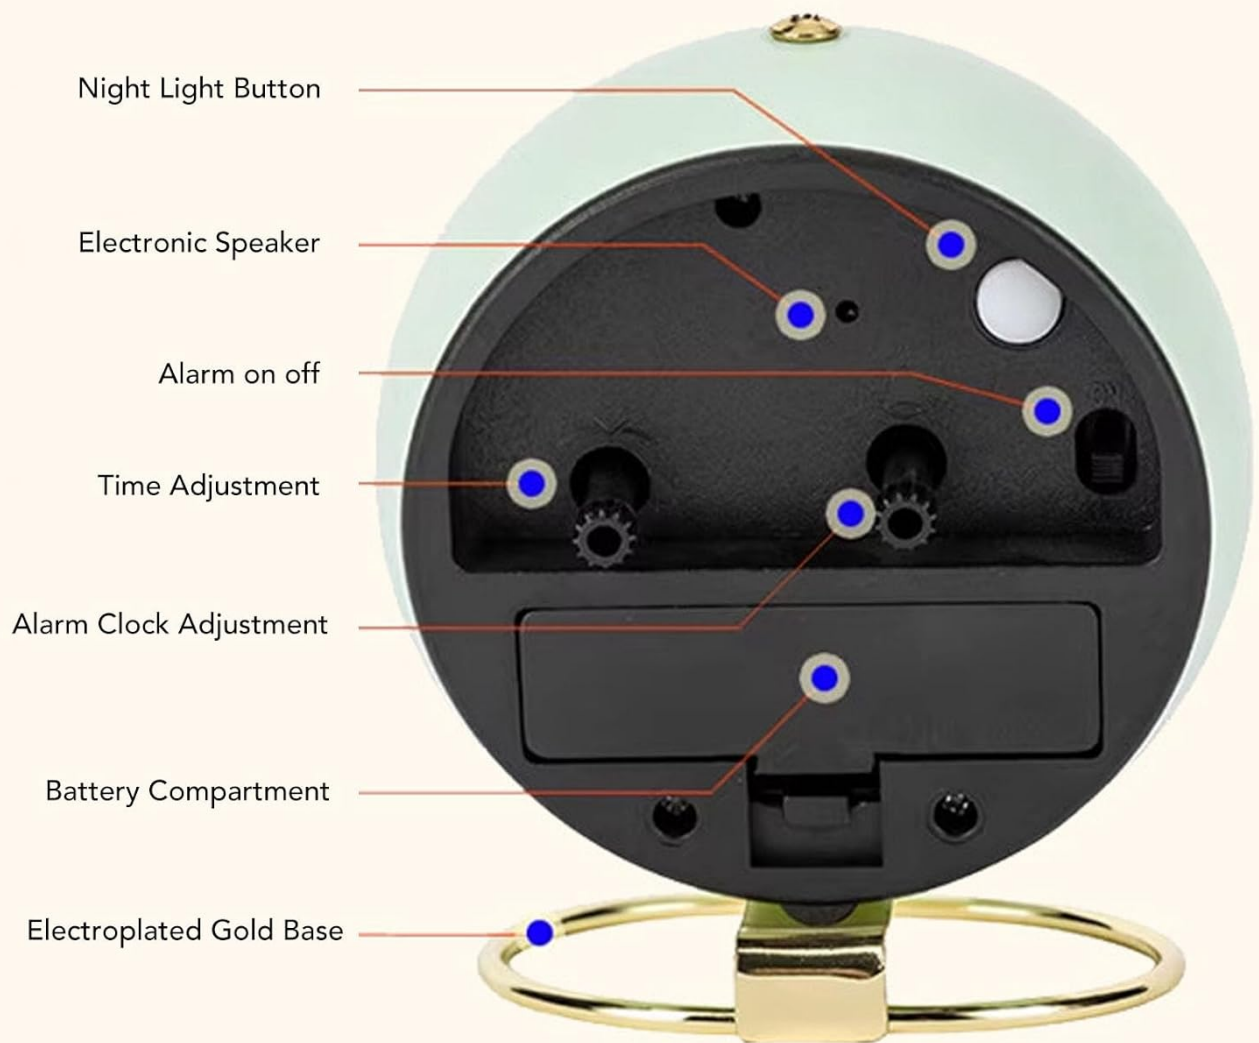


Image: Detailed diagram of the clock's back panel, labeling the Night Light Button, Electronic Speaker, Alarm On/Off switch, Time Adjustment knob, Alarm Clock Adjustment knob, Battery Compartment, and Electroplated Gold Base.

OPERATING INSTRUCTIONS

1. Setting the Current Time:

Rotate the **Time Adjustment** knob (refer to the diagram in the Setup section) clockwise or counter-clockwise until the hour and minute hands indicate the correct current time.

2. Setting the Alarm Time:

Rotate the **Alarm Clock Adjustment** knob (refer to the diagram) clockwise or counter-clockwise until the alarm hand points to your desired alarm time.

3. Activating/Deactivating the Alarm:

Slide the **Alarm On/Off** switch (refer to the diagram) to the "ON" position to activate the alarm. Slide it to the "OFF" position to deactivate the alarm.

4. Using the Night Light:

Press and hold the **Night Light Button** (refer to the diagram) to illuminate the clock face with a soft glow. Release

the button to turn off the light.

MAINTENANCE

• **Cleaning:**

Wipe the clock's surface with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these may damage the finish.

• **Battery Replacement:**

When the clock's movement slows down or the alarm sound weakens, it is time to replace the AA battery. Follow the battery installation steps outlined in the Setup section.

• **Storage:**

If storing the clock for an extended period, remove the battery to prevent leakage and potential damage to the device.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock not working / Hands not moving	Dead or incorrectly installed battery.	Replace the AA battery, ensuring correct polarity.
Alarm not sounding	Alarm switch is OFF; alarm time not set correctly; low battery.	Ensure the Alarm On/Off switch is ON. Verify the alarm time is set. Replace the battery if needed.
Night light not working	Low battery.	Replace the AA battery.

WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For specific warranty details, please refer to the documentation provided at the time of purchase or contact ASHATA customer support.
For technical support or further assistance, please contact your retailer or the ASHATA customer service department.

© 2024 ASHATA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0G492QDG3>

More documents and user manuals: <https://manuals.plus/>