

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Blaupunkt](#) /

› [Blaupunkt Smart TV 32" HD LED 32HCT6000S User Manual](#)

Blaupunkt 32HCT6000S

Blaupunkt Smart TV 32" HD LED User Manual - Model 32HCT6000S

Comprehensive instructions for setup, operation, and maintenance.

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all safety and operating instructions carefully before using this television. Keep these instructions for future reference.

- **Power:** Ensure the TV is connected to a power supply with the correct voltage. Unplug the TV during lightning storms or when unused for long periods.
- **Ventilation:** Do not block ventilation openings. Maintain adequate space around the TV for proper airflow.
- **Water and Moisture:** Do not expose the TV to rain or moisture. Do not place objects filled with liquids, such as vases, on the TV.
- **Heat:** Keep the TV away from heat sources like radiators, heat registers, stoves, or other heat-producing appliances.
- **Cleaning:** Unplug the TV before cleaning. Use a soft, dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Placement:** Place the TV on a stable, flat surface. Avoid placing it in direct sunlight or near strong magnetic fields.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any items are missing or damaged, contact your retailer.

- Blaupunkt Smart TV 32" HD LED (Model 32HCT6000S)
- Remote Control
- Power Cable

- Stand (2 pieces)
- User Manual (this document)



Image 2.1: Blaupunkt 32HCT6000S Smart TV with stand. The package includes the TV, remote control, power cable, and two stand feet.

3. SETUP

3.1 Attaching the Stand

To attach the stand to your TV, follow these steps:

1. Carefully place the TV face-down on a soft, clean surface to prevent screen damage.
2. Align each stand foot with the corresponding screw holes on the bottom rear of the TV.
3. Secure each stand foot using the provided screws. Ensure they are tightened firmly.
4. Carefully lift the TV to its upright position on a stable surface.



Image 3.1: Rear view of the TV illustrating the stand attachment points. The stand feet slot into the designated areas and are secured with screws.

3.2 Wall Mounting (Optional)

The Blaupunkt 32HCT6000S TV is compatible with VESA wall mounts. The VESA mounting pattern for this model is not explicitly stated in the provided data, but typically for a 32-inch TV, it would be 100x100mm or 200x200mm. Consult your wall mount's instructions and ensure it is suitable for the TV's weight (4 kg).

- **Warning:** Wall mounting should be performed by qualified personnel using appropriate mounting hardware.
- Remove the stand feet before wall mounting.
- Ensure the wall can support the weight of the TV and the mount.

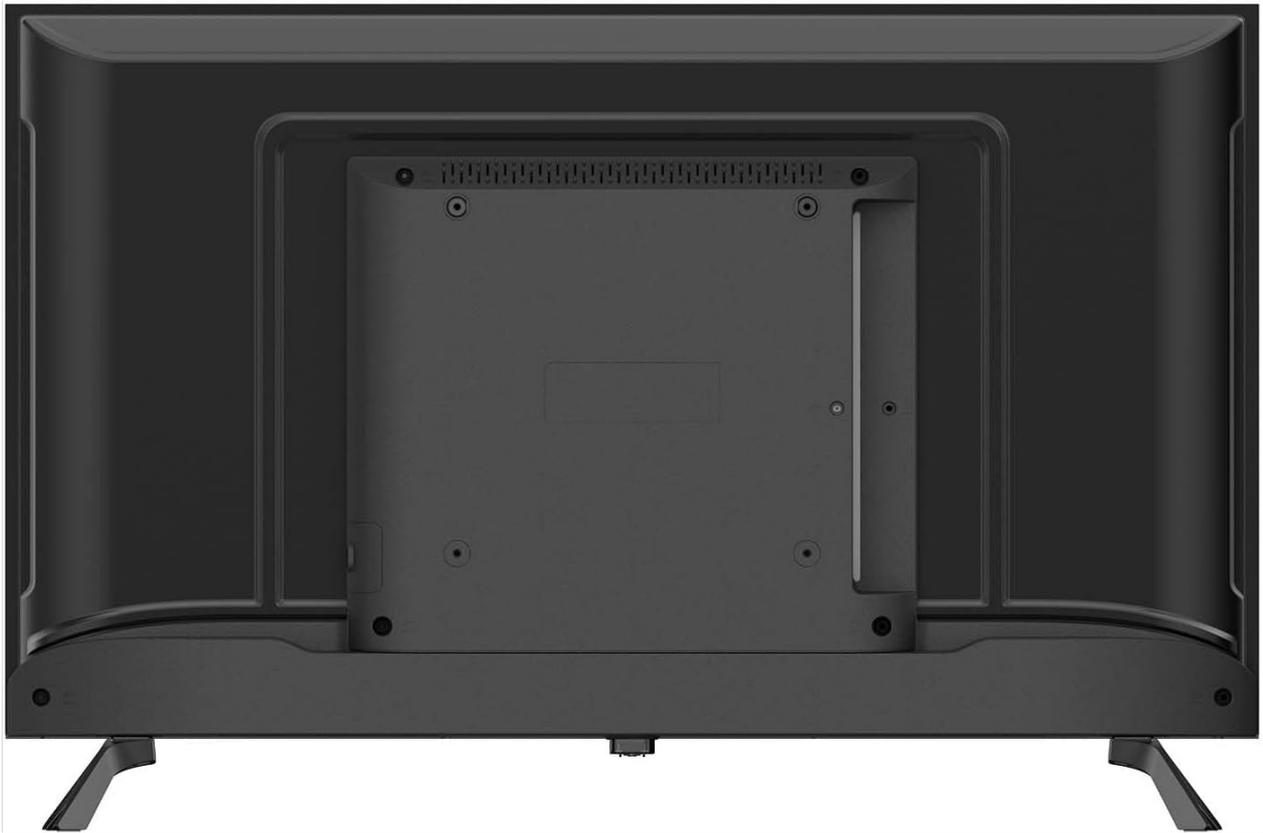


Image 3.2: Rear view of the TV, highlighting the VESA mounting screw holes for wall installation.

3.3 Connecting Peripherals

Connect your external devices to the TV using the available ports:

- **HDMI (x2):** For connecting high-definition devices such as Blu-ray players, game consoles, or set-top boxes.
- **USB 2.0 (x2):** For connecting USB storage devices to play media files or for software updates.
- **RJ-45 (Ethernet) (x1):** For a wired internet connection.
- **CI+ (Common Interface Plus) (x1):** For inserting a CAM (Conditional Access Module) and smart card to access encrypted digital TV services.
- **AV In (x1):** For connecting older devices using composite video and stereo audio cables.
- **Optical SPDIF Output (x1):** For connecting to an external audio system or soundbar for digital audio output.
- **Antenna Input (DVB-C/T/T2/S2):** For connecting an aerial or satellite dish for digital television reception.



Image 3.3: Side profile of the TV, displaying the various input and output ports for connecting external devices.

3.4 Power Connection

After connecting all desired peripherals, plug the power cable into the TV's power input, then plug the other end into a suitable wall outlet. The TV is designed for 240 Volt power supply.

4. INITIAL SETUP AND OPERATING

4.1 First Time Power On

When you power on the TV for the first time, a setup wizard will guide you through the initial configuration:

1. **Language Selection:** Choose your preferred language for the TV menu.
2. **Network Connection:** Connect to your home network via Wi-Fi (2.4G or 5G) or Ethernet. Follow the on-screen prompts to enter your Wi-Fi password if necessary.
3. **Channel Scan:** The TV will automatically scan for available digital channels (DVB-C/T/T2/S2). This may take several minutes.
4. **Time Zone and Date:** Set the correct time zone and date.

4.2 Basic Operation

- **Power On/Off:** Press the power button on the remote control or on the TV itself.
- **Channel Selection:** Use the 'CH+' / 'CH-' buttons to change channels or enter channel numbers directly.
- **Volume Control:** Use the 'VOL+' / 'VOL-' buttons to adjust the volume.
- **Input Source:** Press the 'SOURCE' button on the remote to select between HDMI, AV, TV, or other connected inputs.
- **Menu Navigation:** Use the arrow keys and 'OK' button on the remote to navigate through the TV's menus and settings.

4.3 Smart TV Features (Tizen OS 8.0)

Your Blaupunkt Smart TV runs on Tizen OS 8.0, providing access to a variety of smart features:

- **Applications:** Access pre-installed apps like Netflix and YouTube. You can download additional apps from the Tizen app store.
- **Screen Mirroring:** Share content from your compatible smartphone or tablet directly to the TV screen.
- **Bluetooth 5.1:** Connect Bluetooth-enabled devices such as headphones, soundbars, or game controllers wirelessly.
- **AirPlay:** AirPlay functionality will be available after November 2025, allowing seamless streaming from Apple devices.
- **EPG (Electronic Program Guide):** View program schedules for digital channels.
- **Parental Lock:** Set restrictions on channels or programs based on age ratings.
- **Sleep Timer:** Configure the TV to automatically turn off after a set period.

4.4 Remote Control

The included infrared remote control allows full control over your TV's functions. Ensure there are no obstructions between the remote and the TV's IR sensor. Insert two AAA batteries (not included) into the remote control, observing the correct polarity.

5. MAINTENANCE

5.1 Cleaning the TV

- **Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a specialized screen cleaner (do not spray directly onto the screen).
- **Casing:** Use a soft, dry cloth to wipe the TV casing. Avoid using abrasive cleaners, waxes, or solvents.
- Always unplug the TV from the power outlet before cleaning.

5.2 Storage

If you need to store the TV for an extended period:

- Unplug the TV and disconnect all cables.
- Remove the stand if possible and pack it separately.
- Store the TV in its original packaging in a dry, dust-free environment.
- Avoid extreme temperatures and humidity.

6. TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common problems and solutions:

Problem	Possible Solution
No power	Check if the power cable is securely plugged into the TV and the wall outlet. Try a different outlet.
No picture, but sound is present	Ensure the correct input source is selected. Check cable connections to external devices.
No sound, but picture is present	Check the volume level and mute status. Ensure external audio systems are correctly connected and powered on.
Remote control not working	Check and replace batteries. Ensure there are no obstructions between the remote and the TV's IR sensor.
Cannot connect to Wi-Fi	Ensure your Wi-Fi router is on and working. Re-enter the Wi-Fi password carefully. Try restarting both the TV and the router.
Poor picture quality	Check antenna/cable connections. Adjust picture settings (brightness, contrast, sharpness).

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

Detailed technical specifications for the Blaupunkt 32HCT6000S Smart TV:

Feature	Specification
Model	32HCT6000S

Feature	Specification
Screen Size	32 inches
Display Technology	HD LED
Resolution	1366 x 768 pixels (720p)
Aspect Ratio	16:9
Refresh Rate	60 Hz
Viewing Angle	178°
Panel Brightness	200–240 cd/m ²
Operating System	Tizen OS 8.0
Sound Output	2 x 6 W
Audio Technology	Dolby Digital Plus, NICAM/Stereo
Bluetooth	5.1 (and compatible older versions)
Wi-Fi	IEEE 802.11 ac/b/g/n, 2T2R, 2.4G + 5G
HDMI Ports	2
USB 2.0 Ports	2
Ethernet (RJ-45)	1
CI+ Slot	1
AV In	1
Optical SPDIF Output	Yes
Tuner	DVB-C / T / T2 / S2
Power Consumption (in use)	26 W
Energy Class	E
Stand-by Power	≤ 0.5 W
Dimensions with Stand (W x D x H)	720 x 198 x 478 mm
Dimensions without Stand (W x D x H)	720 x 82 x 424 mm
Net Weight	4.0 kg
Mounting Compatibility	VESA compatible (Mounting on table)

8. WARRANTY AND SUPPORT

Your Blaupunkt Smart TV is covered by a manufacturer's warranty. Please refer to the warranty card included in your package or visit the official Blaupunkt website for detailed warranty terms and conditions.

For technical support, troubleshooting assistance, or service inquiries, please contact Blaupunkt customer service. Contact information can typically be found on the manufacturer's website or in your warranty documentation.