

Simple Deluxe AH-KZG7018-7D5BK

Simple Deluxe 7.5 Qt 12-in-1 Digital Air Fryer Instruction Manual

Model: AH-KZG7018-7D5BK

INTRODUCTION

Thank you for choosing the Simple Deluxe 7.5 Qt 12-in-1 Digital Air Fryer. This appliance is designed to provide a healthier way to cook your favorite meals with less oil, utilizing rapid air circulation technology. With its generous capacity, intuitive digital controls, and versatile preset functions, preparing a wide variety of dishes is simple and efficient. This manual provides important safety information, setup instructions, operating procedures, maintenance tips, and troubleshooting guidance to ensure optimal performance and longevity of your air fryer. Please read it thoroughly before first use and keep it for future reference.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.

- Do not use appliance for other than intended use.
- Ensure the basket is properly inserted and locked before operating.
- Do not block any ventilation openings.

PRODUCT OVERVIEW

The Simple Deluxe 7.5 Qt Air Fryer features a sleek design with a digital touch control panel and a visible cooking window. Its compact footprint maximizes counter space while offering a large cooking capacity.



Front view of the Simple Deluxe 7.5 Qt Air Fryer, showcasing its digital display and basket handle.

Components:

- Main Unit with Digital Control Panel
- Removable Nonstick Basket
- Crisper Plate (Dishwasher Safe)

- Visible Window with Interior Light

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all packaging materials and any promotional labels or stickers from the air fryer.
2. **Cleaning:** Wash the removable basket and crisper plate thoroughly with hot water, dish soap, and a non-abrasive sponge. Rinse and dry completely. Wipe the interior and exterior of the main unit with a damp cloth.
3. **Placement:** Place the air fryer on a stable, heat-resistant, and level surface. Ensure there is at least 4 inches (10 cm) of clear space around the back and sides of the appliance to allow for proper air circulation. Do not place it directly against a wall or under cabinets.
4. **Power Connection:** Plug the power cord into a grounded wall outlet.
5. **Initial Run (Optional but Recommended):** To eliminate any manufacturing odors, run the air fryer empty for about 10-15 minutes at 350°F (175°C). A slight odor may be present during this first use; this is normal. Allow the unit to cool down completely afterward.

OPERATING INSTRUCTIONS

Control Panel Overview:

12 In 1 One-Touch Digital Panel



The digital touch control panel features various preset icons and manual controls for time and temperature.

- **Power Button:** Turns the unit on/off.
- **Preset Icons:** Select from 12 pre-programmed cooking functions (e.g., Fries, Chicken, Steak, Fish, Cake, DIY, etc.).
- **Temperature Controls (+/-):** Adjust cooking temperature.
- **Time Controls (+/-):** Adjust cooking time.
- **Start/Pause Button:** Begins or pauses the cooking cycle.
- **Light Button:** Activates the interior light to view food through the visible window.

General Operation:

1. **Prepare Food:** Place your ingredients into the air fryer basket. Do not overfill the basket to ensure even cooking.
2. **Insert Basket:** Slide the basket firmly into the main unit until it clicks into place.
3. **Power On:** Press the Power button to turn on the air fryer.
4. **Select Cooking Method:**

- **Using Presets:** Tap the desired preset icon (e.g., "Fries", "Chicken"). The air fryer will automatically set the recommended time and temperature.
- **Manual Setting:** Use the Temperature (+/-) and Time (+/-) buttons to set your desired cooking temperature (up to 400°F) and time.

5. **Start Cooking:** Press the Start/Pause button to begin the cooking cycle.
6. **Monitor Cooking:** Use the visible window and the Light button to check on your food without opening the basket, which helps maintain consistent temperature.
7. **Shake Reminder:** For some foods, the air fryer may beep to remind you to shake the basket for even cooking. Carefully remove the basket, shake the contents, and reinsert it. The cooking cycle will resume automatically.
8. **Completion:** Once the cooking time is complete, the air fryer will beep and automatically shut off. Carefully remove the basket and transfer the cooked food to a serving plate.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your air fryer. Always unplug the appliance and allow it to cool completely before cleaning.

Easy to Clean



Dishwasher Safe



Nonstick Coating

The nonstick basket and crisper plate are dishwasher safe for easy cleaning.

- **Basket and Crisper Plate:** The nonstick basket and crisper plate are dishwasher safe. For hand washing, use hot water, dish soap, and a non-abrasive sponge. For stubborn residue, soak the basket in warm, soapy water for about 10 minutes before cleaning.
- **Interior:** Wipe the interior of the air fryer with a damp cloth or non-abrasive sponge. For baked-on food, a mild dish soap can be used. Ensure the interior is completely dry before next use.
- **Exterior:** Clean the exterior with a damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the finish.
- **Heating Element:** Gently clean the heating element with a soft brush to remove any food residue.
- **Storage:** Store the air fryer in a cool, dry place with the power cord neatly wrapped.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in; power outlet is not working; basket is not properly inserted.	Ensure the power cord is securely plugged into a working outlet. Push the basket firmly into the unit until it clicks.
Food is not cooked evenly.	Basket is overcrowded; food was not shaken or flipped.	Cook food in smaller batches. Shake or flip food halfway through cooking time.
White smoke comes from the appliance.	Grease from previous use is burning; fatty ingredients are being cooked.	Clean the basket and crisper plate thoroughly after each use. Remove excess oil from food before air frying.
Food is not crispy.	Too much moisture in food; not enough oil applied; temperature too low or time too short.	Pat food dry before cooking. Lightly brush or spray food with oil. Increase temperature or cooking time.

SPECIFICATIONS

- **Model Number:** AH-KZG7018-7D5BK
- **Capacity:** 7.5 Quarts
- **Power:** 1800 Watts
- **Voltage:** 120 Volts
- **Max Temperature:** 400°F (200°C)
- **Dimensions (D x W x H):** 11.54" x 16.42" x 13.5"
- **Material:** Plastic, Stainless Steel
- **Control Method:** Touch Digital
- **Special Features:** Programmable, Visible Window, Nonstick Coating, Dishwasher Safe Basket

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official Simple Deluxe website. Please have your model number (AH-KZG7018-7D5BK) and purchase details ready when

contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question