Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Panasonic /
- > Panasonic TH-55PX735DX 55-inch 4K Ultra HD Smart LED TV User Manual

Panasonic TH-55PX735DX

Panasonic TH-55PX735DX 55-inch 4K Ultra HD Smart LED TV User Manual

Model: TH-55PX735DX

1. Introduction

This manual provides essential information for the safe and efficient operation of your Panasonic TH-55PX735DX 55-inch 4K Ultra HD Smart LED TV. Please read these instructions thoroughly before using the television and retain them for future reference.

The Panasonic TH-55PX735DX is a 55-inch 4K Ultra HD Smart LED TV designed to enhance your home entertainment experience. It features a bezel-less display and a High Bright Panel, delivering vibrant colors, deep contrast, and sharp detail. The television supports HDR10+ and Dolby Vision for optimized visuals and Dolby Atmos for immersive audio. It integrates smart TV functionalities with Google TV, offering access to various streaming applications and connectivity options including Bluetooth and Dual-Band WiFi.



Image 1.1: Front view of the Panasonic TH-55PX735DX Smart LED TV. This image displays the television's bezel-less design and its screen displaying vibrant colors.

2. IMPORTANT SAFETY INFORMATION

Observe the following safety precautions to prevent damage and ensure safe operation:

- Power Source: Connect the TV only to an AC 230V, 50/60Hz power supply.
- Ventilation: Ensure adequate ventilation around the TV. Do not block ventilation openings.
- Water and Moisture: Do not expose the TV to rain or moisture. Do not place objects filled with liquids on the TV.
- Cleaning: Unplug the TV before cleaning. Use a soft, dry cloth. Avoid liquid cleaners.
- Placement: Place the TV on a stable, level surface or mount it securely to a wall according to instructions.

• Servicing: Do not attempt to service the TV yourself. Refer all servicing to qualified service personnel.

3. WHAT'S IN THE BOX

Verify that all the following components are included in your package:

- 1 LED TV (Panasonic TH-55PX735DX)
- 1 Table Top Stand
- 1 User Manual (this document)
- 1 Warranty Card
- 1 Remote Control
- 2 AAA Batteries (for remote control)

4. SETUP GUIDE

4.1 Attaching the Table Top Stand

- 1. Carefully place the TV screen-down on a soft, flat surface to prevent damage.
- 2. Align the table top stand with the mounting holes on the bottom of the TV.
- 3. Secure the stand using the provided screws. Ensure the stand is firmly attached.

Alternatively, for wall mounting, consult a professional installer and refer to the wall mount kit's instructions.

4.2 Connecting External Devices

Your TV offers various connectivity options. Refer to the back panel for port locations.



Image 4.1: Rear view of the Panasonic TH-55PX735DX Smart LED TV, illustrating the location of various input and output ports.

- **HDMI:** Connect Blu-ray players, gaming consoles, or set-top boxes using HDMI cables. The TV supports multiple HDMI inputs.
- USB: Connect USB storage devices for media playback.
- Antenna/Cable: Connect your antenna or cable TV feed.
- Power: Connect the power cord to the TV and then to a wall outlet.

4.3 Initial Power-On and Network Setup

- 1. Plug the TV into a power outlet.
- 2. Press the power button on the remote control or the TV.
- 3. Follow the on-screen instructions to select your language, country, and perform initial channel scanning.
- 4. Connect to your Wi-Fi network by selecting your network name and entering the password. The TV supports Dual-Band WiFi.
- 5. Log in with your Google account to access Google TV features and apps.

5. OPERATING YOUR TV

5.1 Remote Control Functions

The included remote control provides intuitive navigation. Insert the two AAA batteries into the remote control, observing polarity.

- Power Button: Turns the TV on or off.
- Navigation Pad: Use the arrow keys to navigate menus and the OK button to confirm selections.
- Volume +/-: Adjusts the volume level.
- Channel +/-: Changes TV channels.
- Home Button: Accesses the Google TV home screen.
- Input Button: Selects input sources (HDMI, USB, etc.).
- App Buttons: Dedicated buttons for popular streaming services like Netflix, Prime Video, YouTube, and JioCinema.

5.2 Smart TV Features (Google TV)

Your Panasonic TH-55PX735DX runs on Google TV, providing a personalized entertainment experience.

- App Access: Download and stream content from a wide range of applications available on the Google Play Store.
- **Voice Control:** Use the built-in Google Assistant (via remote control microphone) to search for content, control smart home devices, and get information.
- Content Recommendations: Google TV learns your preferences and suggests movies, shows, and live TV from your subscriptions.

5.3 Picture and Sound Settings

Optimize your viewing and listening experience through the TV's settings menu.



Image 5.1: The TV screen showcasing its capability for stunning visuals and immersive sound, highlighting features like 4K Hexa Chroma Drive, Dolby Digital, and Google TV integration.

- **Picture Modes:** Select from various preset picture modes (e.g., Standard, Vivid, Cinema, Game) or customize settings like brightness, contrast, color, and sharpness. The TV features a High Bright Panel and supports HDR10+ and Dolby Vision for enhanced picture quality.
- **Sound Modes:** Choose sound modes (e.g., Standard, Music, Movie, Speech) or adjust equalizer settings. Experience immersive audio with Dolby Atmos support.
- Game Mode: Activate Game Mode for reduced input lag, ideal for gaming.

5.4 Bluetooth Connectivity

Connect Bluetooth-enabled devices such as headphones or soundbars wirelessly to your TV.

- 1. Go to the TV's settings menu.
- 2. Navigate to 'Remotes & Accessories' or 'Bluetooth Settings'.
- 3. Enable Bluetooth and put your device in pairing mode.
- 4. Select your device from the list on the TV screen to pair.

6. MAINTENANCE AND CARE

- Screen Cleaning: Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a specialized screen cleaner (do not spray directly on the screen).
- Cabinet Cleaning: Wipe the TV cabinet with a soft, dry cloth.

- **Dusting:** Regularly dust the ventilation openings to prevent overheating.
- Power Cord: Periodically check the power cord for any damage.

7. TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common solutions:

Problem	Possible Solution
No power	Ensure the power cord is securely plugged into both the TV and the wall outlet. Check if the power outlet is working.
No picture, but sound is present	Check the input source. Ensure external devices are powered on and connected correctly.
No sound, but picture is present	Check the volume level. Ensure mute is not activated. Verify audio cables for external devices.
Remote control not working	Replace the AAA batteries. Ensure there are no obstructions between the remote and the TV.
Cannot connect to Wi-	Ensure your router is on and within range. Re-enter the Wi-Fi password. Restart the TV and router.
Smart TV apps not loading	Check your internet connection. Clear the app's cache or reinstall the app. Update the TV's software.

8. TECHNICAL SPECIFICATIONS

Feature	Specification
Brand	Panasonic
Model	TH-55PX735DX
Screen Size	55 Inches (139 Centimetres)
Display Technology	LED, IPS Panel
Resolution	4K Ultra HD (3840 x 2160 Pixels)
Refresh Rate	60 Hz
HDR Support	Dolby Vision, HDR10+
Audio Technology	Dolby Atmos, Built-In Speaker
Operating System	Google TV
Memory Storage Capacity	16 GB
Connectivity	Bluetooth, HDMI, USB, Wi-Fi (Dual-Band)
Special Features	Bezel-Less Design, High Bright Panel, Game Mode, Micro Dimming, ALLM

Feature	Specification
Product Dimensions (LxWxH)	123.6 x 6.8 x 71.8 cm
Item Weight	20 kg
Voltage	230 Volts
Wattage	150 Watts
Model Year	2025

9. WARRANTY AND SUPPORT

9.1 Warranty Information

Your Panasonic TH-55PX735DX Smart LED TV comes with a **1 Year Warranty Care** from the date of purchase. Please refer to the included Warranty Card for detailed terms and conditions, including coverage and exclusions.

9.2 Customer Support

For technical assistance, service requests, or warranty claims, please contact Panasonic customer support. Contact details can be found on the Panasonic official website or on your warranty card.

Manufacturer: Panasonic Life Solutions India Private Limited

© 2025 Panasonic. All rights reserved.

Related Documents - TH-55PX735DX



Panasonic TX-75JX940E LED TV Operating Instructions

Comprehensive operating instructions for the Panasonic TX-75JX940E LED TV, covering setup, usage, safety precautions, and troubleshooting.



Panasonic OLED TV Operating Instructions TH-55MZ2000Z TH-65MZ2000Z

Comprehensive operating instructions for Panasonic OLED TV models TH-55MZ2000Z and TH-65MZ2000Z. Covers setup, connections, features, safety precautions, maintenance, and specifications.

