

Arno X-FORCE FLEX 9.60 Aqua

Arno X-FORCE FLEX 9.60 Aqua Cordless Vacuum Cleaner User Manual

Model: X-FORCE FLEX 9.60 Aqua

1. INTRODUCTION

Thank you for choosing the Arno X-FORCE FLEX 9.60 Aqua Cordless Vacuum Cleaner. This versatile and powerful appliance is designed to provide efficient cleaning for your entire home, from floors to ceilings, and even your car. Featuring a flexible tube, a unique Aqua accessory for simultaneous vacuuming and mopping, and a comprehensive set of 10 accessories, this vacuum offers convenience and thorough cleaning performance. Please read this manual carefully before use to ensure proper operation, maintenance, and safety.

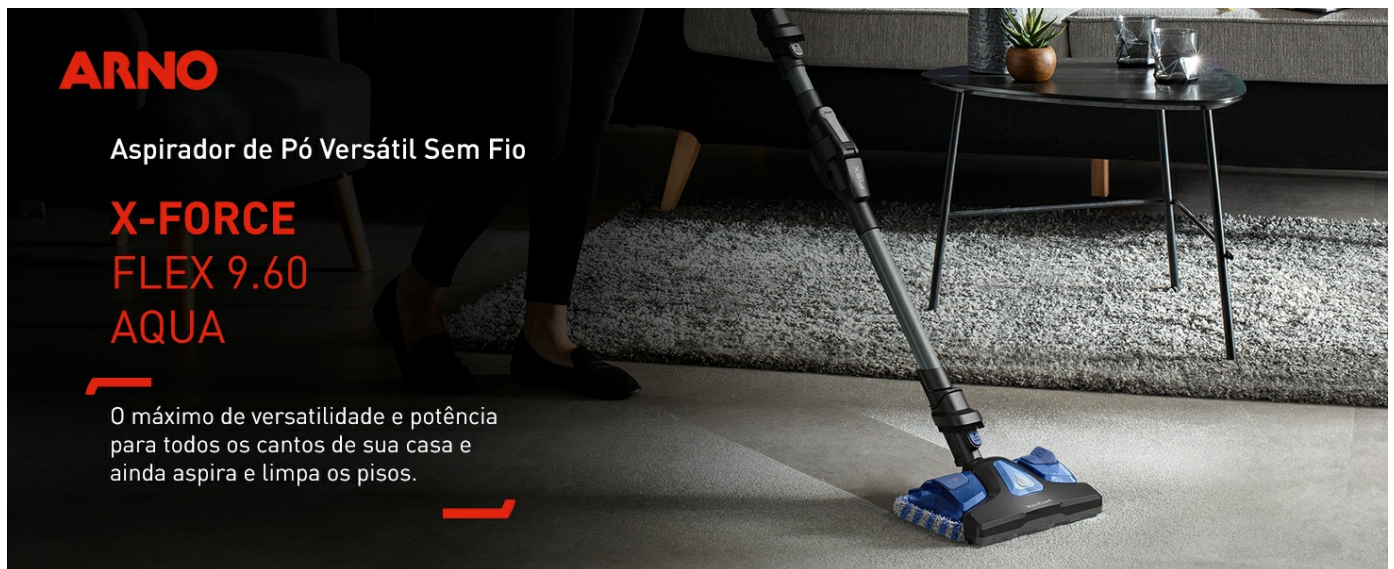


Image 1.1: The Arno X-FORCE FLEX 9.60 Aqua Cordless Vacuum Cleaner, showcasing its sleek design and upright configuration.

2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using an electrical appliance. Read all instructions before using this vacuum cleaner.

- This appliance is for household use only. Do not use outdoors or on wet surfaces.

- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the dust cup and/or filters in place.
- Turn off all controls before unplugging.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not handle the charger or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Exercise extra care when cleaning on stairs.
- Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing the appliance.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- 1x Cordless Vacuum Cleaner (with filter)
- 1x Aqua Accessory
- 2x Cleaning Mops for Aqua Accessory
- 1x Crevice and Baseboard Tool
- 2x Thick Brushes
- 1x Sofa and Upholstery Brush
- 1x Animal Turbo Brush
- 1x Charging Base
- 1x Extra Filter
- 1x Instruction Manual
- 1x Warranty Certificate

DIVERSOS ACESSÓRIOS PARA LIMPEZA DE TODOS OS CANTOS



2x ESCOVAS GROSSAS
Para remoção de sujeiras difíceis



ESCOVA TURBO ANIMAL
Para remoção de pelos de animais de estimação



ACESSÓRIO PARA FRESTAS E RODAPÉS
Para limpeza de locais de difícil acesso



ESCOVA PARA SOFÁS E ESTOFADOS
Para limpeza de superfícies de tecido



ESCOVA PARA TODO TIPO DE PISO
Motorizada e com luz LED



ACESSÓRIO AQUA
Para aspirar e passar pano ao mesmo tempo

Image 3.1: Overview of the 10 included accessories for various cleaning tasks.

4. PRODUCT FEATURES

The Arno X-FORCE FLEX 9.60 Aqua is engineered for powerful and versatile cleaning:

- **Powerful Suction:** 250W motor for high suction power, combined with Cyclone technology and a motorized brush.
- **Advanced Filtration:** 99.9% filtration efficiency with a HEPA filter.
- **Cordless Freedom:** Lithium-ion 18.5V removable battery provides up to 45 minutes of runtime and recharges in 3 hours.
- **Flexible Tube Technology:** Reach difficult areas under furniture with ease and improved ergonomics.
- **Automatic Suction Adjustment:** Optimizes cleaning performance across different floor types with 3 suction levels.
- **Aqua Accessory:** Vacuum and mop simultaneously for efficient hard floor cleaning.
- **Large Dustbin:** 450ml capacity dustbin with hygienic emptying system.
- **Integrated LED Light:** Main brush features an LED light for improved visibility in dark areas.

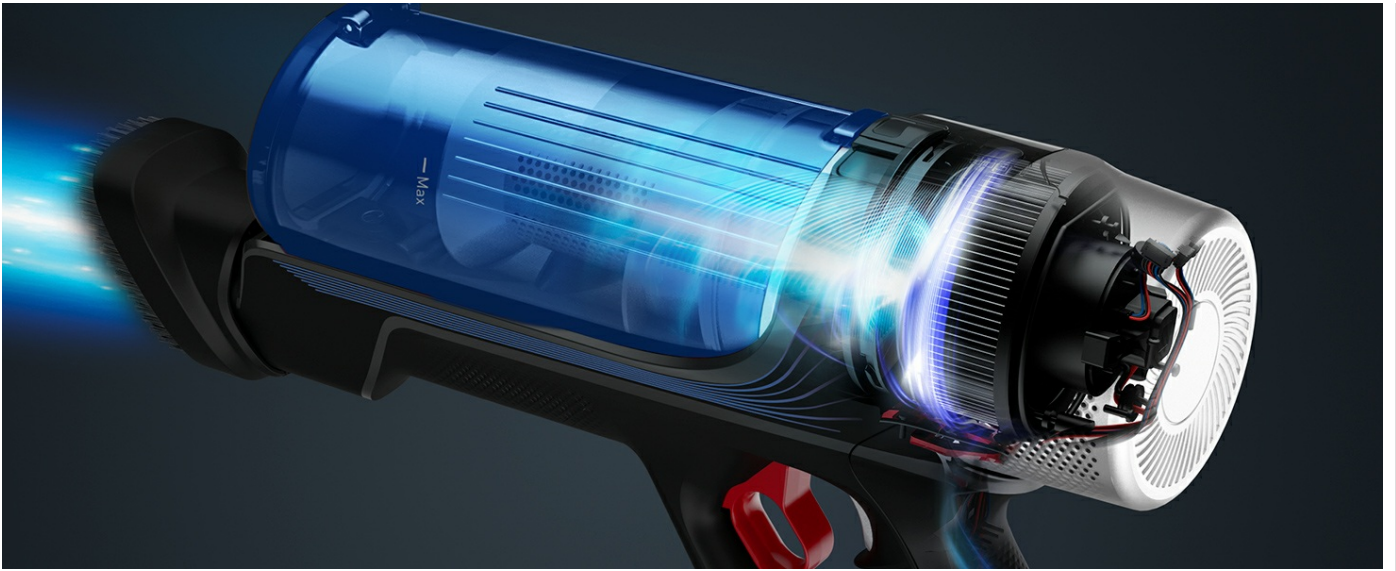


Image 4.1: Illustration of the powerful suction and 99.9% filtration system.



Image 4.2: The flexible tube feature allowing easy access to low areas.

5. ASSEMBLY & CHARGING

5.1 Assembly

1. **Attach the Main Body to the Tube:** Align the main vacuum body with the extension tube and push until it clicks securely into place.
2. **Attach the Floor Head:** Connect the desired floor head (e.g., motorized brush or Aqua accessory) to the bottom of the extension tube, ensuring it clicks firmly.
3. **Install Battery:** Insert the removable lithium-ion battery into the designated slot on the main body until it locks.
4. **Attach Accessories:** For handheld use, detach the extension tube and attach desired accessories directly to the main body.

TUDO EM UM



Image 5.1: The vacuum cleaner shown in different assembly configurations for versatile use.

5.2 Charging the Battery

1. Place the vacuum cleaner on its charging base or connect the charger directly to the battery.
2. Plug the charger into a suitable power outlet (110V or 220V, Bivolt compatible).
3. The battery indicator on the display will show charging status. A full charge takes approximately 3 hours.
4. Ensure the battery is fully charged before first use for optimal performance.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off and Suction Levels

1. Press the power button on the main body to turn the vacuum cleaner on.
2. The vacuum features 3 suction levels: ECO, Auto, and BOOST. Use the control display to select the desired mode.
3. **ECO Mode:** For light cleaning and extended battery life.

4. **Auto Mode:** Automatically adjusts suction power based on floor type for optimized cleaning.
5. **BOOST Mode:** Provides maximum suction for stubborn dirt and deep cleaning.
6. Press the power button again to turn the vacuum cleaner off.



Image 6.1: The intelligent control display providing real-time information on battery and suction settings.

6.2 Using the Aqua Accessory

The Aqua accessory allows for simultaneous vacuuming and mopping of hard floors.

1. Attach the Aqua accessory to the extension tube.
2. Dampen the cleaning mop pads and attach them to the Aqua accessory.
3. Fill the water tank on the Aqua accessory with clean water (and a small amount of floor cleaner if desired, compatible with the accessory).
4. Operate the vacuum cleaner as usual. The Aqua accessory will vacuum dry debris while simultaneously mopping the floor.
5. After use, empty any remaining water and clean the mop pads thoroughly.



Image 6.2: The Aqua accessory in action, demonstrating its dual vacuuming and mopping function.

6.3 Using Other Accessories

- **Motorized Brush with LED:** Ideal for all floor types including porcelain, wood, ceramic, carpets, and rugs. The LED light illuminates dust.

- **Animal Turbo Brush:** Specifically designed for effective removal of pet hair from carpets and upholstery.
- **Sofa and Upholstery Brush:** Gentle yet effective for cleaning fabric surfaces.
- **Crevice and Baseboard Tool:** Perfect for reaching narrow gaps, corners, and along baseboards.
- **Thick Brushes:** For general cleaning and removing stubborn dirt.
- **Handheld Mode:** Detach the extension tube to use the main body with accessories for quick clean-ups or car interiors.



Image 6.3: Demonstrating the vacuum's ability to clean high areas such as ceilings and light fixtures.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

7.1 Emptying the Dustbin

1. Ensure the vacuum is turned off and disconnected from the charger.
2. Locate the dustbin release button.
3. Press the button to detach the dustbin from the main body.
4. Position the dustbin over a trash can and open the bottom flap to release the collected dirt. The 450ml capacity allows for hygienic emptying without direct contact with dirt.
5. Close the flap and reattach the dustbin to the main body until it clicks.

7.2 Cleaning the Filters

The vacuum uses a HEPA filter for efficient air purification. The control display will alert you when the filter needs cleaning.

1. Remove the dustbin as described above.
2. Carefully remove the HEPA filter from the dustbin assembly.
3. Tap the filter gently over a trash can to remove loose dust.
4. If necessary, rinse the filter under cold running water. Ensure it is completely dry (allow 24-48 hours) before reinserting. Do not use detergents or hot water.
5. Reassemble the filter and dustbin, then reattach to the vacuum.

7.3 Cleaning Accessories

- **Motorized Brush:** Regularly check the brush roll for tangled hair or debris. Use scissors to cut and remove any obstructions.
- **Aqua Accessory Mops:** The two cleaning mops are washable. Hand wash or machine wash according to fabric care

instructions. Ensure they are dry before storage.

- **Other Accessories:** Wipe clean with a damp cloth. Ensure they are dry before reattaching.

8. TROUBLESHOOTING

If you encounter issues with your Arno X-FORCE FLEX 9.60 Aqua, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged or not properly inserted.	Ensure the battery is fully charged and correctly inserted into the main body.
Reduced suction power.	Dustbin is full, filter is clogged, or blockage in the tube/brush.	Empty the dustbin. Clean the HEPA filter. Check the extension tube and brush head for any obstructions.
Battery not charging.	Charger not properly connected or faulty.	Ensure the charger is securely plugged into both the vacuum/charging base and the wall outlet. Verify the outlet is functional.
Difficulty attaching/detaching parts (e.g., tubes).	Parts may be stiff or misaligned.	Ensure proper alignment of connectors. Apply firm, even pressure when attaching. For detachment, press release buttons fully and twist gently if needed. Avoid excessive force.
Filter cleaning alert remains on after cleaning.	Filter not completely dry or not properly reinserted.	Ensure the filter is completely dry before reinserting. Make sure it is seated correctly in its compartment.

9. SPECIFICATIONS

Feature	Specification
Brand	Arno
Model Name	X-FORCE FLEX 9.60 AQUA
Model Number	9.60 Aqua
Power	250 Watts
Voltage	110 Volts, 220 Volts (Bivolt)
Battery Type	Lithium-ion
Battery Runtime	Up to 45 Minutes
Charging Time	3 Hours
Dustbin Capacity	450 ml
Filter Type	HEPA Filter
Number of Suction Levels	3 (ECO, Auto, BOOST)
Recommended Surface	All floors
Noise Level	86 Decibels

Feature	Specification
Item Weight	2.2 Kilograms
Dimensions (L x W x H)	23.4 x 24.8 x 112 cm
Country of Origin	China
Manufacturer	Groupe Seb

10. WARRANTY AND SUPPORT

Your Arno X-FORCE FLEX 9.60 Aqua Cordless Vacuum Cleaner comes with a **1-year limited warranty** from the date of purchase, covering manufacturing defects.

For warranty claims, technical support, or replacement parts, please contact Arno customer service. Refer to the warranty certificate included in your package for specific terms and conditions and contact details.

Please retain your proof of purchase for warranty validation.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question