

Yokatv IPX2

Yokatv IPX2 Streaming Box User Manual

Model: IPX2

INTRODUCTION

Welcome to the user manual for your Yokatv IPX2 Streaming Box. This device is designed to provide smooth, powerful, and uninterrupted entertainment, serving as your gateway to 4K content and premium applications. Its IPX2 water-resistant design offers enhanced durability and protection against accidental splashes, making it suitable for various home environments. Please read this manual thoroughly to ensure proper setup, operation, and maintenance of your device.

PRODUCT OVERVIEW

The Yokatv IPX2 Streaming Box offers a range of features for an enhanced entertainment experience:

- Smooth and Fast Performance
- Stunning 4K Ultra HD Streaming capability
- Stable Dual-Band Wi-Fi Connectivity
- Compact, Modern, and Easy to Set Up design
- IPX2 water-resistant build for durability
- Supports popular internet services like Netflix and Amazon Prime Video



Figure 1: Yokatv IPX2 Streaming Box and its remote control. The box is white with gold "YOKATV" branding, featuring various ports on its sides. The remote is white with multiple buttons for navigation and media control.

SETUP INSTRUCTIONS

1. Unpacking and Component Check

Carefully remove all components from the packaging. Ensure you have the following items:

- Yokatv IPX2 Streaming Box
- Remote Control
- Power Adapter
- HDMI Cable (typically included, check packaging)

2. Connecting the Device

Follow these steps to connect your streaming box to your television and power source:

1. **Connect to TV:** Insert one end of the HDMI cable into the HDMI port on the Yokatv IPX2 Streaming Box. Connect the other end of the HDMI cable to an available HDMI input port on your television. Note the HDMI input number (e.g., HDMI 1, HDMI 2) for later selection.
2. **Connect Power:** Plug the power adapter into the DC IN port on the streaming box. Then, plug the power adapter into a wall outlet.

3. **Optional: USB/Micro SD:** If you wish to use external storage or peripherals, connect them to the available USB ports or the Micro SD slot.
4. **Optional: LAN Connection:** For a wired internet connection, connect an Ethernet cable from your router to the LAN port on the streaming box.



Figure 2: Rear and side view of the Yokatv IPX2 Streaming Box, showing various ports including USB, Micro SD, IR, AV, S/PDIF, HDTV (HDMI), LAN, and DC IN.

3. Initial Power-On and Network Setup

1. **Power On:** Turn on your television and select the correct HDMI input source using your TV's remote control. The Yokatv IPX2 Streaming Box should power on automatically once connected to power.
2. **Initial Setup Wizard:** Follow the on-screen instructions to complete the initial setup. This typically includes language selection, display settings, and network configuration.
3. **Wi-Fi Connection:** If you are using Wi-Fi, select your network from the list of available networks and enter your Wi-Fi password. The device supports Dual-Band Wi-Fi for stable connectivity.
4. **Account Login:** You may be prompted to log in to a Google account or other service accounts to access certain apps and features.

OPERATING INSTRUCTIONS

1. Remote Control Usage

The included remote control allows you to navigate the user interface and control media playback.





Figure 3: Front and back view of the Yokatv IPX2 Streaming Box remote control. The front features power, navigation, volume, channel, and number buttons. The back shows a learning button guide.

- **Power Button:** Turns the device on or off.
- **Navigation Pad (Arrow Keys & OK):** Used to move through menus and select items.
- **Back/Return Button:** Returns to the previous screen or menu.
- **Home Button:** Returns to the main home screen.
- **Volume Buttons (+/-):** Adjusts the audio volume.
- **Mute Button:** Mutes or unmutes the audio.
- **Number Buttons:** For direct input or specific functions.
- **App Shortcut Buttons:** Dedicated buttons for popular apps like YouTube.
- **Voice Control Button:** Activates voice search or commands (if supported).

Note: The remote control may have a learning function to control your TV. Refer to the remote's back panel for a quick guide on programming these buttons.

2. Navigating the Interface

The Yokatv IPX2 Streaming Box features a user-friendly interface. Use the navigation pad on your remote to browse through applications, settings, and content.

- **Home Screen:** Displays your installed apps, recommended content, and quick access to settings.
- **Apps Section:** Access all your downloaded and pre-installed applications.
- **Settings:** Configure network, display, audio, system, and other device preferences.

3. Streaming 4K Content

To enjoy 4K Ultra HD content, ensure the following:

- Your television supports 4K resolution.
- You are using a high-speed HDMI cable.
- Your internet connection is stable and fast enough for 4K streaming (recommended minimum 25 Mbps).
- The content you are streaming is available in 4K resolution.

Access 4K content through supported applications like Netflix or Amazon Prime Video, provided you have a subscription that includes 4K streaming.

MAINTENANCE

1. Cleaning the Device

To maintain optimal performance and appearance:

- Disconnect the power adapter before cleaning.
- Use a soft, dry, lint-free cloth to wipe the exterior of the streaming box.

- Do not use liquid cleaners, aerosols, or abrasive solvents, as these may damage the device.
- The IPX2 rating provides protection against dripping water, but avoid submerging the device or exposing it to strong water jets.

2. Software Updates

Periodically check for software updates in the device's settings menu. Updates can improve performance, add new features, and enhance security. Ensure your device is connected to the internet during updates and do not power it off until the update process is complete.

TROUBLESHOOTING

If you encounter issues with your Yokatv IPX2 Streaming Box, refer to the following common problems and solutions:

Problem	Possible Solution
No Power	• Ensure the power adapter is securely connected to both the device and a working wall outlet. • Try a different power outlet.
No Signal on TV	• Verify the HDMI cable is firmly connected to both the streaming box and the TV. • Ensure your TV is set to the correct HDMI input source. • Try a different HDMI port on your TV or a different HDMI cable.
Wi-Fi Connection Issues	• Check if your Wi-Fi router is on and functioning correctly. • Go to the device's network settings and re-enter your Wi-Fi password. • Move the streaming box closer to your Wi-Fi router or consider a wired LAN connection. • Restart both the streaming box and your Wi-Fi router.
App Not Working / Freezing	• Close and restart the application. • Clear the app's cache and data in the device's settings (Apps > [App Name] > Storage > Clear Cache/Data). • Ensure the device's software is up to date. • Uninstall and reinstall the problematic app.
Remote Control Unresponsive	• Replace the batteries in the remote control. • Ensure there are no obstructions between the remote and the streaming box.

SPECIFICATIONS

Below are the technical specifications for the Yokatv IPX2 Streaming Box:

Model Name	IPX2
------------	------

Brand	Yokatv
Connectivity Technology	Wi-Fi (Dual-Band)
Connector Types	HDMI, USB
Special Features	Support Dual-WiFi, 4K
Resolution	4K (3840 pixels video output)
Supported Internet Services	Netflix, Amazon Prime Video
Form Factor	TV Box
Compatible Devices	Television
Video Codec	H.265/HEVC, VP9
Color	Black
ASIN	B0G4FHLVHB

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official Yokatv website. Keep your purchase receipt as proof of purchase for warranty claims. For further assistance, you may contact Yokatv customer support through their official channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question