

VOWNER VOWNER

VOWNER 5-Tier Glass Display Cabinet with 3-Color LED Lighting User Manual

Model: VOWNER

Safety Information	Components List	Setup & Assembly	Operating
Instructions	Maintenance	Troubleshooting	Specifications
			Warranty & Support

INTRODUCTION

Thank you for choosing the VOWNER 5-Tier Glass Display Cabinet. This manual provides essential information for the safe assembly, operation, and maintenance of your new display cabinet. Please read it thoroughly before use and retain it for future reference.

SAFETY INFORMATION

- Always follow the assembly instructions carefully to prevent injury or damage.
- Ensure the cabinet is placed on a flat, stable surface.
- Use the provided anti-tip device to secure the cabinet to a wall, especially in households with children or pets.
- Do not overload shelves. Refer to specifications for weight limits.
- Handle glass components with care to avoid breakage and injury.
- Keep electrical components (LED lighting, sensor) away from water.
- Unplug the power adapter before cleaning or performing any maintenance.

COMPONENTS LIST

Before beginning assembly, verify that all parts are present and undamaged. Refer to the included parts list in your package. The cabinet is typically shipped in two packages (A and B).

PREMIUM TEMPERED GLASS

Both the front and side panels are made of tempered glass



Our Tempered Glass



- High strength & safe
- HD Clear
- Scratch Resistant
- Easy to clean

Other Regular Glass/Acrylic



- Fragile & Unsafe
- Non-HD
- Easily scratched and deformed

Image: Overview of the VOWNER 5-tier display cabinet with its dimensions (80cm width, 35cm depth, 204.2cm height) and an illustration of the two shipping boxes (A and B) it arrives in.

Key Components:

- Engineered Wood Panels (Top, Bottom, Back, Side Frames)
- Tempered Glass Doors
- Acrylic Side Panels
- Glass Shelves (5 pieces)
- LED Lighting Strips
- Smart Motion Sensor
- Control Panel
- Magnetic Door Catches
- Anti-tip Device
- Assembly Hardware (screws, dowels, etc.)

SETUP & ASSEMBLY

Assembly requires two people. Follow the detailed, numbered instructions provided in the separate assembly manual. Ensure you have a clear, spacious area for assembly.

General Assembly Steps:

1. **Unpack and Identify Parts:** Carefully unpack all components. Match each part to the numbered labels in the assembly manual.
2. **Assemble Frame:** Begin by assembling the main frame using the engineered wood panels and specified hardware.
3. **Install Side Panels:** Secure the highly transparent acrylic side panels into the frame.
4. **Insert Shelves:** Place the five glass shelves into the desired positions. The shelves are adjustable to accommodate various item heights.
5. **Attach Doors:** Install the tempered glass doors. The doors feature a push-to-open mechanism and magnetic catches for secure closure and easy access without fingerprints.
6. **Install LED Lighting:** Integrate the LED lighting strips according to the manual. Connect them to the control panel.
7. **Mount Anti-tip Device:** For safety, attach the anti-tip device to the top rear of the cabinet and secure it to a wall stud.



Verre trempé premium



Dispositif anti-basculement



Panneau de commande



Portes en verre escamotables

Image: Detailed views of key features: premium tempered glass, the anti-tip device for wall mounting, the integrated control panel for lighting, and the mechanism for the retractable glass doors.

OPERATING INSTRUCTIONS

LED Lighting System:

The cabinet features integrated LED lighting with a control panel for customization.



Image: Illustration of the three adjustable LED light colors (blue, warm white, cool white) and how to operate the control panel: short press to change color, long press to adjust brightness.

- **Power On/Off:** Press the main button on the control panel to turn the lights on or off.
- **Change Color:** Briefly press the color selection button on the control panel to cycle through the three light tones: warm white, cool white, and blue.
- **Adjust Brightness:** Press and hold the brightness adjustment button on the control panel to increase or decrease the light intensity. Release when the desired brightness is reached.
- **Smart Motion Sensor:** The integrated motion sensor automatically activates the lighting when movement is detected within approximately 1 meter. This feature is ideal for highlighting collections.

MULTIPLE FUNCTIONS

Multiple Applications



Image: A visual representation of the smart human sensor in action, detecting movement within a 1-meter range and automatically illuminating the display cabinet.

Door Operation:

The glass doors are designed for easy and clean access.

- **Opening:** Gently pull the handle to open the door. The magnetic catch ensures a secure closure.
- **Closing:** Push the door firmly until the magnetic catch engages.



Image: A comparison illustrating the advantage of the VOWNER cabinet's magnetic handle doors (pull to open, clean, effortless) over typical push-to-open doors that are prone to fingerprints.

MAINTENANCE

Cleaning:

- **Glass Surfaces:** Use a soft, lint-free cloth and a glass cleaner. Spray cleaner onto the cloth, not directly onto the glass, to prevent liquid from seeping into edges.
- **Wood Panels:** Wipe with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals.
- **LED Strips:** Gently wipe with a dry, soft cloth. Ensure the power is disconnected before cleaning.

General Care:

- Regularly check all screws and fittings to ensure they remain tight. Retighten if necessary.
- Avoid exposing the cabinet to direct sunlight or extreme temperature changes, which can affect the wood and LED

components.

- Do not place hot items directly on the cabinet surfaces.

TROUBLESHOOTING

Problem	Possible Cause	Solution
LED lights do not turn on.	Power adapter not connected.	Ensure the power adapter is securely plugged into the cabinet and a working outlet.
	Power outlet not working.	Test the outlet with another device.
	LED strip connection loose.	Check all LED strip connections to the control panel.
Motion sensor not activating lights.	Sensor obstructed.	Ensure nothing is blocking the sensor's view.
	Distance too far.	Approach the cabinet within 1 meter to test.
	Sensor malfunction.	Contact customer support if the issue persists.
Doors do not close properly.	Misaligned hinges.	Check hinge alignment and adjust if necessary.
	Magnetic catch obstructed or damaged.	Ensure the magnetic catch is clear of debris and functioning correctly.
Cabinet feels unstable.	Uneven floor.	Place the cabinet on a level surface or use shims to stabilize.
	Loose assembly screws.	Retighten all assembly screws.
	Anti-tip device not installed.	Install the anti-tip device as per instructions.

SPECIFICATIONS

Brand	VOWNER
Model Number	VOWNER
Dimensions (H x W x D)	205 cm x 80 cm x 35 cm (80.47" x 31.5" x 13.8")
Number of Tiers/Shelves	5 (adjustable glass shelves)
Material	Engineered Wood, Tempered Glass (doors), Acrylic (side panels)
Color	White
Lighting	Integrated LED with 3 adjustable colors (Warm White, Cool White, Blue) and brightness control
Special Features	Smart Motion Sensor (1m range), Push-to-open doors with magnetic catches, Anti-tip device
Assembly Required	Yes
Weight	16 Kilograms

WARRANTY & SUPPORT

VOWNER products are designed for quality and durability. For specific warranty details, please refer to the warranty card included with your purchase or contact our customer support.

Customer Support:

If you have any questions, require assistance with assembly, or need replacement parts, please contact our customer service team. Our specialized support is available to help you.

- **Contact Information:** Refer to your purchase documentation or the VOWNER official website for the most up-to-date contact details.
- **Returns:** This product is eligible for 30-day returns and legal guarantees.

