

Hzuaneri SR68702Y

Hzuaneri SR68702Y 7-Tier Shoe Cabinet with Doors

User Manual

INTRODUCTION

Thank you for choosing the Hzuaneri SR68702Y 7-Tier Shoe Cabinet. This manual provides essential information for the safe assembly, operation, and maintenance of your new shoe cabinet. Please read these instructions carefully before beginning assembly and retain them for future reference.

This shoe cabinet is designed to provide organized storage for 28-32 pairs of shoes, featuring adjustable shelves and a top storage layer. Its modern design with rattan accents and gold-plated iron legs makes it suitable for entryways and hallways.

SAFETY INFORMATION

- **Anti-Tipping Device:** Always secure the cabinet to the wall using the provided anti-tipping device to prevent accidental tipping. Failure to do so can result in serious injury.
- **Weight Capacity:** Do not exceed the maximum load limit of 44 lbs (20 kg) per shelf. The total weight capacity for the entire cabinet is 220 lbs (100 kg). Overloading can compromise stability and cause damage.
- **Material Handling:** The cabinet is constructed from particleboard. Handle components with care during assembly to avoid damage.
- **Assembly:** Ensure all parts are correctly assembled and fasteners are tightened securely before use.
- **Placement:** Place the cabinet on a flat, stable, and level surface. Adjustable feet are provided to help maintain balance on uneven floors.

ANTI-TIPPING DEVICE

Avoid tipping over, giving you greater peace of mind

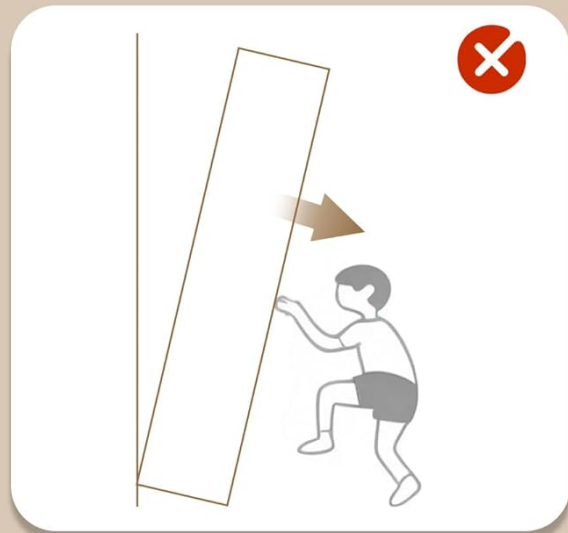
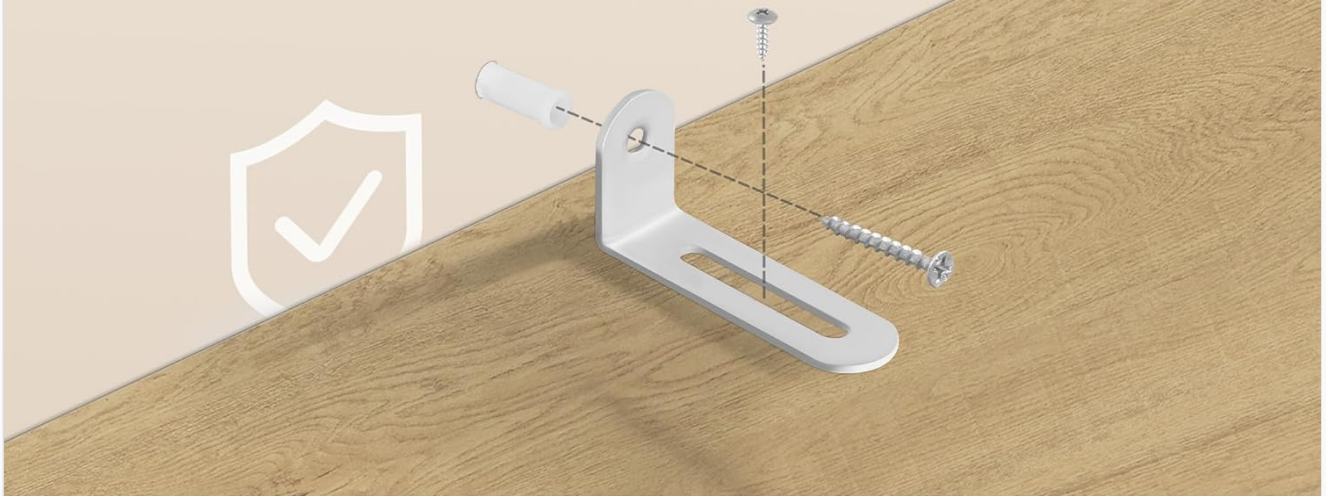


Figure 1: Anti-Tipping Device Installation. This image illustrates how to correctly install the anti-tipping device to secure the cabinet to the wall, preventing it from falling over. It also shows a visual comparison of a safely secured cabinet versus one that is not, highlighting the risk of tipping.

PACKAGE CONTENTS

Before assembly, verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- 1 x Shoe Cabinet (main body components)
- 1 x Accessory Pack (screws, dowels, connectors)
- 1 x Anti-Tipping Kit (wall anchor, strap/bracket)
- 1 x Installation Kit (tools if included, otherwise standard household tools required)

SETUP AND ASSEMBLY

Assembly is required for this shoe cabinet. Follow the step-by-step instructions provided in the included installation

manual. Ensure you have adequate space and the necessary tools before starting.

Key Assembly Features:

- **Adjustable Shelves:** The cabinet features 4 adjustable and detachable shelves. These can be moved up or down by 1.18 inches (3 cm) to accommodate various shoe heights, including men's size 13 shoes and 15-inch high boots.
- **Adjustable Feet:** The cabinet includes adjustable feet to prevent floor scratching and ensure stability on uneven surfaces.
- **Anti-Tipping Device:** Install the anti-tipping device as instructed to secure the cabinet to the wall.



Figure 2: Adjustable Shelf Configuration. This image demonstrates the flexibility of the adjustable shelves, showing how they can be positioned to accommodate different shoe sizes and types, from flats to high boots. Minimum and maximum height adjustments are indicated.



Figure 3: Adjustable Feet. This close-up shows a hand adjusting one of the cabinet's feet, illustrating how to level the unit and protect flooring.

OPERATING INSTRUCTIONS

Shoe Storage:

Open the cabinet doors using the stylish black handles. Arrange your shoes on the 7 tiers of shelves. The cabinet can store approximately 28-32 pairs of shoes, depending on their size and type.

Adjusting Shelves:

To adjust a shelf, remove all items from it. Carefully lift the shelf and reposition the shelf pins into the desired holes. Ensure the shelf is securely seated on all four pins before placing items back on it. The shelves can be adjusted in 1.18-inch increments.

Top Storage Layer:

Utilize the open top surface for storing small items such as keys, wallets, or decorative objects. The top features a slight fencing to help prevent items from falling off.

Side Hooks:

The cabinet is equipped with side hooks that can be used to hang bags, scarves, or other accessories.

Raised Bottom Space:

The raised design of the cabinet provides a 5.9-inch clearance underneath, allowing for the placement of a robot vacuum cleaner for easy floor cleaning.

TOP FENCING

To avoid items from falling over



SIDE HOOKS

Can be used to hang bags and other items



RAISED BOTTOM SPACE

Allows placement of a robot vacuum cleaner



Figure 4: Cabinet Features. This image highlights the practical features of the cabinet, including the top fencing for securing items, convenient side hooks for hanging, and the raised bottom space designed to accommodate a robot vacuum.

MAINTENANCE

- **Cleaning:** Wipe the cabinet surfaces with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish.
- **Dusting:** Regularly dust the cabinet to maintain its appearance.
- **Spills:** Clean up spills immediately to prevent staining or damage to the engineered wood.
- **Fasteners:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary.
- **Rattan Care:** The PE rattan panels are hand-friendly and durable. Clean gently with a damp cloth if needed.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Cabinet is wobbly or unstable.	Uneven floor; loose fasteners; anti-tipping device not installed.	Adjust the cabinet's feet to level it. Tighten all assembly screws. Install the anti-tipping device securely to the wall.
Doors do not close properly or are misaligned.	Hinges are loose or improperly adjusted; cabinet not level.	Check and tighten hinge screws. Adjust the cabinet's feet to ensure it is level. Refer to hinge adjustment instructions if available in the assembly guide.
Shelves cannot be inserted or are difficult to adjust.	Shelf pins are misaligned or bent; incorrect shelf orientation.	Ensure shelf pins are fully inserted into the correct holes. Verify the shelf is oriented correctly. If pins are bent, contact support for replacements.
Missing parts during assembly.	Packaging error.	Carefully check all packaging materials. If parts are genuinely missing, contact Hzueneri customer support with your purchase details.

SPECIFICATIONS

Feature	Detail
Model Number	SR68702Y
Dimensions (D x W x H)	14.1" x 31.4" x 53.7" (35.8 cm x 79.8 cm x 136.4 cm)
Material	Engineered Wood (Particleboard), PE Rattan, Alloy Steel (handles)
Number of Tiers/Shelves	7
Shoe Capacity	28-32 pairs (approximate)
Shelf Weight Capacity	44 lbs (20 kg) per shelf
Total Weight Capacity	220 lbs (100 kg)
Assembly Required	Yes
Included Components	Shoe Cabinet, Accessory Pack, Anti-Tipping Kit, Installation Kit
Color	Rustic Oak Rattan



Figure 5: Product Dimensions. This diagram provides a detailed overview of the shoe cabinet's dimensions, including height, width, depth, and internal shelf spacing.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact Hzueneri customer service directly. Please have your model number (SR68702Y) and purchase date available when contacting support.

Contact Information: Please visit the official Hzueneri website or refer to your purchase receipt for the most current customer support contact details.

