

- Manuals.plus /
- › [Black and White](#) /
 - › Black and White SV-1020D Digital Stainless Steel Stand Mixer Instruction Manual

Black and White SV-1020D

Black and White SV-1020D Digital Stainless Steel Stand Mixer

Model: SV-1020D | Brand: Black and White

- [Overview](#)
- [Setup](#)
- [Operating Instructions](#)
- [Maintenance Support](#)
- [Troubleshooting](#)
- [Specifications](#)
- [Warranty &](#)

1. PRODUCT OVERVIEW

The Black and White SV-1020D Digital Stainless Steel Stand Mixer with full metal attachments is a robust stand mixer featuring a 2000-watt motor and a 10-liter curved stainless steel bowl. Digital controls allow for precise speed adjustments, while an LED indicator provides operational feedback. The full metal attachments ensure long-lasting performance and efficient torque transfer. This stand mixer is suitable for both commercial and home use and comes in a silver stainless steel finish.



Image: A silver Black and White SV-1020D digital stand mixer with its stainless steel bowl and various metal attachments visible.

Key Features:

- 2000-watt motor provides high torque suitable for thick dough and frequent use.
- Digital controls offer precise speed adjustments and stable operational control.
- Full metal attachments support effective mixing and power transfer.
- Curved stainless steel bowl designed for efficient ingredient blending.
- Designed for reliable performance in busy home kitchens and light commercial use.

2. SETUP AND ASSEMBLY

Follow these steps to set up your stand mixer:

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future transport or storage.
2. **Component Identification:** Verify all parts are present: main unit, stainless steel bowl, dough hook, flat beater, wire whisk.
3. **Placement:** Place the mixer on a stable, flat, and dry surface. Ensure adequate ventilation around the unit.
4. **Bowl Attachment:** Place the stainless steel bowl onto the base and twist clockwise until it locks securely.
5. **Accessory Attachment:** Select the appropriate attachment (dough hook, flat beater, or wire whisk) for your task. Align the attachment shaft with the accessory port and push upwards, then twist to secure.
6. **Power Connection:** Ensure the mixer is switched off before plugging the power cord into a grounded electrical outlet (230V).



Image: The Black and White SV-1020D stand mixer with its stainless steel bowl and various attachments ready for assembly.

3. OPERATING INSTRUCTIONS

General Operation:

1. **Ingredient Loading:** Add ingredients to the stainless steel bowl. Do not exceed the maximum capacity of 10 liters.
2. **Lowering the Head:** Gently lower the mixer head until it locks into place.
3. **Power On:** Press the power button. The LED display will illuminate.
4. **Speed Selection:** Use the digital controls to select the desired speed. Start with a low speed and gradually increase as needed. The digital display provides precise speed feedback.
5. **Mixing:** Allow the mixer to operate until ingredients are thoroughly combined. Avoid operating the mixer continuously for more than 10 minutes to prevent overheating.
6. **Power Off:** Press the power button to turn off the mixer.
7. **Raising the Head:** Press the head release button and gently raise the mixer head.
8. **Attachment Removal:** Remove the attachment by twisting and pulling downwards.
9. **Bowl Removal:** Twist the bowl counter-clockwise and lift it from the base.

Recommended Speeds for Attachments:

Attachment	Recommended Use	Speed Setting
Dough Hook	Mixing and kneading yeast doughs for bread, pizza, and pasta.	Low (1-3)
Flat Beater	Mixing batters, cakes, cookies, frostings, and mashing potatoes.	Medium (2-5)
Wire Whisk	Whipping eggs, cream, meringues, and light batters.	High (4-6)

Note: Always ensure the mixer head is fully lowered and locked before operating. Do not insert utensils into the bowl while the mixer is running.

4. CARE AND MAINTENANCE

Cleaning:

- **Before Cleaning:** Always unplug the mixer from the power outlet before cleaning.
- **Main Unit:** Wipe the main unit with a damp cloth. Do not immerse the main unit in water or any other liquid.
- **Stainless Steel Bowl:** The stainless steel bowl is dishwasher safe or can be washed by hand with warm, soapy water. Rinse thoroughly and dry immediately to prevent water spots.
- **Attachments:** The metal attachments (dough hook, flat beater, wire whisk) are dishwasher safe. For hand washing, use warm, soapy water, rinse, and dry completely.
- **Stubborn Residue:** For stubborn food residue, soak the bowl and attachments in warm, soapy water before cleaning.

Storage:

- Ensure the mixer and all attachments are clean and dry before storing.
- Store the mixer in a cool, dry place, away from direct sunlight and moisture.
- Keep attachments with the mixer for easy access.

Rust Resistance:

The stainless steel components are designed to be rust-resistant. However, proper drying after washing is recommended to maintain their appearance and longevity.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Mixer does not turn on.	Not plugged in; power switch off; faulty outlet.	Ensure power cord is securely plugged into a working 230V outlet. Check if the power button is pressed. Test the outlet with another appliance.
Attachment not mixing properly.	Attachment not correctly installed; wrong attachment for task; too much/too little ingredient.	Ensure attachment is fully secured. Use the recommended attachment for the recipe. Adjust ingredient quantities according to recipe guidelines and mixer capacity.
Mixer head not locking.	Obstruction; improper alignment.	Check for any obstructions. Ensure the mixer head is properly aligned with the base before lowering and locking.
Unusual noise or vibration.	Unstable surface; bowl/attachment not secured; excessive load.	Place mixer on a stable, flat surface. Ensure bowl and attachment are securely locked. Reduce load if mixing very thick dough.
Motor stops during operation.	Overheating protection activated; power interruption.	Turn off the mixer and unplug it. Allow it to cool down for at least 30 minutes before restarting. Check power supply.

If the problem persists after attempting these solutions, please contact customer support.

6. PRODUCT SPECIFICATIONS

Brand	Black and White
Model Number	SV-1020D
Color	Silver
Capacity	10 Liters
Power	2000 Watts
Voltage	230 Volts
Material	Stainless Steel, Metal, Plastic
Noise Level	60 dB
Control Type	Push Button
Special Features	Digital display, LED power indicator, Rust-resistant, Heavy-duty, Removable bowl
Product Dimensions (D x W x H)	48 cm x 38 cm x 52 cm
Item Weight	15 Kilograms

7. WARRANTY AND SUPPORT

Warranty Information:

This Black and White SV-1020D Digital Stand Mixer comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration. Keep your purchase receipt as proof of purchase for warranty claims.

Customer Support:

For technical assistance, troubleshooting not covered in this manual, or warranty service, please contact Black and White customer support. Contact details can typically be found on the manufacturer's official website or on the product packaging.

Please have your model number (SV-1020D) and purchase date ready when contacting support.

© 2025 Black and White. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0G4MKVTMW>

More documents and user manuals: <https://manuals.plus/>