

BLACK+DECKER BXAF8000E

Black+Decker BXAF8000E Air Fryer

Instruction Manual

1. INTRODUCTION

Thank you for choosing the Black+Decker BXAF8000E Air Fryer. This appliance is designed to cook a variety of foods using rapid hot air circulation, offering a healthier alternative to traditional deep frying. Please read this instruction manual thoroughly before first use and keep it for future reference. Proper use and maintenance will ensure optimal performance and extend the life of your appliance.

Important Safety Information

- Always place the appliance on a stable, heat-resistant surface.
- Do not immerse the appliance body, cord, or plug in water or any other liquid.
- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Keep children and pets away from the appliance during operation.
- Do not block the air inlet or outlet vents during operation.
- Unplug the appliance when not in use and before cleaning.
- Allow the appliance to cool completely before handling or cleaning.
- Do not operate the appliance if the plug, power cord, or the appliance itself is damaged.

2. PRODUCT OVERVIEW

The Black+Decker BXAF8000E Air Fryer features a powerful 2000W heating element and an 8-liter capacity, suitable for preparing meals for up to 8-9 people. It incorporates dual heat technology for faster and more even cooking, ensuring crispy results.



Image: The Black+Decker BXA8000E Air Fryer with its 8-liter capacity basket filled with fries, being removed from the unit.

Key Components and Features:

- **Digital Touch Screen:** For easy control of settings.
- **Cooking Basket with Viewing Window:** Allows monitoring of food without opening.
- **Non-stick Coating:** PFOA and BPA-free for healthier cooking and easy cleaning.
- **Dual Heat Technology:** Ensures efficient and uniform cooking.
- **Adjustable Temperature:** From 80°C to 200°C.
- **Timer:** Up to 60 minutes with an audible signal.
- **8 Preset Programs:** For various food types.
- **Defrost Function:** For quick and even thawing.
- **Dehydrate Function:** For preparing natural snacks.



Image: The air fryer highlighting its dual heat technology, 60-minute timer, and temperature range of 80-200°C.

3. SETUP

1. **Unpack:** Carefully remove the air fryer and all accessories from the packaging. Remove any stickers or labels.
2. **Clean:** Before first use, clean the cooking basket and grill with warm soapy water. Wipe the exterior of the appliance with a damp cloth. Dry all parts thoroughly.
3. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is adequate space (at least 10 cm) around the appliance for proper air circulation. Do not place it near walls or under cabinets that are sensitive to heat or steam.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. Ensure the outlet voltage matches the appliance's specifications.

4. OPERATING INSTRUCTIONS

Basic Operation:

1. **Prepare Food:** Place your ingredients into the cooking basket. Do not overfill the basket to allow for proper air circulation.
2. **Insert Basket:** Slide the cooking basket firmly back into the air fryer.
3. **Power On:** Plug in the appliance. The digital display will illuminate.
4. **Set Temperature and Time:**
 - Use the temperature controls (usually '+' and '-') to set the desired cooking temperature (80°C - 200°C).
 - Use the timer controls (usually '+' and '-') to set the desired cooking time (0 - 60 minutes).
5. **Start Cooking:** Press the Start/Pause button to begin the cooking process.
6. **Monitor Cooking:** Use the viewing window to check on your food without opening the basket.
7. **Shake/Turn Food (Optional):** For even cooking, especially with smaller items like fries, you may need to pull out the basket and shake or turn the food halfway through the cooking time. The appliance will pause automatically when the basket is removed and resume when reinserted.
8. **End of Cooking:** The air fryer will emit an audible signal when the set cooking time has elapsed.
9. **Remove Food:** Carefully pull out the basket using the handle. Place the basket on a heat-resistant surface. Use tongs to remove the cooked food.
10. **Power Off:** Unplug the appliance from the wall socket after use.

2000W



Image: The Black+Decker BXAF8000E Air Fryer in operation, demonstrating its 2000W power and ease of use.

5. COOKING PROGRAMS

The BXAF8000E Air Fryer comes with 8 intelligent preset programs designed for common food types. These programs automatically set optimal temperature and time, which can be adjusted manually if needed.



Image: The air fryer's control panel displaying the 8 preset programs, along with examples of food and their approximate cooking times.

Using Preset Programs:

1. Place food in the basket.
2. Select the desired preset program icon on the digital touch screen. The appliance will automatically set the recommended time and temperature.
3. Press the Start/Pause button to begin.
4. You can manually adjust the time and temperature even after selecting a preset program, if desired.

Defrost and Dehydrate Functions:

- **Defrost Function:** This function allows for quick and even thawing of frozen foods. Select the defrost icon and adjust time/temperature as needed for your specific item.
- **Dehydrate Function:** Use this mode to dehydrate fruits, vegetables, and other foods to create natural, preservative-free snacks. Select the dehydrate icon and set the appropriate time and low temperature.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and hygiene of your air fryer.



Image: The removable cooking basket of the air fryer, emphasizing its BPA-free and non-stick coating for easy cleaning.

1. **Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Clean Basket and Grill:** The cooking basket and grill have a non-stick coating. Wash them with warm soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely. **Note: The basket and grill are NOT dishwasher safe.**
3. **Clean Interior:** Wipe the interior of the appliance with a damp cloth. For stubborn residue, use a mild detergent. Avoid abrasive cleaners or scouring pads.
4. **Clean Exterior:** Wipe the exterior with a damp cloth. Do not use harsh chemicals or abrasive materials.
5. **Heating Element:** Gently clean the heating element with a soft brush to remove any food residue.
6. **Storage:** Ensure all parts are clean and dry before storing the appliance in a cool, dry place.

7. TROUBLESHOOTING

If you encounter issues with your air fryer, refer to the following common problems and solutions:

- **Appliance does not turn on:**

- Check if the power cord is securely plugged into a grounded outlet.
- Ensure the cooking basket is fully inserted into the appliance.

- **Food is not cooked evenly:**

- Do not overfill the basket. Cook in smaller batches if necessary.
- Shake or turn the food halfway through the cooking process.
- Adjust cooking time or temperature.

- **White smoke comes from the appliance:**

- This may indicate that fatty ingredients are cooking. Ensure the basket and grill are clean from previous use.
- If cooking very fatty foods, excess oil may drip into the bottom of the pan. Clean the pan after it cools.

- **Food is not crispy:**

- Ensure the temperature is set correctly.
- Increase cooking time slightly.
- For some foods, a light coating of oil can help achieve crispiness.

If the problem persists after checking these points, please contact customer support.

8. SPECIFICATIONS

- **Model Number:** BXAF8000E
- **Brand:** BLACK+DECKER
- **Power:** 2000 Watts
- **Capacity:** 8 Liters
- **Temperature Range:** 80°C - 200°C
- **Timer:** 0 - 60 minutes
- **Control Method:** Touch
- **Dimensions (L x W x H):** 28 x 29 x 34 cm
- **Weight:** 7.13 kg
- **Interior Material:** Non-stick coating (PFOA/BPA free)
- **Dishwasher Safe:** No (Basket and grill are hand-wash only)
- **Country of Origin:** Spain



Image: Dimensional diagram of the Black+Decker BXAF8000E Air Fryer.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your purchase or visit the official Black+Decker website. Do not attempt to repair the appliance yourself, as this will void the warranty.

For further assistance, please contact Black+Decker customer service.

© 2024 BLACK+DECKER. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question