

CYBERDOT TAGC

CYBERDOT Tracker Tags Finder User Manual

Model: TAGC

Brand: CYBERDOT

1. INTRODUCTION

The CYBERDOT Tracker Tags Finder is an MFi Certified item tracker designed to help you locate your valuables using Apple's Find My network. This device connects via Bluetooth to your iOS devices, allowing you to track items such as keys, wallets, backpacks, and even pets. It features a durable, waterproof design and a replaceable battery for long-term use. This manual provides instructions for setup, operation, maintenance, and troubleshooting.

2. PACKAGE CONTENTS

Please verify that all items are present in your package:

- 2 x CYBERDOT Tracker Tags (each with an installed CR2032 battery)
- 1 x Replaceable CR2032 Battery
- 2 x Protective Cases

3. SETUP GUIDE

The CYBERDOT Tracker Tags are compatible only with iOS devices (iPhone, iPad, Mac) and utilize the Apple Find My app. Ensure your iOS device is updated to the latest version for optimal performance.

3.1 Initial Pairing

1. Ensure Bluetooth is enabled on your iOS device.
2. Open the **Find My** app on your iPhone or iPad.
3. Tap the **Items** tab at the bottom of the screen.
4. Tap the **+** icon in the top right corner, then select **Add Other Item**.
5. Press and hold the button on your CYBERDOT Tracker Tag for approximately 12 seconds until you hear a beeping sound. This indicates the tracker is in pairing mode.
6. Follow the on-screen instructions in the Find My app to complete the pairing process. You may be prompted to

name your tracker and assign an emoji.

HOW IT WORKS?



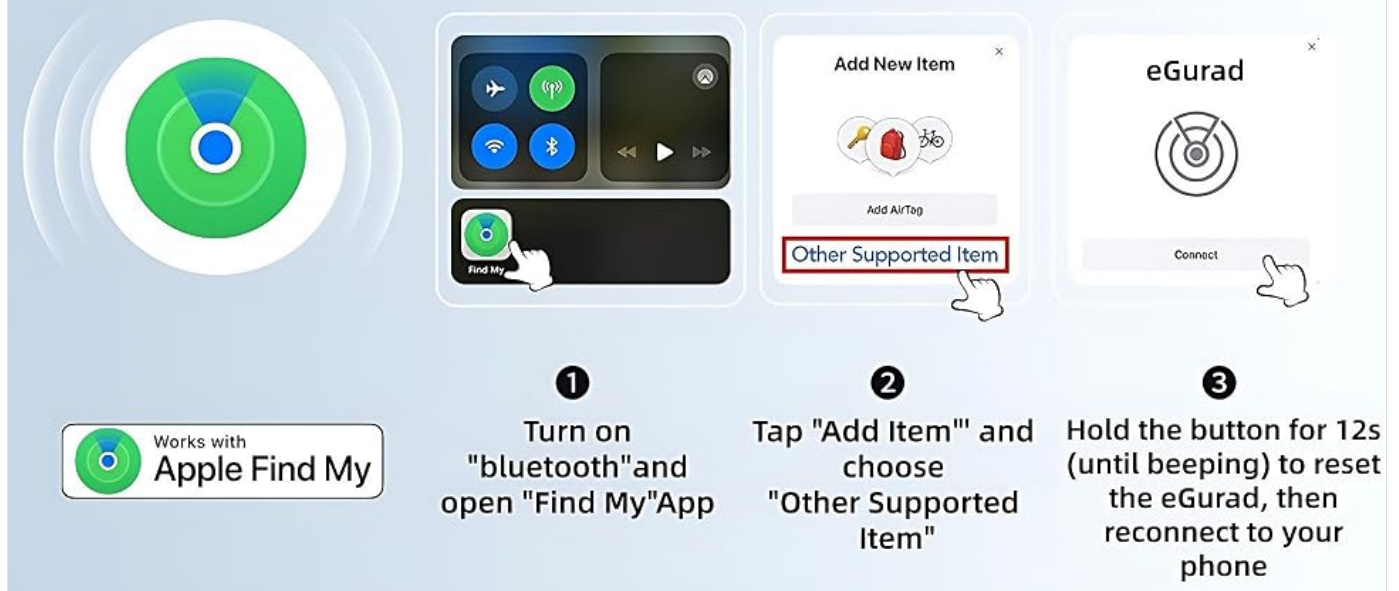


Image: Steps for pairing the CYBERDOT Tracker Tag with the Find My app.

3.2 Attaching the Tracker

Use the provided protective case to attach the tracker to your desired item. The case allows for attachment to keyrings, backpack zippers, pet collars, or other loops.

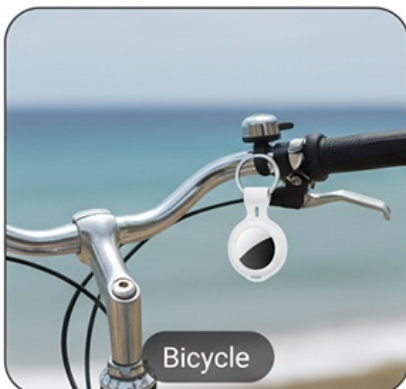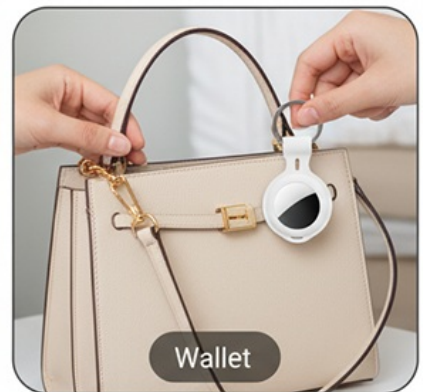

4. OPERATING INSTRUCTIONS

4.1 Finding Items Nearby (Bluetooth Range)

When your tracker is within Bluetooth range of your iOS device, you can make it play a sound to help you locate it.

1. Open the **Find My** app on your iOS device.
2. Tap the **Items** tab.
3. Select the CYBERDOT Tracker Tag you wish to locate.
4. Tap **Play Sound**. The tracker will emit a "di di di" sound (80-100dB) to guide you to its location.
5. Tap **Stop Sound** once you have found your item.



4.2 Finding Items Far Away (Lost Mode)

If your tracker is out of Bluetooth range, the Apple Find My network can help you locate it. Millions of Apple devices worldwide anonymously detect your tracker's location and securely relay it to you.

1. Open the **Find My** app.
2. Tap the **Items** tab.
3. Select the lost CYBERDOT Tracker Tag.
4. Scroll down and tap **Enable** under **Lost Mode**.
5. Follow the prompts to enter a phone number or email address where you can be contacted if someone finds your item. You can also choose to be notified when the item is found.

When your item is located by another Apple device, you will receive a notification with its updated location on a map.

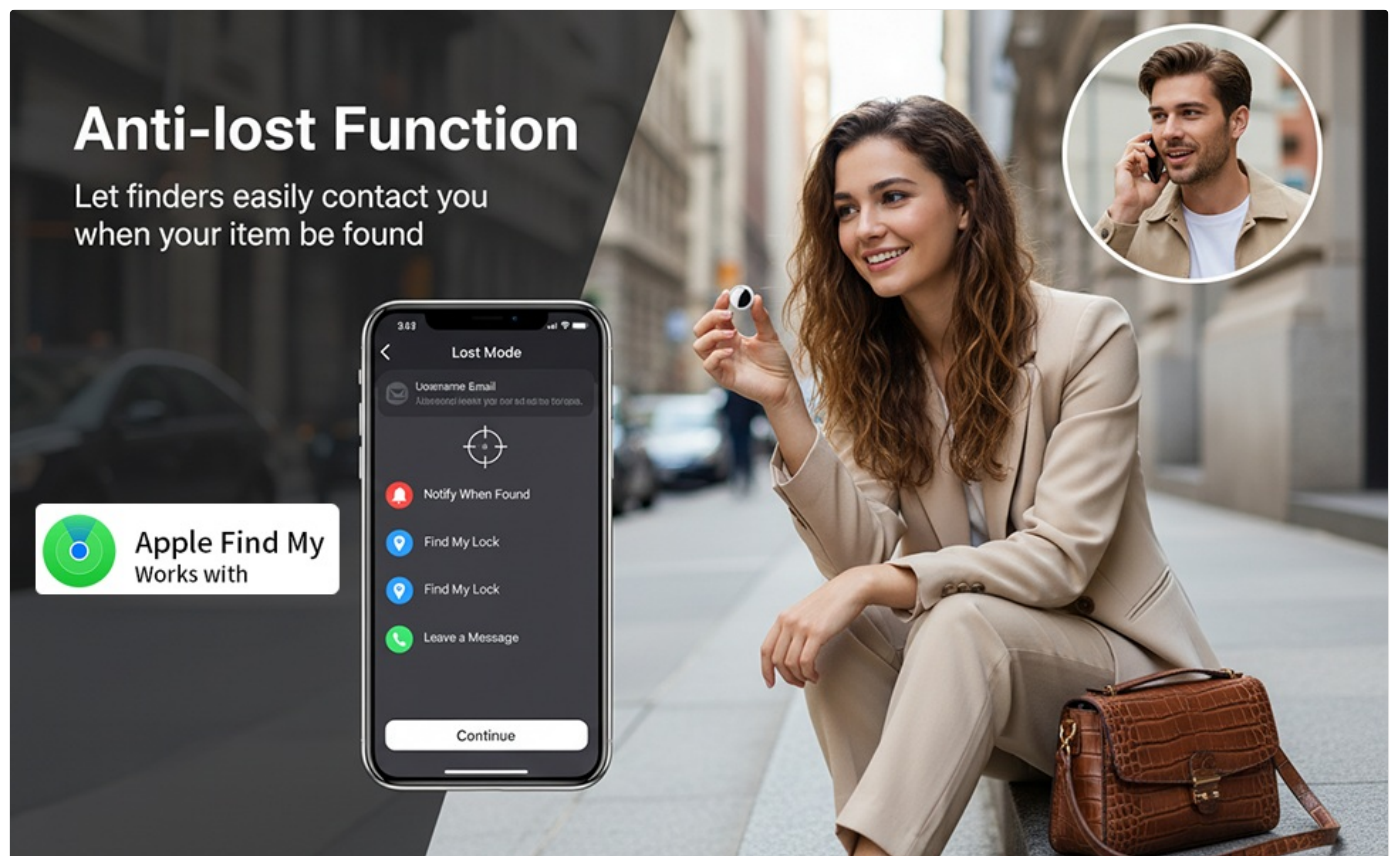 


Image: Activating Lost Mode in the Find My app.

4.3 Share Item with Family

With iOS 17 or later, you can share your CYBERDOT Tracker Tag with family members, allowing multiple people to view its location.

1. Open the **Find My** app.
2. Tap the **Items** tab.
3. Select the CYBERDOT Tracker Tag you wish to share.
4. Scroll down and tap **Share This Item**.
5. Follow the prompts to add family members from your contacts.

Share This Item

Supports monitoring by multiple devices



Image: Sharing your tracker tag with family members.

4.4 Left-Behind Reminder

Receive notifications on your iPhone if you leave your tracker tag behind and it goes out of Bluetooth range.

1. Open the **Find My** app.
2. Tap the **Items** tab.
3. Select your CYBERDOT Tracker Tag.
4. Under **Notifications**, tap **Notify When Left Behind**.
5. Toggle the feature on and configure any desired exceptions (e.g., specific locations where you don't want to be notified).

Left-Behind Reminder

Get notified on your Phone when the tracker goes out of Bluetooth range



Image: Example of a 'Left-Behind Reminder' notification.

5. MAINTENANCE

5.1 Battery Replacement

The CYBERDOT Tracker Tag uses a replaceable CR2032 coin cell battery, which provides up to 1 year of tracking performance. When the battery is low, you will receive a notification on your iOS device.

1. Gently twist the back cover of the tracker counter-clockwise to open it.
2. Remove the old CR2032 battery.
3. Insert a new CR2032 battery with the positive (+) side facing up.
4. Align the back cover and twist clockwise to securely close it.

Please dispose of used batteries responsibly according to local regulations.

5.2 Water Resistance

The tracker tag is IP67 waterproof, meaning it can withstand splashes, rain, and brief immersion in water (up to 1 meter for 30 minutes). However, it is not recommended for prolonged submersion or use during swimming or diving. Ensure the battery cover is securely closed to maintain water resistance.

Compact & Pocket-Sized

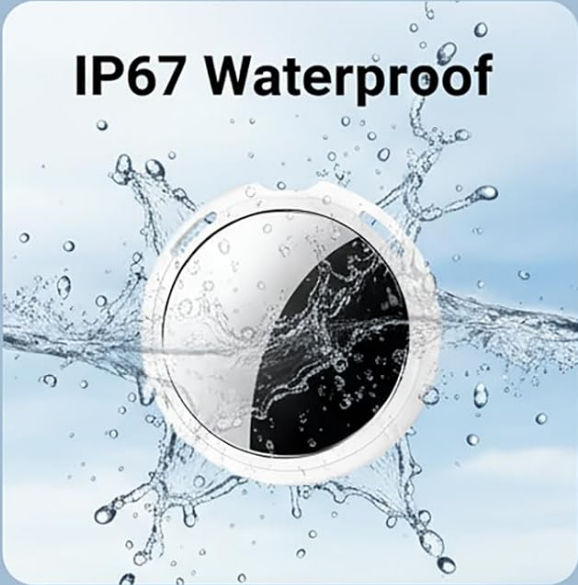 


Image: Tracker tag dimensions, IP67 waterproof feature, and global coverage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Tracker not pairing with Find My app	Bluetooth is off; Tracker not in pairing mode; iOS device issue.	Ensure Bluetooth is on. Press and hold the tracker button for 12 seconds until it beeps. Reboot your iPhone/iPad and try again. Ensure you select "Add Other Item" in the Find My app.

Problem	Possible Cause	Solution
No sound when using "Play Sound"	Tracker is out of Bluetooth range; Battery is low or dead.	Move closer to the tracker. Check the battery status in the Find My app and replace if necessary.
Location not updating	Tracker is out of range of Apple devices; Battery is low or dead.	Ensure the tracker is in an area where it can be detected by other Apple devices. Check and replace the battery.
Left-Behind Reminder not working	Feature is disabled; Exceptions are set.	Verify "Notify When Left Behind" is enabled in the Find My app for the specific tracker. Check if you have set any locations as exceptions.

7. SPECIFICATIONS

- **Model:** TAGC
- **Connectivity:** Bluetooth
- **Compatibility:** iOS devices only (Apple Find My network)
- **Battery Type:** CR2032 (replaceable)
- **Battery Life:** Up to 1 year (8760 hours)
- **Water Resistance:** IP67 (splash, water, and dust resistant)
- **Dimensions:** Approximately 33mm x 33mm x 9mm
- **Weight:** Approximately 40g
- **Sound Level:** 80-100dB
- **Material:** Plastic

8. WARRANTY INFORMATION

The CYBERDOT Tracker Tags Finder (Model TAGC) comes with a **3-month warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

9. CUSTOMER SUPPORT

If you encounter any issues or have questions regarding your CYBERDOT Tracker Tags Finder that are not addressed in this manual, please refer to the seller's contact information on the platform where you purchased the product. For general information about the Apple Find My network, visit [Apple Support](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question