

- Manuals.plus /
- › [FOXX](#) /
- › FOXX C10 Pro Tablet User Manual

FOXX C10 Pro

FOXX C10 Pro Tablet User Manual

Model: C10 Pro

INTRODUCTION

Thank you for choosing the FOXX C10 Pro Tablet. This device combines tablet and smartphone functionalities, offering a 10.1-inch display, Android 15 operating system, and cellular connectivity. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your tablet to ensure optimal performance.

Work & Life 2-in-1 Tablet

On-the-Go Productivity + Communication



Image: The FOXX C10 Pro Tablet, showcasing its sleek design and large display.

PACKAGE CONTENTS

Please verify that all items are present in your package:

- FOXX C10 Pro Tablet
- Charger
- Type C Cable
- User Manual
- TPU Case
- Pre-Pasted Screen Protector

Ready to Use!



Product Safety Information	
⚠	Do not use while charging.
⚠	Do not use near water while using.
⚠	This device may produce a bright or hot light.
⚠	For body-worn operation, maintain separation of 10cm.
⚠	Do not disassemble the tablet or the battery.
⚠	Small parts may cause a choking hazard.
⚠	Avoid contact with magnetic media.
⚠	This device may produce a loud sound.
⚠	To prevent possible hearing damage, do not listen at high volume levels for long periods.
⚠	Avoid extreme temperatures.
⚠	Keep away from power lines and other personal medical devices.
⚠	Avoid any contact with liquids. Keep it dry.
⚠	Switch off when instructed in hospitals and medical facilities.
⚠	Do not attempt to disassemble your tablet.
⚠	Switch off when instructed in aircraft and airports.
⚠	Do not rely on this device for emergency communications.
⚠	Switch off in explosive environments.
⚠	Only use approved accessories.

What is in the Box
The tablet packaging box should contain the following items and accessories:
Tablet, Charger, USB Type-C cable, Protective Film (Applied), TPU Case and Quick Start Guide.

Notices on Using Your Tablet
Your tablet must be treated with care. The following suggestions can help you extend the life of your tablet.
1. Place the tablet and its parts and components out of reach of young children.
2. Keep the tablet dry. Rain, humidity and all types of fluids, when contact, may cause electronic damage.
3. Do not touch the tablet with wet hands when charging. Wet hands may cause an electric shock or damage to the tablet.
4. Avoid placing the device in high-temperature environments. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain shells.
5. Avoid placing the device in a low-temperature environment. When the temperature is too low, the tablet will produce water vapor that may damage electronic parts.
6. Avoid placing the tablet near a fire, cigarette, open flame, or any heat source.
7. Avoid dropping the tablet or using the tablet roughly. Dropping the tablet or using the tablet roughly can damage internal circuit boards.
8. Do not drag the tablet across the floor. Rough handling can damage internal circuit boards.
9. Do not point the tablet. The point may touch mechanical components or other removable parts, and cause them to move.
10. Use a clean, soft dry cloth to clean the camera, light sensor lenses. Avoid the use of harmful chemicals and cleaning agents to clean the tablet.
11. Do not use the tablet in environments where a maximum temperature of 40°C is maintained continuously. A tablet and a user manual should be stored in a cool, dry place. The operating temperature of the tablet is maintained at 0°C to 40°C. Between -40°C and 60°C, the tablet should be stored in a cool, dry place.



Package Includes:

- 1X FOXXD C10 Pro Tablet
- 1X Battery
- 1X Charger
- 1X USB Cable
- 1X Pre-Pasted Screen Protector
- 1X User Manual
- 1X TPU Case

Image: Contents of the FOXX C10 Pro Tablet package, including the tablet, charger, cable, user manual, TPU case, and screen protector.

SETUP

1. Charging the Tablet

Before first use, fully charge the tablet using the provided Type C cable and charger. Connect the Type C cable to the tablet's charging port and the charger to a power outlet. The battery indicator on the screen will show charging status.

2. Inserting SIM Card

The FOXX C10 Pro supports mobile network connectivity. To insert a SIM card:

1. Locate the SIM card tray on the side of the tablet.
2. Use the provided SIM ejector tool (if included) or a small paperclip to open the tray.
3. Place your Nano-SIM card into the tray with the gold contacts facing down, ensuring it fits securely.
4. Carefully reinsert the tray into the tablet.

The tablet is compatible with AT&T, T-Mobile, Boost Mobile, Metro by T-Mobile (MetroPCS), and Mint Mobile.

3. Inserting MicroSD Card

To expand storage up to 1TB, you can insert a microSD card:

1. Locate the microSD card slot, often combined with the SIM card tray.
2. Open the tray as described for the SIM card.
3. Place the microSD card into its designated slot with the gold contacts facing down.
4. Reinsert the tray into the tablet.



Image: Illustration of the FOXX C10 Pro Tablet's expandable storage feature, showing a microSD card being inserted.

4. Powering On/Off

- **To Power On:** Press and hold the Power button until the FOXX logo appears.
- **To Power Off:** Press and hold the Power button until the power options appear on the screen. Select "Power Off".
- **To Restart:** Press and hold the Power button until the power options appear. Select "Restart".

5. Initial Setup Wizard

Upon first power-on, follow the on-screen instructions to complete the initial setup, including language selection, Wi-Fi connection, Google account login, and security settings.

OPERATING THE TABLET

1. Basic Navigation

The FOXX C10 Pro features a 10.1-inch touchscreen display. Use standard Android gestures for navigation:

- **Tap:** Select an item or open an app.

- **Swipe:** Scroll through pages or menus.
- **Pinch:** Zoom in or out on images and web pages.
- **Long Press:** Access contextual menus or move icons.

2. Connecting to Wi-Fi

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle Wi-Fi **On**.
3. Select your desired Wi-Fi network from the list.
4. Enter the password if prompted and tap **Connect**.

3. Using Cellular Data and Calls

With a properly installed SIM card, your tablet can function as a 2-in-1 phone and tablet.

- **Cellular Data:** Enable mobile data in **Settings > Network & internet > Mobile network**.
- **Making Calls:** Use the pre-installed Phone app to dial numbers or select contacts.
- **Sending SMS:** Use the pre-installed Messages app for text communication.

4. Camera Functions

The tablet is equipped with 8MP front and 8MP rear cameras.

1. Open the **Camera** app.
2. Tap the shutter button to take photos.
3. Switch between front and rear cameras using the camera icon.
4. Select video mode to record videos.

5. Managing Storage

The tablet comes with 64GB of internal storage, expandable up to 1TB with a microSD card. Regularly check storage usage in **Settings > Storage** to manage files and apps.

6. Battery Management

The 5000mAh battery provides extended usage. To optimize battery life:

- Adjust screen brightness.
- Close unused apps running in the background.
- Disable Wi-Fi, Bluetooth, or cellular data when not in use.
- Enable battery saver mode in **Settings > Battery**.

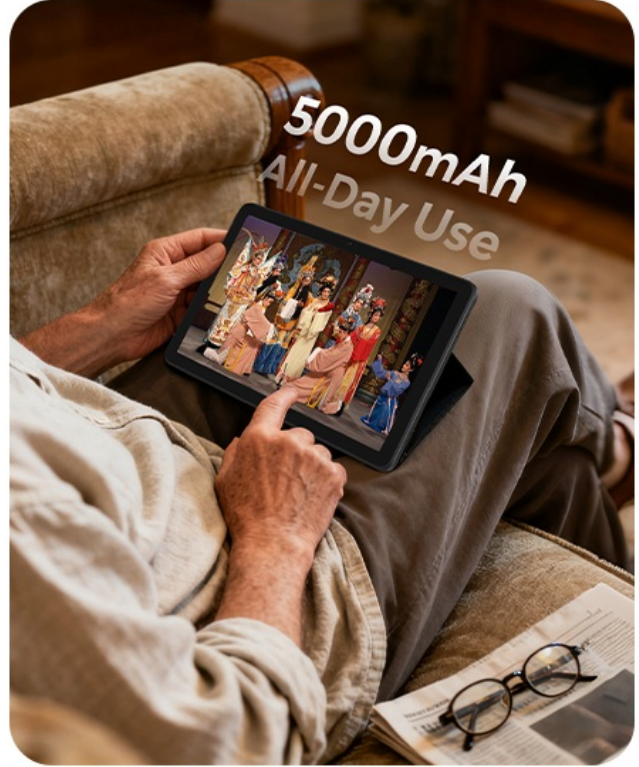
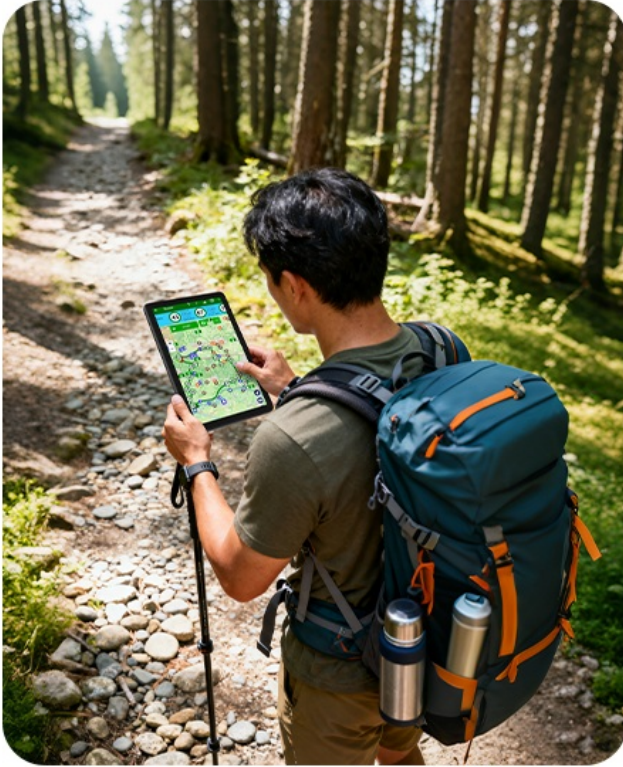


Image: The FOXX C10 Pro Tablet being used by a family, highlighting its 5000mAh battery for extended use.

MAINTENANCE

1. Cleaning Your Tablet

Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials that could damage the surface.

2. Software Updates

Regularly check for and install software updates to ensure your tablet has the latest features and security patches. Go to **Settings > System > System update**.

3. Storage Optimization

To maintain optimal performance, periodically clear cache data, uninstall unused apps, and transfer large files to your microSD card or cloud storage.

TROUBLESHOOTING

- **Tablet not turning on:** Ensure the tablet is charged. Connect it to the charger for at least 30 minutes, then try powering it on again. If it still doesn't turn on, perform a force restart by holding the power button for 10-15 seconds.
- **No cellular service:** Verify the SIM card is correctly inserted and activated with your carrier. Check mobile network settings in **Settings > Network & internet > Mobile network**. Ensure cellular data is enabled.
- **Slow performance:** Close background applications, clear app caches, and ensure sufficient storage space is available. Restarting the tablet can also resolve temporary slowdowns.
- **Wi-Fi connectivity issues:** Restart your tablet and Wi-Fi router. Forget the network in tablet settings and reconnect. Ensure you are within range of the Wi-Fi signal.

- **Screen not responding:** If the screen is unresponsive, try restarting the tablet. If the issue persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	FOXX
Model Name	FOXX C10 Pro
Operating System	Android 15
Screen Size	10.1 inches
Display Resolution	800x1280 pixels (IPS)
RAM Memory	4 GB
Internal Storage	64 GB
Expandable Storage	Up to 1 TB (microSD)
Battery Capacity	5000 mAh (Lithium Ion)
Processor	MediaTek MT8766 (2 GHz)
Rear Camera	8 MP
Front Camera	8 MP
Connectivity	Wi-Fi (802.11b/g/n), Bluetooth, 4G Cellular
Headphones Jack	3.5 mm
Dimensions (L x W x Thickness)	6.56"L x 3.02"W x 0.39"Th
Item Weight	1.3 pounds

WARRANTY INFORMATION

The FOXX C10 Pro Tablet comes with a **1-Year Limited Warranty**. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims. For detailed terms and conditions, refer to the warranty card included in your package or visit the official FOXX website.

CUSTOMER SUPPORT

For further assistance, technical support, or service inquiries, please contact FOXX customer support through the following channels:

- **Online Support:** Visit the official FOXX website for FAQs and support resources.
- **Email Support:** Refer to your warranty card or product packaging for the support email address.

Please have your product model (C10 Pro) and purchase information ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0G4QQX55K>

More documents and user manuals: <https://manuals.plus/>