

## LEDIARY YZX01

# LEDIARY 22" Outdoor Ceiling Fan with Light (Model YZX01) - Instruction Manual

**Brand:** LEDIARY

**Model:** YZX01

## 1. INTRODUCTION

Thank you for choosing the LEDIARY 22" Outdoor Ceiling Fan with Light. This manual provides essential information for the safe installation, operation, and maintenance of your new fan. Please read all instructions carefully before assembly and use, and retain this manual for future reference.

### Safety Information

- Ensure the power supply is disconnected before installation, cleaning, or maintenance.
- Installation should be performed by a qualified electrician or a person with sufficient technical knowledge.
- Do not insert fingers or any objects into the fan blades while the fan is operating.
- This fan is designed for outdoor use and is IP65 waterproof rated. However, avoid direct high-pressure water jets.
- Use only the specified bulb type (E12 base, max 10W) and ensure they fit within the lampshade dimensions.

## 2. PACKAGE CONTENTS

Verify that all components are present and undamaged before beginning installation. If any parts are missing or damaged, please contact customer support.



Image: All components included in the package for the LEDIARY 22 inch outdoor ceiling fan.

- Fan Motor Host
- Mounting Bracket
- Coupling Cover
- Connecting Components (screws, nuts, gaskets)
- Glass Light Covers (4 pcs)

- Fan Blades (6 pcs)
- Remote Control
- Downrods (8" and 4" options)
- User Manual

### 3. SETUP & INSTALLATION

---

Follow these steps carefully to install your LEDIARY outdoor ceiling fan. Refer to the installation video for visual guidance.

#### Installation Video Guide

Your browser does not support the video tag.

Video: Detailed installation guide for the LEDIARY 22 inch outdoor ceiling fan.

#### Step-by-Step Instructions

1. **Prepare the Fan Motor:** Remove the blade cap and fan blade housing from the fan motor host.
2. **Attach Light Rods:** Insert the wires of the motor into the holes of the light rods. Align each rod and secure it with two waterproof gaskets (part H) and two screws (part A). Repeat for all four rods.
3. **Assemble the Frame:** Align the center of the frame and splice the four frame parts together using the supplied screws and nuts. Secure the connecting strips with the frame assembly using four screws (part A).
4. **Install Fan Blades:** Insert the six fan blades onto the fan blade body. Secure each blade using the small fan blade screws.
5. **Attach Fan Blade Assembly:** Install the assembled fan blade unit onto the rotor of the fan motor and secure it with the fan blade cap.
6. **Connect Fan Body to Frame:** Assemble the fan motor body (with blades) and the frame together using four screws (part A).
7. **Install Downrod:** Remove the pin from the downrod assembly and thread the decorative cover through the downrod. Insert the downrod into the motor housing and secure it with the downrod pin. Tighten the two screws on the rod and move the decorative cover downward to conceal the connection.
8. **Mounting Bracket Installation:** Fix the mounting bracket to your ceiling using appropriate screws. For wood ceilings, use self-tapping screws. Ensure the bracket is securely fastened.
9. **Hang the Fan:** Carefully hang the fan assembly onto the mounting bracket.
10. **Secure Power Cord:** Install the provided hook onto the ceiling to manage and secure the power cord.
11. **Install Light Bulbs:** Install 4 E12 LED bulbs (not included, max 10W) into the bulb bases. Screw them in tightly.
12. **Attach Glass Lampshades:** Install the glass lampshades over the bulbs. Make sure they are tight to prevent falling and breaking.

### 4. OPERATING INSTRUCTIONS

---

Your LEDIARY outdoor ceiling fan is operated using the included remote control. Ensure the fan is plugged into a power source before operation.

#### Remote Control Functions



Image: Remote control layout showing various functions.

- **Power ON/OFF:** Press the power button to turn the fan and light on or off.
- **Fan Speed:** Select from 6 adjustable wind speeds (1-2 for soft wind, 3-4 for natural wind, 5-6 for cool wind).
- **Timer Setting:** Set the fan to automatically turn off after 1, 2, 4, or 8 hours.
- **Memory Function:** The fan remembers your last used speed setting when turned off and on again (if turned off for at least 10 seconds).
- **Reversible DC Motor:** Use the reversible motor button to switch between downdraft mode (summer cooling) and updraft mode (winter air circulation).
- **Light Control:** Turn the light on/off independently from the fan.

## Product Overview Video

Your browser does not support the video tag.

Video: Overview of the LEDIARY 22 inch outdoor ceiling fan's features and operation.

## 5. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your fan.

- **Cleaning:** Wipe the fan and light fixture with a soft, damp cloth. Do not use abrasive cleaners or solvents that may damage the finish. Ensure the fan is off and unplugged before cleaning.
- **Inspections:** Periodically check all screws and connections for tightness. Loose connections can cause noise or malfunction.
- **Glass Lampshades:** The fan features shatterproof glass lampshades for durability. Clean them gently with a soft cloth.

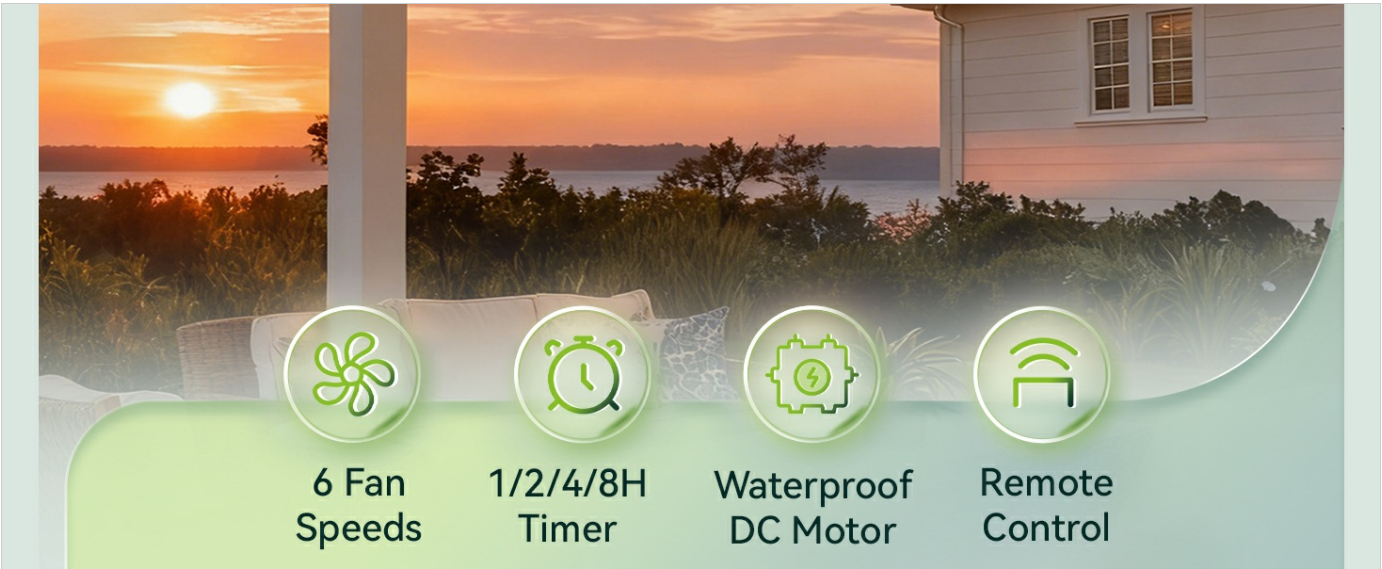


Image: Shatterproof glass lampshade design for enhanced durability.

## 6. TROUBLESHOOTING

If you encounter any issues, refer to the following common problems and solutions:

| Problem                        | Possible Cause                                                  | Solution                                                                                             |
|--------------------------------|-----------------------------------------------------------------|------------------------------------------------------------------------------------------------------|
| Fan does not turn on.          | No power supply; Remote control battery low; Remote not paired. | Check power connection; Replace remote battery; Re-pair remote control (see Operating Instructions). |
| Light does not turn on.        | Bulb loose or faulty; No power supply.                          | Ensure bulbs are screwed in tightly and are not burnt out; Check power connection.                   |
| Fan wobbles.                   | Loose mounting screws; Unbalanced fan blades.                   | Tighten all mounting screws; Ensure fan blades are securely attached.                                |
| Remote control not responding. | Battery low or dead; Remote not paired.                         | Replace remote battery; Re-pair remote control (see Operating Instructions).                         |

## 7. SPECIFICATIONS

Technical details for the LEDIARY 22" Outdoor Ceiling Fan with Light.



Image: Product dimensions and recommended bulb specifications.

- **Model Number:** YZX01
- **Product Dimensions:** 22"D x 22"W x 13.8"H
- **Size:** 22 inch
- **Color:** Black
- **Power Source:** AC/DC
- **Room Type:** Outdoor (Patio, Porch, Pergola, Gazebo)
- **Mounting Type:** Downrod Mount (8" and 4" downrod options included)
- **Waterproof Rating:** IP65
- **Fan Speeds:** 6 Speed Settings
- **Motor Type:** Reversible DC Motor
- **Included Components:** Cord, Remote
- **Power Cord Length:** 9.84 FT (approx. 10 FT)
- **Recommended Bulbs:** 4 x E12 Base LED bulbs (Max 10W each, not included). Tips: Horizontal length < 1.57", vertical length < 3.35".

## 8. WARRANTY & SUPPORT

LEDIARY is committed to providing exceptional customer service.

- **Warranty:** This product comes with a 2-year warranty.
- **Technical Support:** Our professional team is available 24/7 to assist you with any questions or concerns. Please refer to the contact information provided with your purchase or on the official LEDIARY website for support.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question