

[manuals.plus](#) /

- › [Beautiful by Drew Barrymore](#) /
- › [Beautiful by Drew Barrymore 2-Quart Slow Cooker Set Instruction Manual](#)

Beautiful by Drew Barrymore 29097

Beautiful by Drew Barrymore 2-Quart Slow Cooker Set Instruction Manual

Model: 29097

INTRODUCTION

Thank you for choosing the Beautiful by Drew Barrymore 2-Pack 2-Quart Slow Cooker Set. This appliance is designed to simplify your cooking process, offering convenience and versatility for preparing a variety of dishes. Each compact slow cooker is ideal for small meals, sauces, dips, or for serving a small group. Please read this manual thoroughly before use to ensure safe and efficient operation.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the slow cooker.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the base unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "OFF", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Avoid sudden temperature changes, such as adding refrigerated foods into a heated pot.
- The ceramic pot is designed for use with this appliance only. It must never be used on a stovetop range top

as it will crack.

- Do not place a hot slow cooker on a wet or cold surface.
- Do not use a cracked ceramic pot or a loose-fitting lid.

PRODUCT OVERVIEW

The Beautiful by Drew Barrymore 2-Quart Slow Cooker Set includes two compact slow cookers, each featuring a removable ceramic pot and a tempered glass lid. The units are designed for ease of use and portability.

- **Removable Ceramic Pot:** Dishwasher safe for easy cleaning.
- **Tempered Glass Lid:** Shatter-resistant for durability and allows visibility into the cooking process.
- **Cool-Touch Handles:** Designed for safe and easy portability.
- **Adjustable Heat Settings:** Features Low, High, and Warm settings.
- **Compact Design:** Ideal for small spaces, individual servings, or entertaining.



Image: The two 2-quart slow cookers in Thyme Green and Porcini Taupe colors, showcasing their elegant design and gold accents.

Thoughtfully Designed



Image: A detailed view of the slow cookers, illustrating key features such as the shatter-resistant tempered glass lid, cool-touch handles, and the three heat settings (Low, High, Warm).



Image: Demonstrates the compact size of the slow cooker, ideal for various uses and small living spaces.

SETUP

- 1. Unpack:** Carefully remove all packaging materials and labels from the slow cookers.
- 2. Clean:** Before first use, wash the ceramic pot and glass lid in warm, soapy water. Rinse thoroughly and dry completely. Wipe the exterior of the heating base with a damp cloth. Do not immerse the heating base in water.
- 3. Placement:** Place the slow cooker on a flat, stable, heat-resistant surface, away from walls or other appliances to allow for proper ventilation.
- 4. Assemble:** Place the clean ceramic pot into the heating base.

OPERATING INSTRUCTIONS

Follow these steps to operate your slow cooker:

- 1. Add Ingredients:** Place your desired ingredients into the ceramic pot. Do not overfill; ensure there is enough space for the lid to fit securely.
- 2. Secure Lid:** Place the tempered glass lid onto the ceramic pot.
- 3. Plug In:** Plug the power cord into a standard electrical outlet.
- 4. Select Heat Setting:** Turn the control knob to your desired setting:
 - **LOW:** For slow cooking over a longer period.
 - **HIGH:** For faster cooking.
 - **WARM:** To keep cooked food at serving temperature. Do not use the WARM setting for cooking.
- 5. Cooking:** Allow the food to cook for the recommended time based on your recipe. The indicator light will illuminate when the unit is on.
- 6. Serving:** Use oven mitts to carefully remove the lid. Be aware of escaping steam. Serve food directly from the ceramic pot or transfer to a serving dish.

7. **Turn Off:** After cooking or serving, turn the control knob to "OFF" and unplug the slow cooker from the outlet.



Image: Illustrates the removable ceramic pot, making serving and cleaning convenient.



Image: Both slow cookers in use, holding different dishes, demonstrating their utility for parties or multiple preparations.

CARE AND MAINTENANCE

Proper care ensures the longevity of your slow cooker.

- **Cleaning the Ceramic Pot and Lid:** The removable ceramic pot and tempered glass lid are dishwasher safe. For hand washing, use warm, soapy water and a non-abrasive sponge or cloth. Rinse thoroughly and dry completely.
- **Cleaning the Heating Base:** Unplug the unit and allow it to cool completely. Wipe the exterior of the heating base with a soft, damp cloth. Do not use abrasive cleaners or scouring pads. Never immerse the heating base in water or any other liquid.
- **Storage:** Ensure all parts are clean and dry before storing. Store the slow cooker with the lid inverted on the ceramic pot, inside the heating base, in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Slow cooker does not turn on.	Unit is not plugged in or power outlet is not working.	Ensure the unit is securely plugged into a functional power outlet. Check circuit breaker.
Food is not cooking properly.	Incorrect heat setting or cooking time. Lid not sealed properly.	Verify the correct heat setting (LOW or HIGH) and cooking duration for your recipe. Ensure the lid is seated firmly on the ceramic pot. Avoid lifting the lid frequently during cooking.
Food is burning on the WARM setting.	WARM setting is for holding temperature, not cooking.	Only use the WARM setting to keep already cooked food at a serving temperature. Do not cook food on the WARM setting.

SPECIFICATIONS

- **Model Number:** 29097
- **Capacity:** 2 Quarts (each slow cooker)
- **Wattage:** 120 Watts
- **Voltage:** 220 Volts
- **Material:** Ceramic pot, Tempered glass lid, Steel exterior
- **Dimensions:** Approximately 8.3"D x 9.7"W x 8.5"H (each unit)
- **Color:** Thyme Green / Porcini Taupe
- **UPC:** 840335211548

Includes:

- 1 Thyme Green 2qt Slow Cooker
- 1 Porcini 2qt Slow Cooker



Image: Visual representation of the slow cooker's dimensions.

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included with your purchase or contact the manufacturer directly. Keep your proof of purchase for warranty claims.

Related Documents - 29097

	<p><u>Beautiful Slim Espresso Maker 20 Bar Pressure - Instruction Manual</u></p> <p>User manual for the Beautiful Slim Espresso Maker. Learn how to operate, clean, and maintain your 20-bar pressure espresso machine for perfect home-brewed coffee drinks. Includes safety guidelines and recipes.</p>
	<p><u>Beautiful 9qt TriZone Air Fryer Instruction Manual</u></p> <p>Comprehensive instruction manual for the Beautiful 9qt TriZone Air Fryer with Touch-Activated Display. Includes setup, operation, safety guidelines, cooking charts, and maintenance tips for versatile kitchen use.</p>
	<p><u>Beautiful 10-in-1 6qt Electric Multi-Cooker Instruction Manual</u></p> <p>Comprehensive instruction manual for the Beautiful 10-in-1 6qt Electric Multi-Cooker. Learn about safety, operation, maintenance, and warranty for this versatile kitchen appliance from Drew Barrymore's collection.</p>
	<p><u>CleverChef Quick Start Guide: Drew & Cole Multi Cooker</u></p> <p>Get started quickly with your Drew & Cole CleverChef multi cooker. This guide covers setup, basic functions like steaming and pasta cooking, and cleaning for your 5L appliance.</p>
	<p><u>Beautiful PowerExact Blender System Instruction Manual Precision Blending</u></p> <p>Instruction manual for the Beautiful PowerExact Blender System, featuring Patent-Pending PrecisionSense™ Blade technology. Covers safety, operation, maintenance, and troubleshooting for this easy-to-use kitchen appliance.</p>
	<p><u>Beautiful 8qt Slow Cooker Instruction Manual</u></p> <p>User guide and safety instructions for the Beautiful 8qt Slow Cooker, covering operation, care, cleaning, and warranty information.</p>