

[Manuals.plus](#) /

› [Jectse](#) /

› Jectse Replacement TV Remote Control for Hisense TVs - Model Jectsecmn810hoav User Manual

## Jectse Jectsecmn810hoav

# Jectse Replacement TV Remote Control for Hisense TVs

Model: Jectsecmn810hoav

Brand: Jectse

## INTRODUCTION

---

This manual provides instructions for the Jectse Replacement TV Remote Control, model Jectsecmn810hoav. This remote is designed as a direct replacement for Hisense TV remote controls. It features large, tactile buttons for enhanced ease of use, making it suitable for users who may have reduced mobility or visual impairments. No programming or complex setup is required for operation.

## SETUP

---

### Battery Installation

The remote control requires two AAA batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.

Once batteries are installed, the remote control is ready for immediate use with your Hisense TV. No additional pairing or configuration is necessary.



The rear view of the Jectse remote control, indicating the location of the battery compartment.

This remote control features a simplified layout with large, clearly marked buttons for essential TV functions. Below is a guide to the main buttons and their functions:



No Need Programming  
Simply insert the batteries and start using,  
no setup or pairing required.

Jectse replacement remote control for Hisense TVs, showing its full button layout and sleek design, positioned in front of a television screen.

- **Power Button** (⏻): Located at the top, this button turns your Hisense TV on or off.
- **Mute Button** (🔇): Mutes or unmutes the TV audio.
- **Volume Up/Down (VOL + / -)**: Increases or decreases the TV volume. These are large, distinct blue buttons.
- **Channel Up/Down (CH ▲ / ▼)**: Changes the TV channel up or down. These are large, distinct green buttons.
- **Navigation Buttons** (▲ ▼ ◀ ▶): Used to navigate through menus and options on your TV screen.
- **OK Button**: Confirms selections within TV menus. This is a prominent green button in the center of the navigation cluster.
- **Menu Button**: Accesses the TV's main menu.
- **Home Button** (🏠): Returns to the TV's home screen or smart TV interface.
- **Back Button** (↶): Returns to the previous screen or menu.



A hand holding the Jectse remote control, emphasizing the large, clearly labeled buttons for easy operation.

## MAINTENANCE

---

### Cleaning

To maintain the remote control's appearance and functionality, clean it regularly with a soft, dry cloth. Avoid using liquid cleaners, aerosols, or abrasive materials, as these can damage the surface or internal components.

### Battery Replacement

Replace the batteries when the remote control's performance diminishes or it stops responding. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries or different types of batteries.

## TROUBLESHOOTING

---

- **Remote Control Not Responding:**
  - Ensure the batteries are correctly installed with the proper polarity (+/-).

- Replace the batteries with fresh AAA batteries.
  - Check for any obstructions between the remote control and the TV's infrared receiver. Ensure a clear line of sight.
  - Confirm that the TV is powered on.
- **Specific Buttons Not Working:**
    - Clean the remote control surface, especially around the unresponsive buttons, to remove any dirt or debris that might be interfering.
    - If only a few buttons are not working, it might indicate internal damage. Consider replacing the remote control.
- **Intermittent Operation:**
    - This often indicates low battery power. Replace the batteries.
    - Ensure you are within the effective range of the TV's IR receiver.

## SPECIFICATIONS

|                          |                                |
|--------------------------|--------------------------------|
| Brand                    | Jectse                         |
| Model Name/Number        | Jectsecmn810hoav               |
| Special Feature          | Large buttons                  |
| Color                    | Black                          |
| Compatible Devices       | Hisense TV                     |
| Number of Buttons        | 25                             |
| Number of Items          | 1                              |
| Unit Count               | 1.0 Count                      |
| Smart Home Compatibility | Not compatible with smart home |
| Country of Origin        | China                          |
| ASIN                     | B0G4WGDY7                      |

## WARRANTY INFORMATION

The manufacturer guarantees this product for 90 days from the date of purchase. Please retain your proof of purchase for any warranty claims.

## SUPPORT

For further assistance or if you encounter issues not covered in this manual, please refer to the product's listing page or contact the seller directly. Ensure you have your product model number (Jectsecmn810hoav) and purchase details available when seeking support.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B0G4WGJDY7>

More documents and user manuals: <https://manuals.plus/>