

[Manuals.plus](#) /

› [SOULION](#) /

› SOULION C40 PC Speakers User Manual

SOULION C40

SOULION C40 PC Speakers User Manual

Model: C40

INTRODUCTION

Thank you for choosing the SOULION C40 PC Speakers. These speakers are designed to provide clear and powerful stereo sound for your computer, gaming, and music needs. Featuring both wired USB and wireless Bluetooth connectivity, dynamic LED lighting, and a convenient external desktop controller, the C40 offers a versatile audio experience. Please read this manual carefully to ensure proper setup and operation.



Image: SOULION C40 PC Speakers, showcasing the front view with vibrant purple LED lighting.

PACKAGE CONTENTS

Please check the box for the following items:

- SOULION C40 PC Speakers (2 units)
- External Desktop Controller (integrated with cables)
- Quick Start Guide

PRODUCT OVERVIEW

The SOULION C40 speakers feature a compact design with integrated LED lighting and an external controller for easy access to functions.

External Desktop Controller

Facile à utiliser. Contrôle centralisé

Multifonctions, tout en un

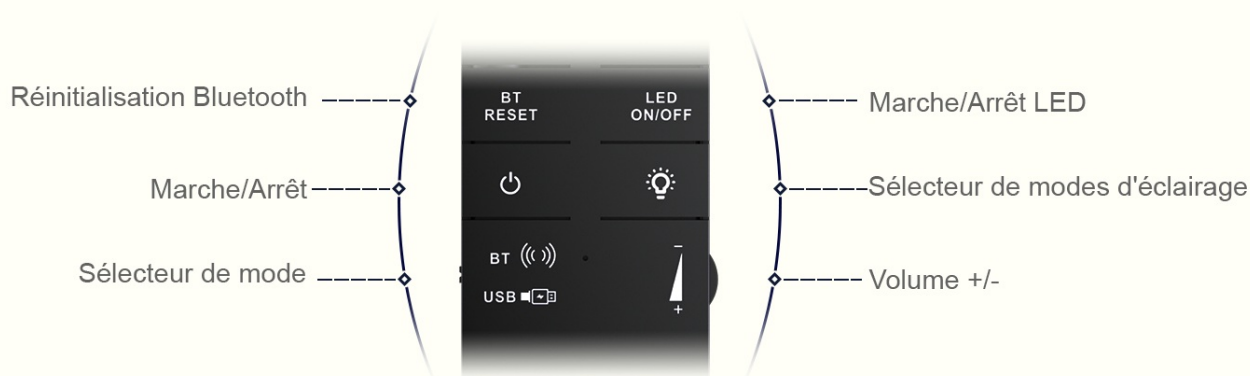


Image: Diagram of the SOULION C40 external desktop controller, illustrating the function of each button and indicator.

1. **BT RESET:** Press to reset Bluetooth connection.
2. **Power On/Off:** Press to turn the speakers on or off.
3. **Mode Selector (BT/USB):** Slide up for Bluetooth mode, slide down for USB (PC) mode.
4. **LED ON/OFF:** Press to turn the LED lighting on or off.
5. **Lighting Mode Selector:** Press to cycle through LED lighting modes.
6. **Volume +/-:** Rotate the knob to adjust the volume.

SETUP

The SOULION C40 speakers are plug-and-play, requiring no additional drivers or software. Ensure the speakers are connected to a USB port for power, regardless of the audio input mode.

Connecting the Speakers

1. Place the two speaker units on your desk, ensuring optimal stereo separation.
2. Connect the integrated USB-A or USB-C cable from the external controller to an available USB port on your computer or a 5V USB power adapter. This connection provides power to the speakers.
3. Proceed to the Operating Instructions section to select your preferred audio input mode.

Stylish Design, Immersive LED Lighting

5 Dynamic Light Modes



Rhythm



Fixed Color



Breathing



Flow



Lights off



Image: SOULION C40 PC Speakers shown with the external desktop controller and connecting cables.

OPERATING INSTRUCTIONS

Power On/Off

Press the Power On/Off button on the external desktop controller to turn the speakers on or off.

Wired (USB) Mode

1. Ensure the USB cable is connected to your computer for both power and audio.
2. Slide the Mode Selector button on the external controller **down** to select PC (USB) mode.
3. Your computer should automatically detect the speakers as an audio output device. If not, check your computer's sound settings.

Wireless (Bluetooth) Mode

1. Ensure the USB cable is connected for power.
2. Slide the Mode Selector button on the external controller^{up} to select Bluetooth mode.
3. On your mobile phone, tablet, or other Bluetooth-enabled device, search for Bluetooth devices.
4. Select "C40" from the list of available devices to pair.
5. If pairing fails, press the "BT RESET" button on the controller and try again.



Image: Visual guide demonstrating both wired USB and wireless Bluetooth connectivity options for the SOULION C40 speakers.

LED Lighting Control

The SOULION C40 speakers feature dynamic LED lighting with multiple modes:

- **Rhythm:** Lighting reacts to audio.
- **Fixed Color:** Displays a static color.
- **Breathing:** Colors fade in and out.
- **Flow:** Colors transition smoothly.
- **Off:** LED lighting is turned off.

Press the Lighting Mode Selector button on the external controller to cycle through these modes. Press the "LED ON/OFF" button to quickly toggle the lighting on or off.

Panneau miroir. Éclairage LED immersif

5 Modes d'éclairage dynamiques réglables



Image: Visual guide illustrating the five dynamic LED lighting modes available on the SOULION C40 speakers.

Volume Control

Rotate the Volume +/- knob on the external desktop controller to adjust the audio output level.

MAINTENANCE

To ensure the longevity and optimal performance of your SOULION C40 PC Speakers, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the speaker surfaces. Avoid abrasive cleaners or solvents.
- **Storage:** Store the speakers in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- **Handling:** Avoid dropping the speakers or subjecting them to strong impacts.
- **Cables:** Do not pull on the cables forcefully. Always grasp the plug when disconnecting.

TROUBLESHOOTING

If you encounter issues with your SOULION C40 PC Speakers, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No sound	Speakers not powered on, incorrect mode selected, volume too low, incorrect audio output device selected on computer/device.	Ensure speakers are powered on. Check Mode Selector (USB/BT). Increase volume. Verify audio output settings on your device.
Bluetooth pairing fails	Speakers not in Bluetooth mode, device too far, interference, previous pairing issue.	Ensure speakers are in Bluetooth mode. Move device closer. Press "BT RESET" button on controller and try pairing again.
LED lights not working	LEDs turned off.	Press the "LED ON/OFF" button on the controller to activate the lights. Cycle through modes with the Lighting Mode Selector.
Sound distortion	Volume too high, poor audio source quality.	Lower the volume. Try a different audio source or file.

If the problem persists after trying these solutions, please contact SOULION customer support for further assistance.

SPECIFICATIONS

Feature	Specification
Brand	SOULION
Model Number	C40
Max Speaker Output Power	12 Watts
Frequency Response	20 Hz - 20 KHz
Connectivity Technology	Bluetooth, USB
Audio Output Mode	Stereo (2.0 Channel)
Input Voltage	5 Volts (USB Powered)
Mounting Type	Tabletop
Material	Acrylonitrile Butadiene Styrene (ABS)
Product Features	Stereo Pairing, LED Light, USB Port, Waterproof
Recommended Uses	For computer, For smartphone or tablet
Color	Black
Bluetooth Range	10 Meters
Control Method	Push Button, Rotary Knob
Speaker Size	50 Millimeters
Signal-to-Noise Ratio	70 dB
Compatible Devices	Desktop Computer, Laptop, Smartphone, Tablet

WARRANTY AND SUPPORT

Warranty Information

The SOULION C40 PC Speakers come with a **2-year limited warranty** from the date of purchase. This warranty covers manufacturing defects and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

Customer Support

For technical assistance, warranty claims, or any questions regarding your SOULION C40 PC Speakers, please contact SOULION customer support through the retailer where you purchased the product or visit the official SOULION website for contact information.

IMPORTANT NOTE ON VIDEOS

The provided product data did not include specific URLs or metadata for official product videos (m3u8 format) with a 'Seller' creator type. Therefore, no videos could be embedded in this manual. If such video data becomes available, it can be integrated into relevant sections.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question