

Nequga A1

Nequga A1 Wireless Earbuds Instruction Manual

Model: A1 | Brand: Nequga

1. PRODUCT OVERVIEW

The Nequga A1 Wireless Earbuds are designed to provide a high-quality audio experience with convenience and comfort. Featuring Bluetooth 5.3 technology, active noise cancellation, and intuitive touch controls, these earbuds are suitable for various activities including sport and travel.



Image: Nequga A1 Wireless Earbuds and their charging case, highlighting the sleek design and LED power display.

Key Features:

- **Active Noise Cancellation:** Effectively blocks ambient sounds for focused listening.
- **Extended Battery Life:** Up to 50 hours of total playback with the charging case.
- **Fast Charging:** Quick charge capability for several hours of playback in minutes.
- **Intuitive Touch Controls:** Manage music, calls, and voice assistants with simple taps.
- **Wireless Charging Case:** Convenient charging for the portable case.
- **Bluetooth 5.3:** Ensures stable and fast connections.
- **IPX5 Waterproof:** Resistant to sweat and splashes, suitable for workouts.

2. SETUP

2.1 Initial Charging

Before first use, fully charge the earbuds and the charging case.

1. Place the earbuds into the charging case.
2. Connect the charging case to a 5V power adapter using the provided Type-C cable.
3. The LED display on the case will show the charging progress. A full charge is indicated by '100' on the case display and full battery icons for the earbuds.

Please use a 5V adapter to charge the charging case to avoid battery damage.

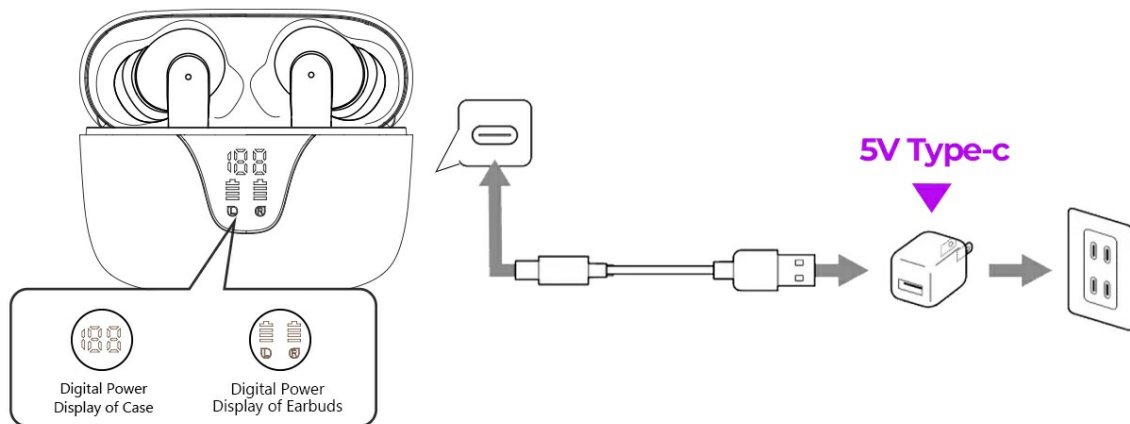 


Image: Illustration demonstrating connecting the charging case to a 5V Type-C adapter for charging. The digital power display for both the case and earbuds is shown.

2.2 Pairing with Your Device

The earbuds feature one-step auto-pairing for convenience.

1. Open the charging case. The earbuds will automatically enter pairing mode.
2. On your device (smartphone, tablet, laptop), enable Bluetooth.
3. Search for "A1" in the list of available Bluetooth devices and select it to connect.
4. Once connected, the earbuds are ready for use.

Leading edge V5.3 version technology

Offer more stable and faster connections




Image: The Nequga A1 earbuds in their open charging case, with a visual representation of a smartphone screen showing a successful Bluetooth connection to 'A1'.

2.3 Wearing the Earbuds

For optimal sound quality and comfort, ensure the earbuds are worn correctly.

1. Select the correct size ear caps (S, M, L) for your ears.
2. Insert the earbuds into your ears.
3. Twist the earbuds slightly to adjust the ear wings so they fit firmly and comfortably in your ear slot.

 * How to wear it correctly?

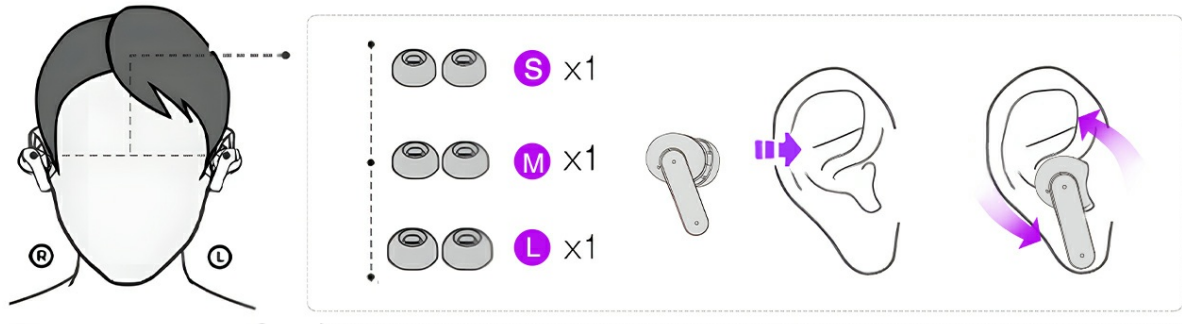

1. Replace the ear caps with the right size
2. Insert the earbuds into your ears
3. Twist the earbuds to adjust the ear wings so that they fit firmly in the ear slot.

Image: A diagram showing a head with earbud placement, different ear tip sizes (S, M, L), and a step-by-step guide on how to insert and adjust the earbuds for a secure fit.

3. OPERATING INSTRUCTIONS

3.1 Touch Controls

The Nequga A1 earbuds feature intuitive touch controls on each earbud.

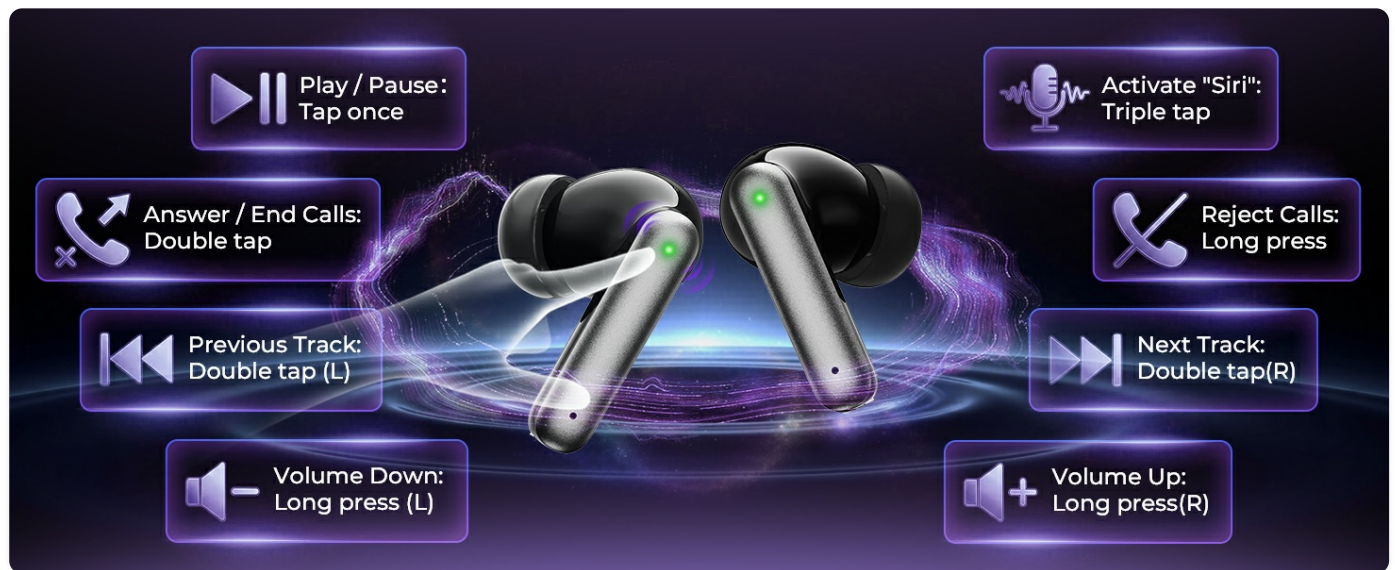 


Image: A visual guide to the touch controls on the Nequga A1 earbuds, showing gestures for play/pause, Siri activation, answering/ending calls, rejecting calls, previous/next track, and volume adjustment.

Action	Function
Tap once (L or R)	Play / Pause music
Double tap (L)	Previous Track
Double tap (R)	Next Track
Triple tap (L or R)	Activate Voice Assistant (Siri)
Double tap (L or R) during call	Answer / End Calls

Action	Function
Long press (L or R) during incoming call	Reject Call
Long press (L) during music	Volume Down
Long press (R) during music	Volume Up

3.2 Voice Assistant Support

The earbuds support voice assistants like Siri, Google Assistant, and Alexa. Triple tap either earbud to activate your device's voice assistant.



Image: A woman wearing Nequga A1 earbuds, with icons for Siri, Google Assistant, and Alexa, and a speech bubble indicating voice command interaction.

4. MAINTENANCE

4.1 Cleaning the Earbuds

Regular cleaning helps maintain sound quality and charging efficiency.

1. Gently clean the charging contacts on both the earbuds and inside the charging case.
2. Clean the mesh of the ear tips with an alcohol pad to remove any dust or earwax.

* How to solve the problem of volume and charging?

1. Clean the charging contacts, and mesh of ear tips with an alcohol pad to remove dust or earwax that might be affecting charging or sound volume.

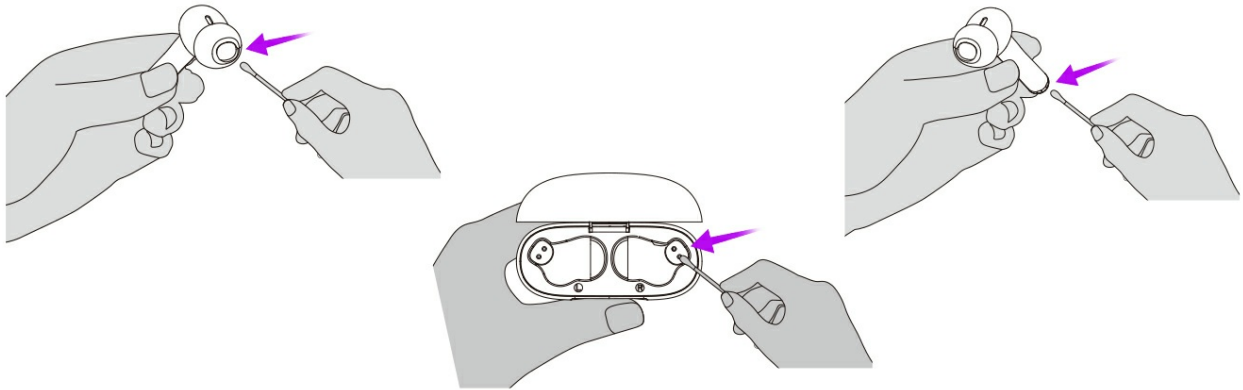


Image: An illustration demonstrating the cleaning process for the earbud charging contacts and ear tip mesh using a cleaning tool.

4.2 Water Resistance

The earbuds are IPX5 waterproof, meaning they are resistant to sweat and light splashes. They are suitable for workouts and outdoor activities.

- Do not use the earbuds in the bath or while swimming.
- Avoid prolonged exposure to water.

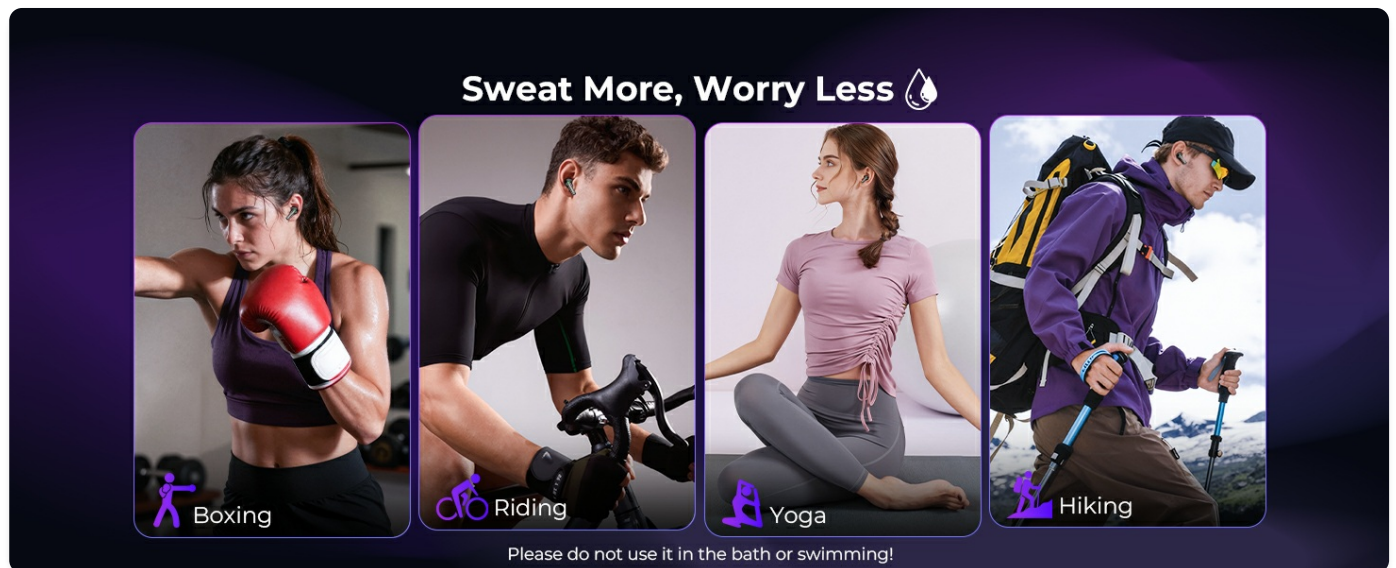


Image: Four panels showing individuals participating in boxing, riding, yoga, and hiking, illustrating the earbuds' suitability for active lifestyles due to their sweat resistance.

5. TROUBLESHOOTING

5.1 Volume or Charging Issues

If you experience low volume or charging problems, refer to the cleaning instructions in Section 4.1. Accumulated dust or earwax can affect performance.

5.2 Accidental Touch Control Activation

To prevent accidental activation of touch controls when adjusting the earbuds:

- Grasp both sides of the earbud with your fingers when adjusting its position in your ear.

*** When in use, please grasp both sides of the earbud with your fingers to adjust the position, so as to avoid accidentally touching the MFB button**

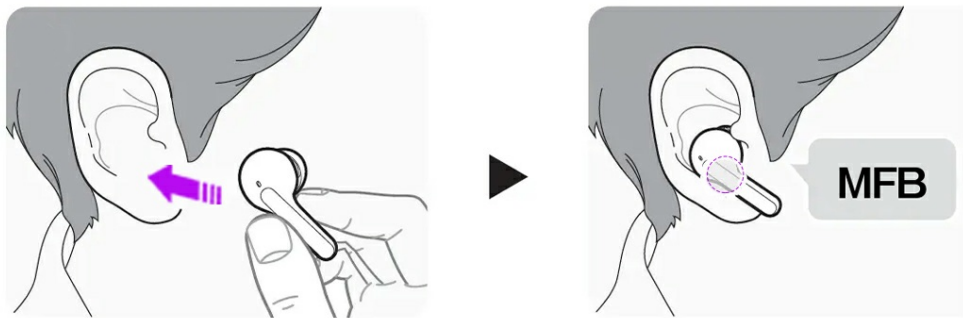


Image: An illustration demonstrating the correct way to hold the earbud by its sides to adjust it in the ear, thereby avoiding accidental contact with the Multi-Function Button (MFB) area.

5.3 Connectivity Problems

- Ensure Bluetooth is enabled on your device.
- Make sure the earbuds are charged.
- If the earbuds do not connect automatically, try manually selecting "A1" from your device's Bluetooth settings.
- If issues persist, try unpairing the earbuds from your device and then re-pairing them.

6. SPECIFICATIONS

Feature	Detail
Brand	Nequga
Model Number	A1
Color	Black
Ear Placement	In Ear
Noise Control	Active Noise Cancellation
Connectivity Technology	Wireless (Bluetooth)
Bluetooth Version	5.3
Bluetooth Range	Up to 14.97 meters
Battery Life (Earbuds)	7-8 hours (music time)
Battery Life (Total with Case)	Up to 50 hours
Charging Case Battery Capacity	500mAh
Charging Time	Approx. 2 hours (Fast Charging)

Feature	Detail
Control Method	Touch
Water Resistance Level	IPX5 (Waterproof)
Material	Acrylonitrile Butadiene Styrene (ABS)
Compatible Devices	Telephones, Tablets, Laptops

7. WARRANTY AND SUPPORT

7.1 Warranty Information

Please refer to the product packaging or the official Nequga website for specific warranty details. Typically, electronic products come with a limited manufacturer's warranty covering defects in materials and workmanship.

7.2 Customer Support

For technical assistance, troubleshooting, or any questions regarding your Nequga A1 Wireless Earbuds, please contact Nequga customer support through their official website or the retailer where the product was purchased.

8. OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: An official product video titled "A1 Wireless Earbuds" by Fridao US, showcasing the features and design of the Nequga A1 Wireless Earbuds.

© 2026 Nequga. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question