

## EDISHINE B0G56PX366

# EDISHINE Modern Floor Lamp Instruction Manual

Model: B0G56PX366

## INTRODUCTION

Thank you for choosing the EDISHINE Modern Floor Lamp. This manual provides detailed instructions for the safe and efficient assembly, operation, and maintenance of your new lamp. Please read all instructions carefully before use and retain this manual for future reference.

This 64.7-inch minimalist standing lamp features an 8W A19 LED bulb with 3 adjustable color temperatures (3000K, 4000K, 6500K), an adjustable linen shade, and a convenient foot pedal switch. Its design complements various interior styles, including modern, Nordic, traditional, and Japanese.

## 1. SETUP AND ASSEMBLY

Follow these steps to assemble your EDISHINE Modern Floor Lamp. No additional tools are required.

- 1. Connect with Base:** Securely attach the first pole section to the heavy-duty metal base by screwing it clockwise until firm.
- 2. Assemble the Light Pole:** Continue to screw the remaining pole sections together clockwise, ensuring each connection is tight.
- 3. Install the Lampshade:** Carefully attach the linen lampshade to the lamp frame. Ensure it is properly aligned and secured.
- 4. Install the LED Bulb:** Screw the included 8W A19 LED bulb into the E26 bulb base. Do not overtighten.

# Installation Steps



**1** Connect with base



**2** Assemble the light pole



**3** Install the lampshade



**4** Install the led bulb

Figure 1: Installation Steps for the EDISHINE Floor Lamp.

Once assembled, place the lamp on a flat, stable surface. The sturdy weighted base is designed to prevent wobbling and accidental tip-overs, making it suitable for homes with children or pets.



Figure 2: Sturdy Metal Base for enhanced stability.

## 2. OPERATING INSTRUCTIONS

### 2.1 Power On/Off and Color Temperature Adjustment

The lamp is operated using a foot pedal switch located on the power cord. The 78.7-inch long power cord provides flexibility in placement.

- **To Turn On/Off:** Step on the foot pedal switch once to turn the lamp on or off.
- **To Change Color Temperature:** With the lamp on, step on the foot pedal switch repeatedly to cycle through the three available color temperatures:
  - **3000K (Warm White):** Provides a cozy, inviting ambiance.

- **4000K (Natural White):** Offers a balanced, neutral light suitable for general tasks.
- **6500K (Cool White):** Delivers bright, crisp light ideal for focused work.

The lamp features a memory function that restores your last selected color temperature setting when turned back on.



Figure 3: Demonstrating the 3 Color Temperature LED Bulb.

## 2.2 Lampshade Adjustment

The lampshade is designed for flexible light direction:

- **Vertical Adjustment:** The lamp head can rotate 90° vertically. Gently tilt the lampshade up or down to direct light as needed.
- **Horizontal Adjustment:** The lamp head can rotate 180° horizontally. Swivel the lampshade left or right to

illuminate specific areas.

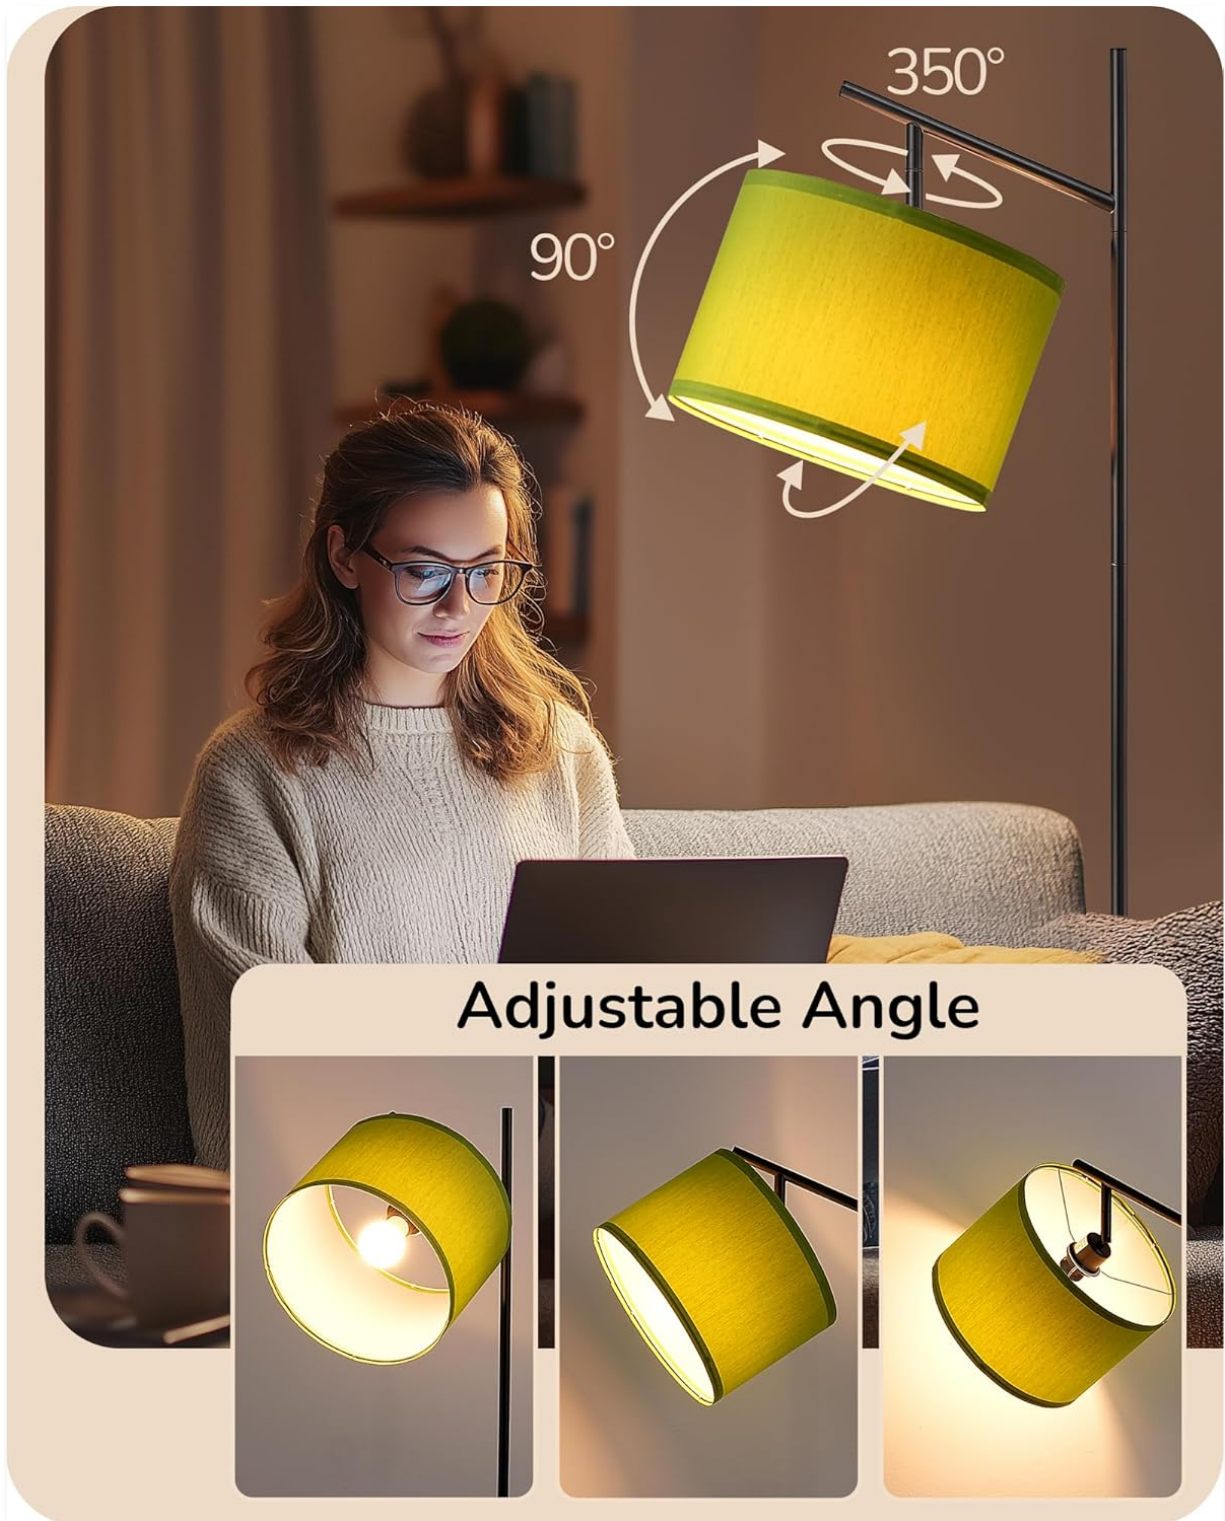


Figure 4: Lampshade Adjustable Angle.

The high-quality TC lampshade effectively filters harsh glare, emitting soft and even light.



## High-quality TC Lampshade

Effectively filters harsh glare, emitting soft and even light

Figure 5: High-quality TC Lampshade detail.

### 3. MAINTENANCE

- **Cleaning:** Disconnect the lamp from the power outlet before cleaning. Use a soft, dry cloth to wipe the lamp's surfaces. Do not use abrasive cleaners, solvents, or polishes as they may damage the finish. For the lampshade, a lint roller or a slightly damp cloth can be used for dust removal.
- **Bulb Replacement:** Ensure the lamp is unplugged and the bulb has cooled down before attempting to replace it. Unscrew the old E26 bulb counter-clockwise and screw in a new E26 LED bulb (maximum 60W equivalent).
- **Cord Care:** Regularly inspect the power cord for any damage. Do not use the lamp if the cord is frayed or damaged. Avoid placing heavy objects on the cord or running it under carpets.

## 4. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	<ul style="list-style-type: none"><li>• Power cord not plugged in.</li><li>• Bulb is loose or faulty.</li><li>• Power outlet is not functioning.</li></ul>	<ul style="list-style-type: none"><li>• Ensure the power cord is securely plugged into a working outlet.</li><li>• Tighten the bulb or replace it with a new one.</li><li>• Test the outlet with another appliance.</li></ul>
Light flickers.	<ul style="list-style-type: none"><li>• Bulb is loose or incompatible.</li><li>• Unstable power supply.</li></ul>	<ul style="list-style-type: none"><li>• Tighten the bulb. Ensure you are using an E26 LED bulb.</li><li>• Try plugging the lamp into a different outlet.</li></ul>
Color temperature does not change.	<ul style="list-style-type: none"><li>• Foot pedal switch not pressed correctly.</li><li>• Bulb malfunction.</li></ul>	<ul style="list-style-type: none"><li>• Ensure a firm press on the foot pedal switch to cycle through settings.</li><li>• Replace the bulb if the issue persists.</li></ul>

## 5. SPECIFICATIONS

- **Model:** B0G56PX366
- **Product Dimensions:** 13.39"D x 11.42"W x 64.7"H (Overall Height)
- **Item Weight:** 7.9 Pounds
- **Base Material:** Metal
- **Finish Type:** Painted
- **Bulb Base:** E26
- **Included Bulb:** 8W A19 LED (3000K/4000K/6500K)
- **Power Cord Length:** 78.7 inches



Figure 6: Product Dimensions.

## 6. WARRANTY INFORMATION

This EDISHINE product is covered by a standard manufacturer's warranty against defects in materials and workmanship. Please refer to your purchase documentation for specific warranty terms and duration. Keep your proof of purchase for warranty claims.

## 7. CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or encounter any issues not covered in this manual, please contact EDISHINE customer support. You can typically find contact information on the product packaging or the official EDISHINE website.

For the quickest resolution, please have your product model number (B0G56PX366) and proof of purchase ready when contacting support.