

CiBest W13

CiBest W13 Mini Projector User Manual

Model: W13

1. INTRODUCTION

Thank you for purchasing the CiBest W13 Mini Projector. This manual provides essential information for setting up, operating, and maintaining your device. Please read it thoroughly before use to ensure optimal performance and safety.

What's in the Box

- CiBest W13 Mini Projector
- HDMI Cable
- Power Cord
- Remote Control
- User Manual

2. SAFETY INFORMATION

To prevent fire or electric shock, do not expose the unit to rain or moisture. Do not open the casing. Refer servicing to qualified personnel only.

- **Ventilation:** Ensure proper ventilation to prevent overheating. Do not block the air inlets or outlets.
- **Power:** Use only the provided power adapter. Disconnect power during lightning storms or when unused for long periods.
- **Placement:** Place the projector on a stable, level surface. Avoid placing it in direct sunlight or near heat sources.
- **Eye Protection:** The projector uses diffuse reflection technology to reduce eye strain. Avoid looking directly into the lens during operation.

3. PRODUCT OVERVIEW

The CiBest W13 is a compact and portable mini projector designed for versatile entertainment. It supports Full HD 1080P resolution and offers multiple connectivity options.



Figure 1: CiBest W13 Mini Projector (Front View)

This image shows the compact black design of the CiBest W13 Mini Projector, highlighting its portable nature.

Key Features:

- **Portable Design:** Weighing 0.52 kg and sized at 5.5 × 2.36 × 4.33 inches, it is easy to carry for various uses.
- **Full HD 1080P Support:** Delivers clear and vibrant images with advanced LED technology and uniform illumination.
- **Built-in Speakers:** Provides original audio fidelity for an immersive experience.
- **Low Noise:** Features optimized temperature control technology to reduce fan noise by 80%.

Projector Components

Ultimate Image Quality



Figure 2: Top View with Focus Dial

This image displays the top of the projector, showing the manual focus dial and power button.

Endless Option with TV Stick

Dolby is not supported. If there is no sound, please set the movie to PCM format.

(NOTE: TV Stick Not Include)

Figure 3: Rear View with Input/Output Ports

This image illustrates the rear panel of the projector, detailing the DC power input, USB port, HDMI port, 3.5mm audio jack, and AV port.

4. SETUP

4.1 Power Connection

1. Connect the provided power cord to the projector's DC input port.
2. Plug the other end of the power cord into a power outlet.

4.2 Placement and Focus

Place the projector on a stable surface. The optimal projection distance is between 2.72 feet and 11 feet, yielding an image size from 30 to 200 inches (60-130 inches recommended).



Figure 4: Various Installation Methods

This image demonstrates three common installation methods: tripod installation, desktop placement, and ceiling installation. The projector features a standard tripod mount on its base.

Adjust the focus by rotating the focus dial on the top of the projector until the image is clear.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Press the power button on the projector or the remote control to turn the unit on or off.

5.2 Remote Control

Connect to Smartphone

Lighting to HDMI adapter cable



(Adapter not included, No WiFi and Bluetooth)

Micro USB/Type-C to HDMI adapter



Figure 5: Projector and Remote Control

This image shows the CiBest W13 Mini Projector alongside its remote control, which allows for easy navigation and control of the projector's functions.

Use the remote control to navigate the on-screen menu, select input sources, adjust volume, and control playback.

5.3 Input Source Selection

After powering on, the projector will display a main menu. Use the remote control to select your desired input source (HDMI, USB, AV).

6. CONNECTIVITY

The CiBest W13 Mini Projector offers versatile connectivity for various devices.

6.1 Connecting to Smartphones/Tablets



Figure 6: Smartphone Connection Diagram

This image illustrates how to connect an iPhone (via Lightning to HDMI adapter) and an Android phone (via Micro USB/Type-C to HDMI adapter) to the projector. Adapters are not included.

To connect your smartphone or tablet, you will need an appropriate HDMI adapter (e.g., Lightning to HDMI for iOS, Micro USB/Type-C to HDMI for Android). Connect the adapter to your device, then use an HDMI cable to connect the adapter to the projector's HDMI port. Select HDMI as the input source.

Note: The projector does not have built-in Wi-Fi or Bluetooth. For streaming services like Netflix, Amazon Prime, or Hulu, use an external streaming device (e.g., Amazon Fire Stick, Roku Stick) connected via HDMI.

6.2 Connecting to TV Sticks/Gaming Consoles/Laptops

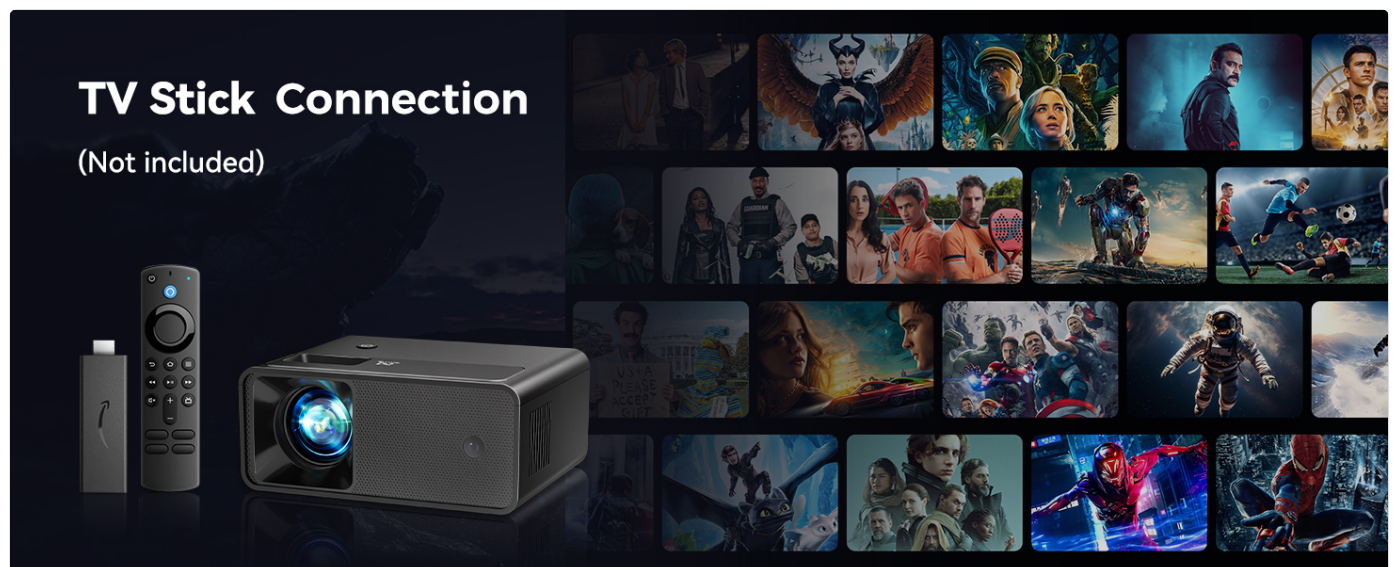


Figure 7: TV Stick Connected to Projector

This image shows a TV stick and its remote control next to the projector, indicating seamless integration for streaming content. The TV

stick is not included.

Use an HDMI cable to connect your TV box, gaming console (PS5, Xbox), or laptop to the projector's HDMI port. Select HDMI as the input source.

6.3 USB Playback

Insert a USB flash drive into the USB port to play media files directly. Select USB as the input source and navigate through your files using the remote control.

Note: The USB port does not support mirroring phones or computers.

6.4 Audio Output

The projector has built-in Hi-Fi stereo speakers. For external audio, connect headphones or external speakers to the 3.5mm audio output port.

7. IMAGE QUALITY AND DISPLAY

The CiBest W13 Mini Projector supports 1080P Full HD resolution, offering a display size from 30 to 200 inches. For best results, a display size between 60 and 130 inches is recommended.

Portable Mini Size

Save space and set up anywhere. Big screen fun that goes where you go.



Figure 8: Projector in a Home Setting

This image shows the compact projector casting a large image onto a wall in a living room, demonstrating its small size and powerful performance.

The projector utilizes advanced LED technology and a uniform illumination method to ensure bright and clear projection edges. Diffuse reflection technology is applied to protect your eyes from tiredness during prolonged viewing.

8. MEDIA INTEGRATION

8.1 Official Product Video

Video 1: CiBest W13 Mini Projector Overview

This video provides a brief overview of the CiBest W13 mini projector, showcasing its features and portability.

9. MAINTENANCE

- **Lens Cleaning:** Use a soft, lint-free cloth to gently clean the projector lens. Avoid abrasive materials or harsh chemicals.
- **Ventilation:** Regularly check that the air inlets and outlets are clear of dust and obstructions to prevent overheating.
- **Storage:** When not in use, store the projector in a cool, dry place, away from direct sunlight and extreme temperatures.

10. TROUBLESHOOTING

Problem	Possible Cause	Solution
No image/signal	Incorrect input source selected	Select the correct input source (HDMI, USB, AV) using the remote.
Blurry image	Focus not adjusted	Rotate the focus dial on the projector until the image is clear.
No sound	Volume too low or muted; external device audio settings	Increase projector volume. Check audio settings on the connected device. For some content, set audio to PCM format.
Projector overheats	Blocked ventilation	Ensure air inlets and outlets are clear. Allow the projector to rest for 20 minutes after 2 hours of continuous use.
Cannot connect to phone	Incorrect adapter or cable	Ensure you are using a data cable and the correct HDMI adapter for your phone model.

11. SPECIFICATIONS

Feature	Detail
Brand	CiBest
Model Name	W13
Display Resolution	1920 x 1080 (Full HD)

Feature	Detail
Display Type	LCD
Brightness	8000 Lumen
Contrast Ratio	8000:1
Connectivity Technology	3.5mm Jack, HDMI, USB
Form Factor	Portable
Item Weight	0.52 Kilograms
Minimum Image Size	30 Inches
Maximum Image Size	200 Inches
Minimum Throw Distance	2.72 Feet
Maximum Throw Distance	11 Feet
Power Input	AC 100-240V 50/60Hz
Power Output	DC 12V - 2.5A
Power Consumption	27W

12. WARRANTY AND SUPPORT

CiBest offers a three-year product replacement warranty and lifetime after-sales service for the W13 Mini Projector.

If you have any questions or encounter problems, please contact CiBest customer service directly. You can find support information on the official CiBest website or through your purchase platform.

For 24/7 live chat support and to activate your 12-month warranty, visit <https://www.top-cibest.com>

Email support: support@cibest-usa.com

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question