

LICAEEVEY LICAEEVEYpmhb948fv6-13

LICAEEVEY 12x32 Digital Binoculars with Camera User Manual

Model: LICAEEVEYpmhb948fv6-13

- Box
- Setup
- Operation
- Maintenance
- Introduction
- What's in the
- Troubleshooting
- Specifications
- Warranty & Support

1. INTRODUCTION

Thank you for choosing the LICAEEVEY 12x32 Digital Binoculars with Camera. This device combines high-quality optical observation with advanced digital imaging capabilities, allowing you to capture stunning 48MP photos and 2.5K Full HD videos. Designed for outdoor enthusiasts, concert-goers, and bird watchers, these binoculars offer a clear and magnified view of distant subjects while simultaneously recording your experiences. Please read this manual thoroughly to understand the features and proper operation of your new device.

HD Binoculars

Binoculars Built-in Camera



Image 1.1: The LICAEEVEY 12x32 Digital Binoculars with Camera, showcasing its integrated design.

2. WHAT'S IN THE BOX

Carefully unpack your LICAEEVEY Digital Binoculars and ensure all items are present:

- 1 x LICAEEVEY Digital Binoculars
- 1 x Cleaning Cloth
- 1 x USB Cable (Type-C)
- 1 x User Manual
- 1 x Neck Strap



Image 2.1: All components included in the product package.

3. SETUP

3.1 Charging the Battery

The device is equipped with a built-in 1000mAh rechargeable Li-battery. Before first use, fully charge the binoculars.

1. Connect the provided USB Type-C cable to the charging port on the binoculars.
2. Connect the other end of the USB cable to a standard USB power adapter (not included) or a computer's USB port.
3. The charging indicator light will illuminate. Once fully charged, the indicator may change color or turn off.

A full charge provides approximately 4 hours of continuous video recording.

4 Hours continuously video recording

Built in 1000mah Rechargeable Li Battery



Image 3.1: Illustration of the binoculars' 1000mAh rechargeable battery for extended use.

3.2 Inserting a Memory Card

A small memory card (MicroSD) is required to store photos and videos. The device supports up to 128GB.

1. Locate the memory card slot, usually protected by a rubber flap, on the side of the binoculars.
2. Gently insert the MicroSD card into the slot with the gold contacts facing down, until it clicks into place.
3. To remove, push the card in slightly until it springs out.

3.3 Attaching the Neck Strap

Attach the provided neck strap to the designated loops on the binoculars to prevent accidental drops and for comfortable carrying.

3.4 Tripod Mounting

The binoculars feature a fixed bracket with mounting holes at the bottom, allowing them to be mounted on a standard tripod for stable observation and recording.

FIXED BRACKET

HANDY AND SAFE, CAN BE MOUNTED ON A TRIPOD

THERE ARE BRACKET MOUNTING HOLES AT THE BOTTOM



Image 3.2: The binoculars can be mounted on a tripod for enhanced stability.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- To power on, press and hold the Power button until the LCD display illuminates.
- To power off, press and hold the Power button again until the display turns off.

4.2 Basic Observation

Use the binoculars like traditional binoculars to observe distant objects. Adjust the focus wheel for a clear image.

4.3 Using the 2.4-inch LCD Display

The integrated 2.4-inch color LCD display provides a real-time view of what the camera sees, allows for menu navigation, and playback of recorded media.

2.4 Inch HD Large IPS Display

The HD display looks more comfortable



Image 4.1: The 2.4-inch HD IPS display provides a comfortable viewing experience.

4.4 Zoom Functionality

The binoculars feature 12x optical zoom and up to 8x digital zoom.

- **Optical Zoom (12x):** Provides a clear, magnified view through the lenses.
- **Digital Zoom (up to 8x):** Use the zoom buttons (refer to device controls) to digitally magnify the image on the LCD display. Note that digital zoom may reduce image quality.

12 times Clear amplification

Field of vision: 96m/1000m, better observation



Image 4.2: Visual representation of 12x optical and 8x digital amplification.

4.5 Taking Photos (48MP)

To capture high-resolution 48MP still images:

1. Ensure the device is powered on and a memory card is inserted.
2. Switch to Photo mode (refer to the mode button on your device).
3. Frame your subject using the LCD display.
4. Press the Shutter button to take a photo. The image will be saved to the memory card.

4.6 Recording Videos (2.5K)

To record 2.5K Full HD videos:

1. Ensure the device is powered on and a memory card is inserted.
2. Switch to Video mode (refer to the mode button on your device).
3. Frame your subject using the LCD display.

4. Press the Record button to start recording. A recording indicator will appear on the display.
5. Press the Record button again to stop recording. The video will be saved to the memory card.

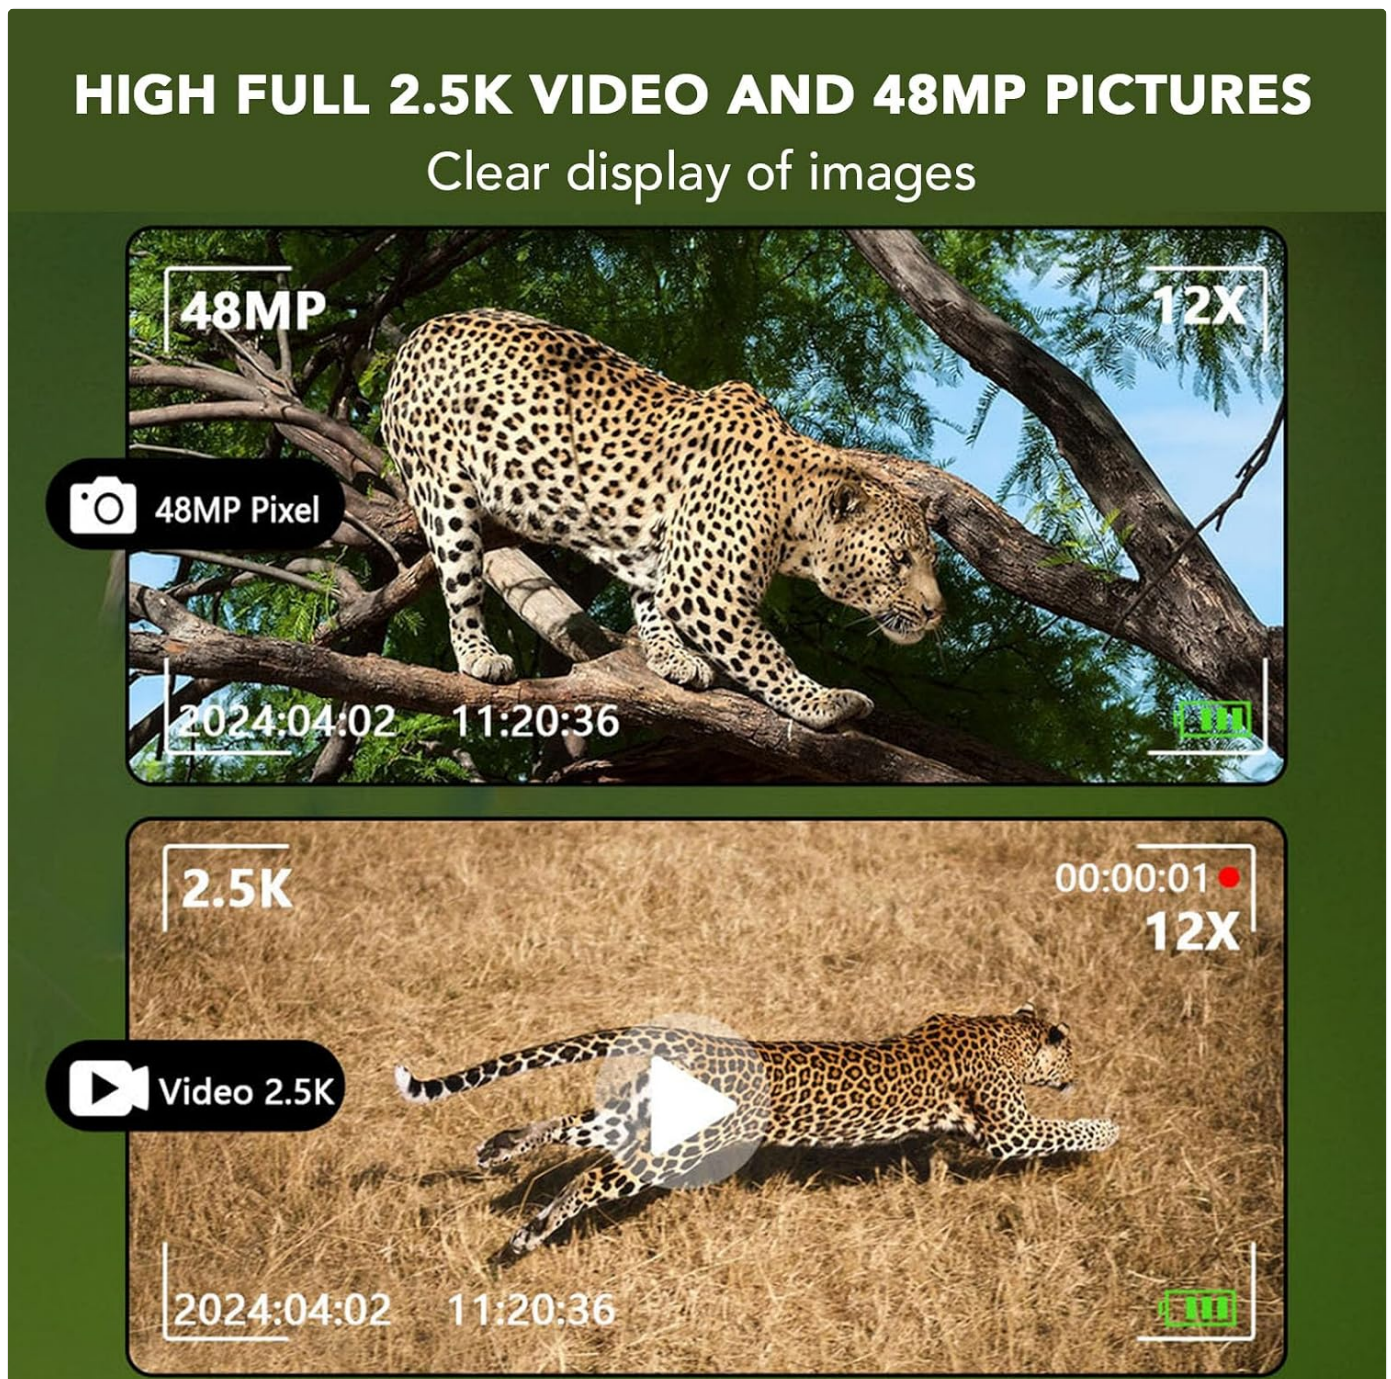


Image 4.3: High-resolution 48MP photos and 2.5K video capabilities.

4.7 Connecting to a Computer

To transfer photos and videos to your computer:

1. Connect the binoculars to your computer using the provided USB Type-C cable.
2. The binoculars should appear as a removable disk drive on your computer.
3. Open the drive to access and transfer your files.

5. MAINTENANCE

5.1 Cleaning the Lenses and Display

Use the provided cleaning cloth to gently wipe the objective lenses, eyepieces, and LCD display. Avoid using abrasive materials or harsh chemicals, as they can damage the coatings.

5.2 Storage

When not in use, store the binoculars in a cool, dry place, away from direct sunlight and extreme temperatures. Ensure lens caps are in place to protect the lenses.

5.3 Battery Care

To prolong battery life, avoid fully discharging the battery frequently. If storing for an extended period, charge the battery to about 50% every few months.

6. TROUBLESHOOTING

6.1 Device Does Not Power On

- Ensure the battery is fully charged. Connect the device to a power source and allow it to charge for at least 30 minutes.
- Press and hold the Power button firmly for a few seconds.

6.2 Blurry Images/Videos

- Adjust the focus wheel on the binoculars until the image is clear.
- Ensure the lenses are clean and free from smudges or dust.
- For digital images, ensure sufficient lighting and stable conditions. Excessive digital zoom can also lead to blurriness.

6.3 Cannot Save Photos/Videos

- Verify that a compatible MicroSD card is properly inserted into the slot.
- Check if the memory card is full. If so, transfer files to a computer and delete them from the card, or replace the card.
- Ensure the memory card is not locked (if it has a lock switch).
- Try formatting the memory card through the device's menu (this will erase all data).

6.4 Device Not Recognized by Computer

- Ensure the USB cable is securely connected to both the binoculars and the computer.
- Try a different USB port on your computer.
- Ensure the binoculars are powered on when connected to the computer.
- Try restarting both the binoculars and the computer.

7. SPECIFICATIONS

Brand	LICAEVEY
Model Name	LICAEVEYpmhb948fv6-13
Display	2.4 inch color 320x240 LCD
Image Resolution	Maximum 48MP
Video Resolution	Maximum 2.5K Full HD
Optical Zoom	12x
Digital Zoom	8x

Objective Lens Diameter	32 Millimeters
Field of View	96m/1000m
Battery	Built-in 1000mAh Li-battery
Interface	Type-C USB
Memory Card Support	Small Memory Card (MicroSD), Maximum 128GB
Age Range (Description)	Adult

8. WARRANTY AND SUPPORT

8.1 Manufacturer Warranty

This product comes with a manufacturer warranty for 90 days from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

8.2 Customer Support

For technical assistance, warranty claims, or any questions regarding your LICAEEVEY Digital Binoculars, please contact our customer support team. Refer to the contact information provided with your purchase or visit the official LICAEEVEY website for support details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question