

CHULUX CL-NM831V-MB

CHULUX Bafè-Pro Single Serve Espresso Machine Instruction Manual

Model: CL-NM831V-MB

[Information](#) [Components](#) [Setup](#) [Operating](#) [Introduction](#) [Safety](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides instructions for the safe and efficient use of your CHULUX Bafè-Pro Single Serve Espresso Machine, designed for Nespresso Original Pods. Please read this manual thoroughly before first use and retain it for future reference.

The CHULUX Bafè-Pro Espresso Machine features a 1400W high power system and a 20 Bar Italian pump for optimal espresso extraction. It offers one-touch operation for both espresso and lungo, with a rapid preheating time of 15-20 seconds. The machine includes a 24 oz removable water reservoir and an auto-eject capsule system for convenience. Its compact design is suitable for various spaces.



Image 1.1: CHULUX Bafè-Pro Single Serve Espresso Machine in Black.

2. IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury, do not immerse cord, plugs, or the appliance in water or other

liquid.

- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- All water or coffee-contact parts are made from food-safe materials.

3. PRODUCT COMPONENTS

Familiarize yourself with the main parts of your CHULUX Bafè-Pro Espresso Machine:

- **Water Reservoir:** Removable tank for holding water. Capacity: 24 fluid ounces.
- **Capsule Compartment:** Area where Nespresso Original Pods are inserted.
- **Brewing Buttons:** Separate buttons for Espresso and Lungo selections.
- **Coffee Outlet:** Where the brewed coffee dispenses.
- **Drip Tray:** Removable and foldable tray to catch drips and accommodate different cup sizes.
- **Used Capsule Container:** Collects ejected used capsules.
- **Power Button:** To turn the machine on/off.



Image 3.1: Overview of key components.

4. INITIAL SETUP

Follow these steps before using your espresso machine for the first time:

1. **Unpack:** Carefully remove all packaging materials and place the machine on a stable, flat surface.

2. **Clean:** Wash the water reservoir, drip tray, and used capsule container with warm, soapy water. Rinse thoroughly and dry.
3. **Fill Water Reservoir:** Fill the removable water reservoir with fresh, potable water up to the MAX fill line. Ensure it is securely placed back on the machine.
4. **Power On:** Plug the machine into a grounded electrical outlet. Press the power button. The brewing buttons will flash as the machine preheats.
5. **Initial Rinse Cycle:** Place a large cup under the coffee outlet. Once the brewing buttons illuminate steadily (indicating preheating is complete), press either the Espresso or Lungo button to run a cycle without a capsule. This cleans the internal system. Repeat this process 2-3 times.



Image 4.1: Filling the removable water tank.

Setup and Brewing Demonstration

Your browser does not support the video tag.

Video 4.1: A demonstration of the machine's features and brewing process.

5. OPERATING INSTRUCTIONS

Brewing espresso or lungo with your CHULUX Bafè-Pro is a simple one-touch process:

1. **Ensure Water:** Make sure the water reservoir is filled with fresh water.
2. **Power On & Preheat:** Press the power button. The machine will begin preheating, indicated by flashing brewing buttons. Wait for the buttons to illuminate steadily (approximately 15-20 seconds).
3. **Insert Capsule:** Lift the lever to open the capsule compartment. Insert a Nespresso Original Pod. Close the lever firmly.
4. **Place Cup:** Place your desired cup under the coffee outlet. The foldable drip tray can be adjusted for taller cups.
5. **Select Brew:** Press the **Espresso** button for a standard shot or the **Lungo** button for a longer coffee. The machine will automatically brew and stop.
6. **Capsule Ejection:** After brewing, lift the lever again to automatically eject the used capsule into the internal container. Close the lever.



Brew with Espresso Pods

Image 5.1: Inserting an espresso pod.



Image 5.2: Selecting Espresso or Lungo brew.

Brewing Demonstration

Your browser does not support the video tag.

Video 5.1: A detailed demonstration of brewing espresso with the machine.

6. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your espresso machine.

Daily Cleaning

1. **Empty Used Capsule Container:** Lift the lever to eject any remaining capsules. Remove the used capsule container and dispose of the capsules. Wash the container with warm, soapy water, rinse, and dry.
2. **Clean Drip Tray:** Remove the drip tray and empty any collected liquid. Wash with warm, soapy water, rinse, and dry.

3. **Wipe Exterior:** Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or immerse the machine in water.



Removable Parts for **Easy Cleaning**

Image 6.1: Removing the used capsule drawer.

CHULUX Espresso Capsule Machine 831V

9.53"

■ Height

4.57"

■ Width

13.94"

■ Depth



Image 6.2: Removable parts are dishwasher safe for easy cleaning.

Descaling (Monthly or as needed)

Descaling is important to remove mineral buildup and maintain machine performance. Use a descaling solution specifically designed for coffee machines and follow the product's instructions. Generally, the process involves:

1. Empty the water reservoir and used capsule container.
2. Fill the water reservoir with descaling solution mixed with water according to the descaler's instructions.
3. Place a large container under the coffee outlet.
4. Run several brewing cycles until the reservoir is empty.
5. Rinse the reservoir thoroughly and fill with fresh water.
6. Run several cycles with fresh water to rinse out any descaling residue.

7. TROUBLESHOOTING

If you encounter issues with your espresso machine, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No coffee dispenses.	Water reservoir is empty. Capsule not inserted correctly. Machine not preheated.	Fill water reservoir. Ensure capsule is properly seated and lever is closed. Wait for brewing buttons to stop flashing.
Coffee is not hot enough.	Machine not fully preheated. Cup is cold.	Allow machine to fully preheat until buttons are steady. Preheat cup with hot water.
Water leaks from machine.	Water reservoir not seated correctly. Drip tray is full.	Ensure water reservoir is firmly in place. Empty and clean the drip tray.
Machine does not turn on.	Not plugged in. Power outage.	Check power cord connection. Verify power outlet is functional.
Brewing buttons continue to flash.	Machine is still preheating.	Wait for approximately 15-20 seconds until the buttons illuminate steadily.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Detail
Brand	CHULUX
Model Name	Eespresso Maker
Model Number	CL-NM831V-MB
Color	Black
Product Dimensions (D x W x H)	9.53"D x 4.57"W x 13.94"H
Item Weight	6.2 pounds
Capacity	24 fluid ounces (Water Tank)
Wattage	1400 watts
Voltage	120 volts
Output Pressure	20 bar
Coffee Input Type	Pod
Compatible Coffee Pods	Nespresso Original
Operation Mode	Semi-Automatic

Feature	Detail
Special Features	15-20s Fast Preheating, Auto Shut-Off (after 5 mins), Compatible with Nes Original Pod, One Button Operation, Single and Double Shot, Food-Safe Materials
Included Components	Capsule Tray, Removable Drip Tray, Removable Water Tank



1400W

Fast Brewing



20 Bar

For Rich Crema



Just **2 Min** to Enjoy Your Morning Espresso

Image 8.1: Key performance features.

CHULUX Espresso Capsule Machine 831V

9.53"

■ Height

4.57"

■ Width

13.94"

■ Depth



Image 8.2: Product dimensions.

9. WARRANTY AND SUPPORT

Warranty Information

Your CHULUX Bafè-Pro Single Serve Espresso Machine is covered by a manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included with your product for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

Customer Support

For technical assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact CHULUX customer support. Contact details can typically be found on the product packaging, the official CHULUX website, or your purchase receipt.

When contacting support, please have your model number (CL-NM831V-MB) and purchase date available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question