

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [Seesii](#) /

> [SEESII M6 Pro 2026 6-inch Cordless Mini Chainsaw User Manual](#)

Seesii M6 Pro 2026

SEESII M6 Pro 2026 6-inch Cordless Mini Chainsaw User Manual

Brand: Seesii | Model: M6 Pro 2026

1. INTRODUCTION AND SAFETY WARNINGS

This manual contains important information regarding the safe operation, assembly, maintenance, and troubleshooting of your SEESII M6 Pro 2026 6-inch Cordless Mini Chainsaw. Read all instructions carefully before use to prevent injury and ensure proper function.

General Safety Warnings:

- Always wear appropriate personal protective equipment (PPE), including safety glasses, gloves, and hearing protection.
- Keep hands and body parts away from the chain when the chainsaw is operating.
- Ensure the work area is clear of bystanders, especially children and pets.
- Do not operate the chainsaw in wet conditions or in the presence of flammable liquids or gases.
- Always remove the battery before performing any assembly, adjustment, cleaning, or maintenance.
- Use only original SEESII batteries and chargers.
- Be aware of kickback. Maintain a firm grip with both hands and position your body to avoid the chain's path.
- Do not overreach. Maintain proper footing and balance at all times.
- Store the chainsaw and its accessories in a dry, secure place, out of reach of children.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any items are missing or damaged, contact customer support.

- 1 x SEESII Mini Chainsaw
- 2 x 4000mAh Lithium Batteries
- 1 x Battery Charger
- 2 x Chains (one pre-installed)
- 1 x Guide Bar

- 1 x Chain Guard
- 1 x Screwdriver
- 1 x Pair of Gloves
- 1 x Carrying Case
- 1 x User Manual (this document)



Raddoppia le catene, raddoppia la potenza

Due Catene in Acciaio Inossidabile ad Alta Precisione garantiscono un Utilizzo di Lunga Durata

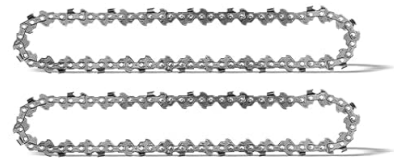


Figure 2.1: Included components of the SEESII Mini Chainsaw kit.

3. SETUP AND ASSEMBLY

3.1. Battery Charging and Installation

1. Insert the battery into the charger. Ensure proper alignment.
2. Plug the charger into a standard power outlet. The indicator light on the charger will show the charging status.
3. Once fully charged, remove the battery from the charger.
4. Align the charged battery with the battery slot on the chainsaw handle and slide it in until it clicks securely into place.
5. To remove the battery, press the release button and slide the battery out.



Figure 3.1: Battery installation on the SEESII Mini Chainsaw.

3.2. Chain and Guide Bar Assembly (if not pre-installed)

1. Ensure the battery is removed from the chainsaw.
2. Remove the chain guard cover by loosening the knob.
3. Place the chain around the guide bar, ensuring the cutting edges are facing the correct direction (refer to the arrow on the guide bar).
4. Fit the chain and guide bar onto the chainsaw body, engaging the chain with the drive sprocket.
5. Replace the chain guard cover and tighten the knob slightly.
6. Adjust the chain tension using the tensioning screw until the chain is snug but can still be pulled freely around the guide bar by hand. There should be minimal slack.
7. Fully tighten the knob to secure the guide bar and chain.

3.3. Chain Lubrication

The SEESII M6 Pro 2026 features a pump-activated automatic lubrication system. Proper lubrication is crucial for chain longevity and cutting performance.

1. Locate the oil reservoir cap on the chainsaw body.
2. Unscrew the cap and fill the reservoir with appropriate chainsaw bar and chain oil. Do not overfill.

3. Replace the cap securely.
4. During operation, periodically press the oil pump button to lubricate the chain. The system is designed to prevent excessive oil leakage when not in use.



Figure 3.2: Activating the pump for chain lubrication.

4. OPERATION

4.1. Starting and Stopping the Chainsaw

1. Ensure the battery is fully charged and correctly installed.
2. To start, press and hold the safety lock button (usually located near the trigger) with one hand, then squeeze the trigger with the other. The chainsaw will not operate without the safety lock engaged.
3. To stop, release the trigger. The chain will stop immediately.

4.2. Cutting Techniques

- **General Cutting:** Hold the chainsaw firmly with both hands. Position the chainsaw so the bottom of the guide bar contacts the wood. Allow the chain to reach full speed before beginning the cut. Apply light, steady pressure.
- **Pruning Branches:** When pruning, support the branch to prevent it from pinching the chain. Make

relief cuts if necessary to avoid splitting the main limb.

- **Avoiding Kickback:** Kickback can occur when the moving chain at the tip of the guide bar contacts an object, or when the wood closes in and pinches the chain in the cut. Always be aware of the guide bar tip and avoid cutting with it.

Perché rischiare? Il nostro prodotto è 3 volte più sicuro degli altri



* * * Ai sensi del Regolamento UE sulle batterie, le batterie da 5000 mAh non devono superare i 18 V di tensione, altrimenti sussiste un rischio di esplosione.

Figure 4.1: Proper technique for cutting a log with the mini chainsaw.



Figure 4.2: Using the mini chainsaw for pruning.

4.3. Video Demonstration

Your browser does not support the video tag.

Video 4.1: Short demonstration of the SEESII mini chainsaw in use, showing cutting action.

5. MAINTENANCE

Regular maintenance ensures the longevity and safe operation of your chainsaw. Always remove the battery before any maintenance.

5.1. Cleaning

- After each use, clean sawdust and debris from the guide bar, chain, and motor housing.
- Use a brush or compressed air. Do not use water or solvents directly on electrical components.

5.2. Chain Sharpening and Replacement

- A dull chain will reduce cutting efficiency and increase the risk of kickback. Sharpen the chain regularly or replace it when necessary.
- Refer to the chain manufacturer's instructions for proper sharpening techniques.

- When replacing the chain, ensure it is the correct size and type for your SEESII M6 Pro 2026 model.



Kit completo pronto all'uso

Custodia robusta inclusa

Figure 5.1: Replacement chains for the SEESII Mini Chainsaw.

5.3. Battery Care

- Store batteries in a cool, dry place away from direct sunlight and extreme temperatures.
- Do not store fully discharged batteries for extended periods. Charge them periodically.
- If the battery shows signs of damage or overheating, discontinue use immediately.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Chainsaw does not start.	Battery not charged or improperly installed. Safety lock not engaged.	Charge battery, ensure it's clicked into place. Press safety lock button before squeezing trigger.
Chain is dull or not cutting efficiently.	Chain is dull. Incorrect chain tension.	Sharpen or replace the chain. Adjust chain tension.

Problem	Possible Cause	Solution
Chain stops during operation.	Overload protection activated. Battery low.	Reduce cutting pressure. Charge or replace battery.
Excessive vibration or noise.	Loose chain. Damaged chain or guide bar.	Adjust chain tension. Inspect chain and guide bar for damage and replace if necessary.

7. SPECIFICATIONS

- **Brand:** Seesii
- **Model Number:** M6 Pro 2026
- **Power Source:** Battery powered
- **Horsepower:** 900 Watts
- **Product Dimensions:** 32.2L x 8.9W x 7H cm
- **Chain Speed:** 23 Ft/s (approximately 10 m/s)
- **Battery Capacity:** 2 x 4000mAh (21V)
- **Guide Bar Length:** 6 inches

8. WARRANTY AND SUPPORT

SEESII offers a **3-year warranty** for this product. This warranty covers manufacturing defects and ensures product quality. For any questions, concerns, or warranty claims, please contact SEESII customer support.

Please retain your proof of purchase for warranty validation.

Contact Information: Refer to the contact details provided on the product packaging or the official SEESII website for the most up-to-date support information.