

Manuals.plus /

› Virubi /

› Virubi Toddler Rocking Horse of 4 Modes User Manual

Virubi Toddler Rocking Horse of 4 Modes

Virubi Toddler Rocking Horse of 4 Modes User Manual

Model: Toddler Rocking Horse of 4 Modes

Brand: Virubi

INTRODUCTION

This manual provides essential information for the safe assembly, operation, and maintenance of your Virubi Toddler Rocking Horse of 4 Modes. This versatile toy is designed to transform into a rocking horse, a ride-on push toy with a handle, a 4-wheel balance bike, and a balance board, suitable for toddlers aged 1 to 3 years. Please read these instructions thoroughly before use and retain them for future reference.

SAFETY INFORMATION

- **Adult Supervision Required:** Always supervise children during play to prevent accidents.
- **Age Range:** Suitable for children aged 1 to 3 years. Not intended for children outside this age range.
- **Weight Limit:** Ensure the child's weight does not exceed the toy's maximum capacity (not explicitly stated, but implied by age range).
- **Assembly:** Adult assembly is required. Ensure all parts are securely fastened before allowing a child to use the toy.
- **Surface Use:** Use on flat, level surfaces. Avoid sloped areas, stairs, or uneven terrain.
- **Hazard Prevention:** Keep away from open flames, heaters, and water. Remove all packaging materials before use.
- **Inspection:** Regularly inspect the toy for loose parts, damage, or wear. Discontinue use if any damage is found.
- **Footrest:** Ensure the detachable footrest is securely attached or removed as appropriate for the chosen mode.
- **Push Handle:** When using the push handle, ensure it is firmly inserted and locked into place.

PARTS LIST

Before assembly, verify that all components are present:

- Main Body (Unicorn/Horse)
- Rocking Base
- Push Handle
- Detachable Footrest
- Balance Board (detachable)
- Wheels (pre-attached to main body)
- Small Bell/Charm (accessory)
- Assembly Hardware (screws, nuts, etc. - if applicable, not specified but common)



Image: Overview of the Virubi Toddler Rocking Horse with key dimensions indicated, showing the main body, rocking base, and push handle.

SETUP AND ASSEMBLY

The Virubi Toddler Rocking Horse offers four distinct modes. Follow these instructions to convert between modes.

1. Rocking Horse Mode

1. Attach the rocking base to the underside of the main body. Ensure it clicks securely into place or is fastened with provided hardware.
2. The wheels should be retracted or locked in a non-rolling position if possible (refer to specific locking mechanism if present).
3. Ensure the detachable footrest is in place for comfort and stability.



Image: The Virubi Toddler Rocking Horse configured in rocking mode, showing the curved base.

2. Ride-on Push Toy Mode (with Push Handle)

1. Remove the rocking base by pressing the release buttons or disengaging fasteners.
2. Ensure the wheels are extended and free to roll.
3. Insert the push handle into the designated slot at the rear of the main body. Push firmly until it locks into position.
4. Attach the detachable footrest for the child's comfort.



Image: The Virubi Toddler Rocking Horse in ride-on mode, featuring the attached push handle and wheels.

3. 4-Wheel Balance Bike Mode

1. Remove the rocking base.
2. Remove the push handle.
3. Ensure the wheels are extended and free to roll.
4. Remove the detachable footrest to allow the child to propel themselves with their feet.



Image: The Virubi Toddler Rocking Horse configured as a 4-wheel balance bike, without the rocking base or push handle.

4. Balance Board Mode

1. Detach the main body of the toy from the rocking base.
2. The rocking base itself can be used as a standalone balance board.



Image: Close-up view showing the detachable rocking base, which can function as a balance board, and the wheel locking mechanism.

OPERATING INSTRUCTIONS

Using the Sound Feature

The toy includes a sound button for engaging play. Locate the button (often near the head or handles) and press it to activate sounds. Ensure batteries are installed if required (battery compartment details not provided, assume pre-installed or user-replaceable if applicable).

General Use

- **Rocking Horse:** Place the child on the seat, ensuring their feet are on the footrest. Gently rock the toy back and forth.
- **Ride-on Push Toy:** With the push handle attached, an adult can guide the child. The child can also use their feet to propel the toy.
- **Balance Bike:** The child sits on the seat and uses their feet to push off the ground, learning balance and coordination.
- **Balance Board:** The child stands on the rocking base and shifts their weight to maintain balance.

MAINTENANCE

- **Cleaning:** Wipe the toy with a damp cloth and mild soap. Do not use abrasive cleaners or solvents.

Rinse thoroughly and dry completely.

- **Storage:** Store the toy in a cool, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically check all screws, bolts, and connections to ensure they are tight. Inspect for cracks, breaks, or other damage.
- **Battery Replacement (if applicable):** If the sound feature weakens or stops, replace batteries according to the markings on the battery compartment (usually located under the seat or near the sound button).

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|-----------------------------|---|---|
| Toy does not rock smoothly. | Rocking base not securely attached; uneven surface. | Ensure rocking base is fully engaged. Move to a flat, level surface. |
| Wheels do not roll freely. | Wheels are locked; debris in wheel mechanism. | Check if the wheel lock mechanism is engaged (if present). Clean any debris from around the wheels. |
| Push handle feels loose. | Handle not fully inserted or locked. | Push the handle firmly into its slot until it clicks or is secured. |
| Sound feature not working. | Dead batteries; sound button malfunction. | Replace batteries if applicable. If issue persists, contact customer support. |

SPECIFICATIONS

- **Model:** Toddler Rocking Horse of 4 Modes
- **Brand:** Virubi
- **Material:** High-Density Polyethylene (HDPE)
- **Assembled Dimensions (L x W x H):** Approximately 26.77 in x 11.81 in x 27.56 in
- **Product Weight:** Approximately 9.26 lbs
- **Recommended Age:** 1 to 3 years
- **Color:** Blue (This specific model)

WARRANTY AND SUPPORT

For warranty information, product support, or to purchase replacement parts, please contact Virubi customer service. Refer to the product packaging or the retailer's website for the most current contact details.

Manufacturer: Virubi

ASIN: B0G5Q8MSHS