

[Manuals.plus](#) /

› [GOEBLESON](#) /

› GOEBLESON Reading Floor Lamp WW16LD05 User Manual

GOEBLESON WW16LD05

GOEBLESON Reading Floor Lamp WW16LD05 User Manual

Model: WW16LD05

1. INTRODUCTION

Thank you for choosing the GOEBLESON Reading Floor Lamp WW16LD05. This LED floor lamp is designed to provide versatile and comfortable lighting for various activities such as reading, crafting, and general illumination. It features adjustable color temperature, brightness, beam spread, a flexible gooseneck, and convenient control options.

2. PACKAGE CONTENTS

Please check the package for the following items:

- Floor Lamp Assembly (multiple sections)
- Weighted Base
- Power Adapter
- Remote Control
- User Manual

3. SETUP AND ASSEMBLY

Follow these steps to assemble your GOEBLESON Reading Floor Lamp:

1. **Attach the Base:** Carefully screw the bottom pole section into the weighted base until secure.
2. **Connect Pole Sections:** Connect the remaining pole sections by screwing them clockwise. Ensure each section is tightly fastened to prevent wobbling.
3. **Attach the Lamp Head:** Screw the lamp head (with the flexible gooseneck) onto the top pole section.

4. **Connect Power:** Plug the power adapter into the lamp's power port, then plug the adapter into a standard electrical outlet.



Image: Easy Setup - Visual guide for lamp assembly.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- **Touch Control:** Tap the power button on the lamp pole to turn the lamp on or off.
- **Remote Control:** Press the power button on the remote control to turn the lamp on or off.

4.2 Adjusting Brightness

The lamp supports 4 brightness levels: 10%, 25%, 50%, and 100%.

- **Touch Control:** Use the '+' and '-' buttons on the lamp pole to cycle through brightness levels.
- **Remote Control:** Use the dedicated brightness buttons on the remote control to adjust.

4.3 Adjusting Color Temperature

The lamp offers adjustable color temperatures from 2700K (warm white) to 6000K (cool white).

- **Touch Control:** Use the color temperature button on the lamp pole to cycle through available color temperatures.
- **Remote Control:** Use the dedicated color temperature buttons on the remote control to adjust.

4.4 Adjusting Beam Spread

The lamp features 3 beam modes: wide, medium, and spot.

- **Manual Adjustment:** Rotate the lamp head to change the beam spread from a focused spot to a soft, wide glow.

Change Beam Spread

Go from a focused spot to a soft, wide glow.



Color Temperature: 2700K-6000K



Image: Change Beam Spread - Demonstrates rotating the lamp head for beam adjustment and various color temperatures.

4.5 1-Hour Timer Function

Activate the 1-hour timer for automatic shut-off.

- **Remote Control:** Press the timer button on the remote control to activate the 1-hour timer. The lamp will turn off automatically after one hour.

4.6 Memory Function

The lamp remembers your last lighting settings (brightness and color temperature) when turned off and on again, ensuring your preferred ambiance is restored.

5. FEATURES

- **Flexible Gooseneck:** The 360° adjustable gooseneck allows for precise light positioning, directing light exactly where needed for tasks or ambiance.

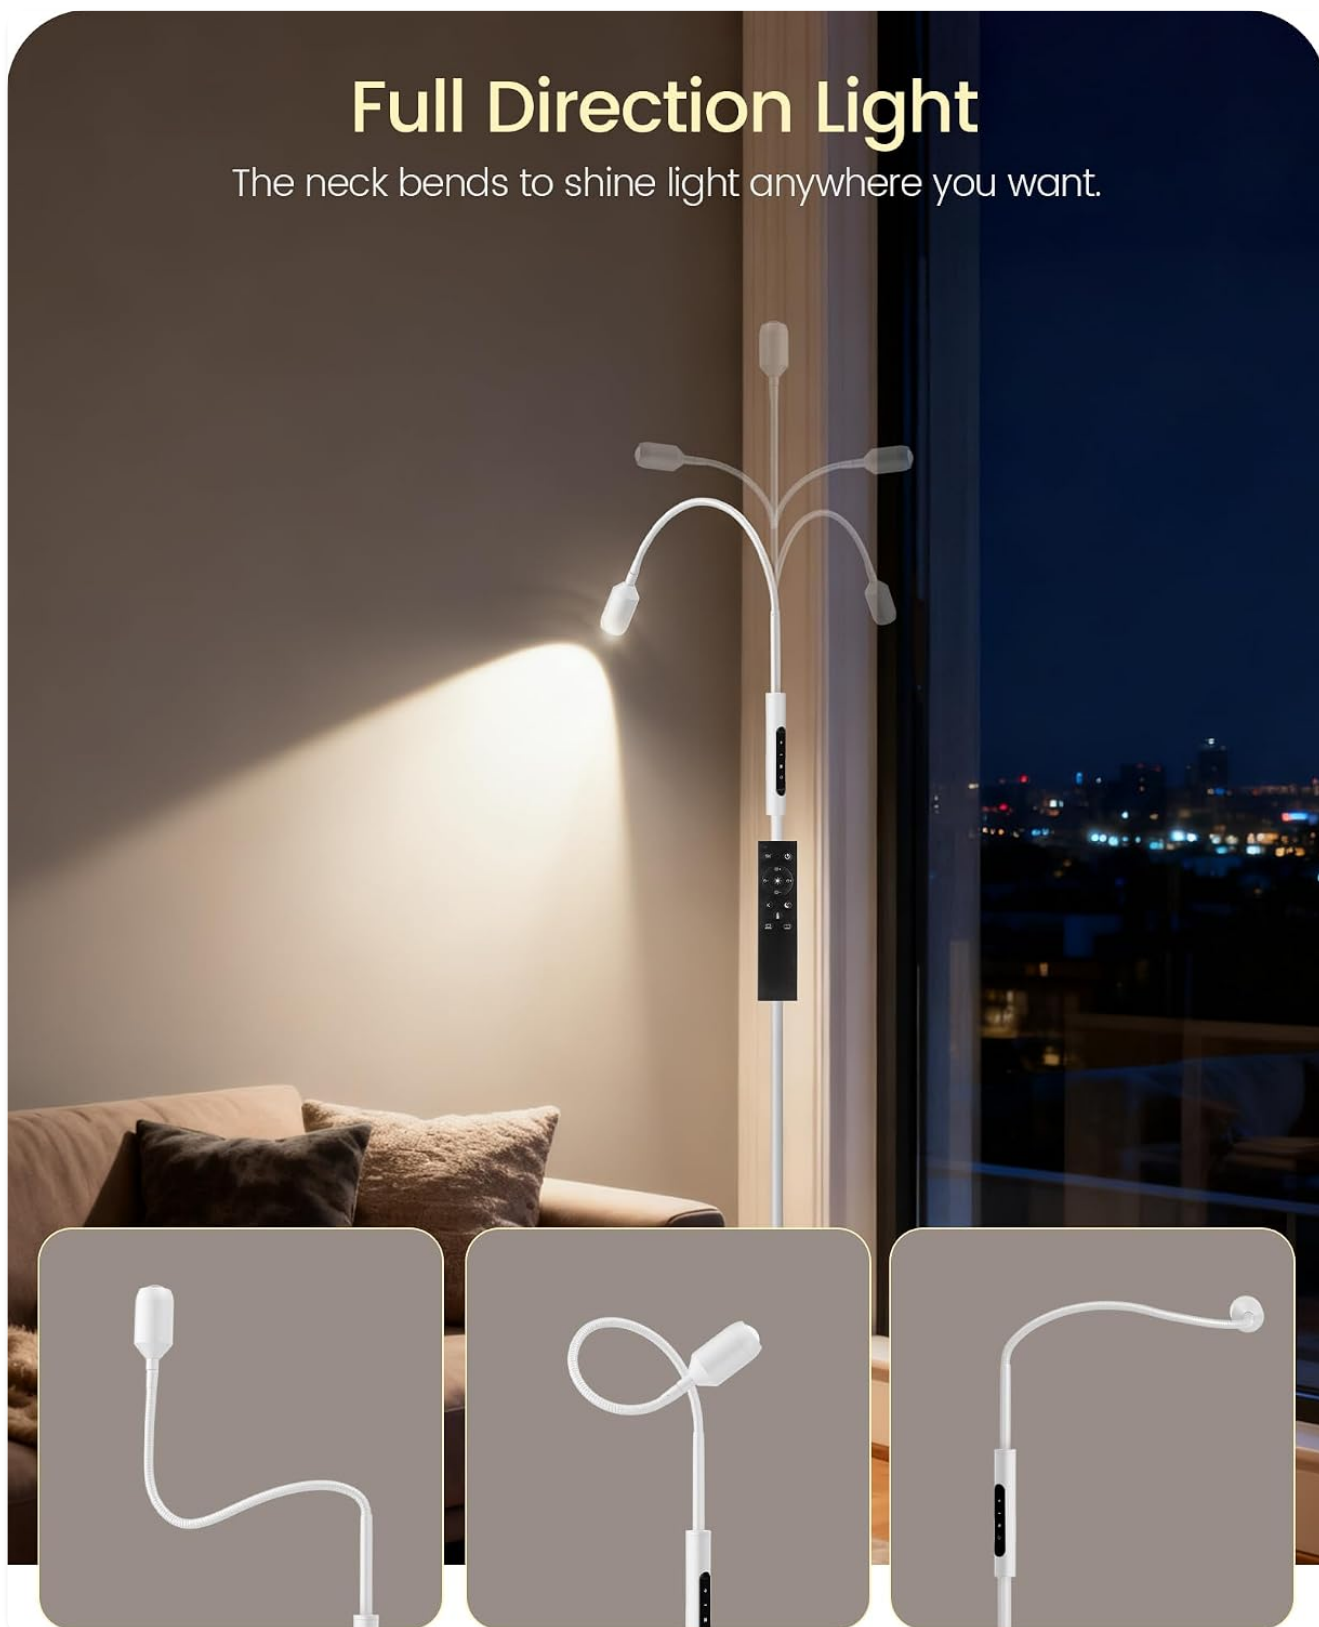


Image: Full Direction Light - The gooseneck bends to shine light anywhere you want.

- **Stable Base:** A sturdy, 5 lb weighted base prevents the lamp from wobbling or tipping, ensuring stability in any room.
- **Remote Control:** The included remote control provides convenient access to all lighting adjustments. It can be magnetically attached to the lamp pole for easy storage.
- **Touch Control:** Integrated touch controls on the lamp pole offer an alternative method for adjusting settings.



Image: Key Features - Bendable gooseneck, focus control, easy touch control, and sturdy base.

6. MAINTENANCE

- **Cleaning:** Disconnect the power before cleaning. Wipe the lamp with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Bulb Replacement:** The LED light source is integrated and not user-replaceable.
- **Storage:** If storing the lamp for an extended period, disassemble it and store it in its original packaging in a dry place.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	No power connection.	Ensure the power adapter is securely plugged into the lamp and the wall outlet. Check if the outlet is functional.
Remote control is not working.	Remote battery is low or depleted.	Replace the remote control battery. Ensure there are no obstructions between the remote and the lamp.
Light flickers or is dim.	Loose connection or power issue.	Check all lamp pole connections for tightness. Ensure the power adapter is fully inserted. Try a different power outlet.
Cannot adjust brightness or color temperature.	Controls are unresponsive.	Ensure the lamp is powered on. If using the remote, check its battery. Try using the touch controls on the lamp pole.

8. SPECIFICATIONS

- **Model:** WW16LD05
- **Height:** 74.2 inches (188.5 cm)
- **Base Dimensions:** 9.1"D x 9.1"W
- **Item Weight:** 7.05 Pounds
- **Light Source:** Integrated LED
- **Power:** 6W
- **Color Temperature:** 2700K - 6000K (Adjustable)
- **Brightness Levels:** 10%, 25%, 50%, 100%
- **Beam Modes:** Wide, Medium, Spot (Adjustable)
- **Control Methods:** Touch Control, Remote Control
- **Material:** Metal
- **Indoor/Outdoor Usage:** Indoor Only

Bendable Any Angle

Position the light exactly where you need it.



Image: Product Dimensions - Detailed measurements of the lamp.

9. SAFETY INFORMATION

- Do not expose the lamp to water or high humidity.
- Ensure the lamp is placed on a stable, level surface to prevent tipping.
- Do not attempt to modify or repair the lamp yourself. Contact qualified personnel for service.

- Keep the remote control and small parts away from children.
- Use only the provided power adapter.

10. WARRANTY AND SUPPORT

GOEBLESON products come with a standard manufacturer's warranty. For specific warranty details, product support, or to report any issues, please refer to the contact information provided with your purchase or visit the official GOEBLESON website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question