

[Manuals.plus](#) /

› [AGXOV](#) /

› AGXOV D28 MP3 Player User Manual

AGXOV D28

AGXOV D28 MP3 Player User Manual

Model: D28

INTRODUCTION

Thank you for choosing the AGXOV D28 MP3 Player. This device is designed to provide a versatile portable audio experience with additional features such as FM radio, voice recording, and e-book reading. This manual will guide you through the setup, operation, and maintenance of your new MP3 player.

Wide Range of Functions



Image: Front view of the AGXOV D28 MP3 Player, displaying its screen interface and physical control buttons.

PACKAGE CONTENTS

Please check the package for the following items:

- AGXOV D28 MP3 Player x 1
- USB-C Cable x 1

- User Manual x 1
- Wired Headphones x 1

Package includes:

- ① User Manual
- ② MP3 Player
- ③ USB Cable
- ④ Earphones



Image: The AGXOV D28 MP3 Player, USB-C cable, user manual, and wired headphones laid out as they appear in the product package.

PRODUCT OVERVIEW

Controls and Ports

Familiarize yourself with the physical controls and ports of your AGXOV D28 MP3 Player:

Touchscreen + Buttons, More Control Freedom



Image: A detailed view of the AGXOV D28 MP3 Player highlighting its touchscreen and physical buttons. Labels indicate functions such as Back, Play/Pause, Previous, Next, and the multi-functional Volume/Scroll knob.

- **Touchscreen:** Primary interface for navigation and selection.
- **Volume/Scroll Knob:** Adjusts volume and can be used for scrolling through menus.
- **Play/Pause Button:** Starts or pauses playback.
- **Previous/Next Buttons:** Skips to the previous or next track/item.
- **Back Button:** Returns to the previous menu or screen.

- **USB-C Port:** For charging and data transfer.
- **3.5mm Headphone Jack:** For wired audio output.
- **Micro SD Card Slot:** For expandable storage.

SETUP

1. Charging the Device

Before first use, fully charge your MP3 player. Connect the included USB-C cable to the player's USB-C port and the other end to a USB power adapter (not included) or a computer's USB port.



Image: The AGXOV D28 MP3 Player being charged via its USB-C port, with an overlay indicating its 128GB built-in storage and support for up to 512GB expandable storage.

2. Transferring Files

To transfer music, videos, or e-books to your player:

1. Connect the player to your computer using the USB-C cable.
2. The player will appear as a removable disk drive on your computer.

3. Drag and drop your desired files into the appropriate folders (e.g., 'Music', 'Video', 'Ebook') on the player's internal storage or an inserted Micro SD card.
4. Safely eject the device from your computer before disconnecting the cable.

3. Inserting a Micro SD Card

The player supports Micro SD cards up to 512GB for expanded storage. Locate the Micro SD card slot on the side of the device. Gently insert the card until it clicks into place. To remove, push the card in slightly until it springs out.

OPERATING

1. Basic Navigation

Turn on the device by pressing and holding the power button. Use the touchscreen to navigate through the main menu icons. Tap an icon to enter a function. Use the physical 'Back' button or swipe gestures (if supported) to return to the previous screen.

2. Music Playback

From the main menu, tap the 'Music' icon. You can browse music by artist, album, genre, or through folders. Select a song to begin playback. Use the physical buttons for Play/Pause, Previous, and Next. Adjust volume using the volume knob.



Image: A user enjoying music with headphones connected to the AGXOV D28 MP3 Player, highlighting the device's HiFi sound capabilities and supported audio formats (MP3, OGG, FLAC, AAC, WAV, WMA, APE).

3. Bluetooth Connection

The AGXOV D28 features Bluetooth 5.3 for wireless audio. To connect to Bluetooth headphones or speakers:

1. Go to 'Settings' from the main menu and select 'Bluetooth'.
2. Turn Bluetooth 'On'.
3. Ensure your Bluetooth audio device is in pairing mode.
4. The player will scan for available devices. Select your device from the list to pair.

Bluetooth 5.4

Strong anti-interference, compatible with all Bluetooth headphones/speakers



Bluetooth 5.4



Earbuds



Headphones



Bluetooth Speaker



Image: The AGXOV D28 MP3 Player showcasing its Bluetooth 5.4 capabilities, with icons representing compatibility with earbuds, headphones, and Bluetooth speakers. Wireless earbuds are shown next to the player.

4. Other Functions (FM Radio, Voice Recorder, E-Book, Video Playback)

The AGXOV D28 offers multiple functions accessible from the main menu:

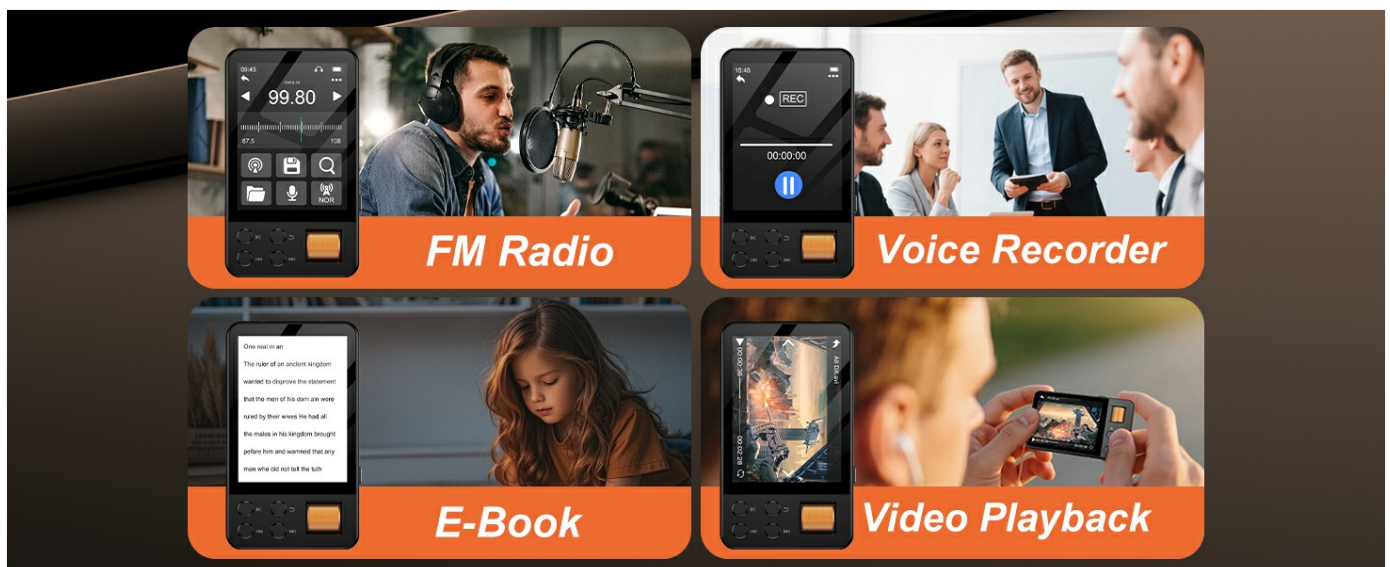


Image: A collage demonstrating the AGXOV D28 MP3 Player's diverse features, including FM Radio, Voice Recorder, E-Book reading, and Video Playback, each with a representative screen display.

- **FM Radio:** Tap the 'Radio' icon. Connect wired headphones to act as an antenna for better reception. Scan for stations or manually tune.
- **Voice Recorder:** Tap the 'Recorder' icon. Select 'Start Recording' to capture audio. Recordings are saved automatically.
- **E-Book:** Tap the 'Ebook' icon. Open compatible text files (.TXT) for reading.
- **Video Playback:** Tap the 'Video' icon. Play compatible video files (e.g., MP4).
- **Settings:** Customize display, sound, language, date/time, and other device preferences.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Avoid liquid cleaners or abrasive materials.
- **Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures.

- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Software Updates:** Check the manufacturer's website for any available firmware updates to ensure optimal performance.

TROUBLESHOOTING

Problem	Solution
Device does not turn on.	Ensure the battery is charged. Connect to a power source and try again. If unresponsive, perform a reset (refer to the device's specific reset method, usually a small pinhole button or holding the power button for 10-15 seconds).
Cannot transfer files.	Check USB-C cable connection. Ensure the device is properly recognized by your computer. Try a different USB port or cable. Ensure sufficient storage space is available.
Bluetooth connection fails.	Ensure Bluetooth is enabled on both the player and the audio device. Make sure the audio device is in pairing mode. Move closer to the audio device. Try unpairing and re-pairing.
No sound from headphones.	Check headphone connection. Ensure volume is not muted or too low. Test with different headphones. If using Bluetooth, ensure it's connected correctly.
Screen is unresponsive.	Restart the device. If the issue persists, perform a factory reset (note: this will erase all data).

SPECIFICATIONS

Feature	Detail
Model Name	D28
Brand	AGXOV
Memory Storage Capacity	128 GB (Internal), expandable up to 512 GB via Micro SD
Connectivity Technology	Bluetooth 5.3
Screen Size	2.4 Inches
Display Technology	LED
Supported Audio Formats	MP3, AAC, FLAC, WAV, WMA, APE, OGG
Supported Video Formats	MP4 (and other compatible formats)
Special Features	Built-In Speaker, FM Radio, Voice Recorder, E-Book Reader, HiFi Sound
Included Components	MP3 Player, USB-C cable, User manual, Wired headphones

WARRANTY AND SUPPORT

Warranty Information

The AGXOV D28 MP3 Player comes with a limited warranty. Please refer to the warranty card included in your package or contact customer support for detailed terms and conditions.

Customer Support

For technical assistance, troubleshooting, or warranty claims, please contact AGXOV customer support through the retailer where you purchased the product or visit the official AGXOV website for contact information.

© 2026 AGXOV. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0G5YDGGJM>

More documents and user manuals: <https://manuals.plus/>