

[Manuals.plus](#) /

› [UGREEN](#) /

› UGREEN EchoBuds Plus Wireless Earbuds User Manual

UGREEN WS222

UGREEN EchoBuds Plus Wireless Earbuds User Manual

Model: WS222

1. INTRODUCTION

Thank you for choosing the UGREEN EchoBuds Plus Wireless Earbuds. This manual provides detailed instructions to help you set up, operate, and maintain your earbuds for the best audio experience. Please read this manual thoroughly before use and keep it for future reference.

Package Contents

- UGREEN EchoBuds Plus Earbuds (Left & Right)
- Charging Case
- USB-C Charging Cable
- Multiple Sizes of Ear Tips (XS, S, M, L, XL)
- User Manual

12.4mmチタン製ドライバー

ベース・ジャイアント



12.4 mm

剛性の高い振動板駆動により、迫力があり
クリアな低音を実現。



濁りのない、抜群の低音域再生。

Figure 1.1: UGREEN EchoBuds Plus Earbuds, Charging Case, and Accessories.

2. PRODUCT OVERVIEW

The UGREEN EchoBuds Plus feature an ergonomic design for comfortable wear and intuitive touch controls for easy operation.

Earbud Components

- **Touch Control Area:** For playback, call management, and mode switching.
- **Microphones:** Multiple microphones for Active Noise Cancellation (ANC) and Environmental Noise Cancellation (ENC) during calls.
- **Ear Tip:** Replaceable silicone tips for a secure and comfortable fit.

Charging Case Components

- **Charging Port:** USB-C port for charging the case.
- **LED Indicator:** Shows charging status and battery level.
- **Earbud Charging Slots:** Securely holds and charges the earbuds.

外部は騒音も、内部は静寂。



Figure 2.1: Close-up view of the UGREEN EchoBuds Plus earbuds, highlighting their design.

3. SETUP

3.1 Charging Your Earbuds and Case

1. **Charge the Case:** Connect the USB-C charging cable to the charging port on the case and plug the other end into a USB

power adapter (not included). The LED indicator will show the charging status.

2. **Charge the Earbuds:** Place the earbuds into the charging case. They will automatically begin charging. The LED indicators on the earbuds (if present) or case will confirm charging.

A full charge provides up to 11 hours of playback for the earbuds (ANC off) and a total of 50 hours with the charging case. A quick 10-minute charge can provide approximately 4 hours of playback.



Figure 3.1: Charging the UGREEN EchoBuds Plus and their impressive battery life.

3.2 Pairing with Your Device

1. **First-Time Pairing:** Open the charging case. The earbuds will automatically enter pairing mode, indicated by a flashing LED light.
2. **Enable Bluetooth:** On your device (smartphone, tablet, PC), go to Bluetooth settings and turn Bluetooth on.
3. **Select Earbuds:** In the list of available devices, select "UGREEN EchoBuds Plus". Once connected, the LED indicator on the earbuds will stop flashing.
4. **Subsequent Pairing:** The earbuds will automatically connect to the last paired device when taken out of the case.



Figure 3.2: Bluetooth 6.0 technology ensures a stable and efficient wireless connection.

3.3 Multi-Point Connection

The EchoBuds Plus support simultaneous connection to two devices, allowing seamless switching between them.

1. Pair the earbuds with your first device as described above.
2. Disable Bluetooth on the first device, or manually put the earbuds back into pairing mode (refer to the UGREEN Audio App for specific instructions).
3. Pair the earbuds with your second device.
4. Enable Bluetooth on the first device. The earbuds should now be connected to both devices.



Figure 3.3: Multi-point connection allows seamless audio switching between two paired devices.

4. OPERATING YOUR EARBUDS

4.1 Touch Controls

The touch control area is located on the outer surface of each earbud. Functions can be customized via the UGREEN Audio App.

Action	Left Earbud	Right Earbud
Play/Pause	Single Tap	Single Tap
Next Track	Double Tap	Double Tap
Previous Track	Triple Tap	Triple Tap
Answer/End Call	Single Tap	Single Tap
Reject Call	Long Press (2s)	Long Press (2s)
Switch ANC Mode	Long Press (2s)	Long Press (2s)
Activate Voice Assistant	Quadruple Tap	Quadruple Tap

4.2 Active Noise Cancellation (ANC) and Transparency Mode

The EchoBuds Plus feature adaptive ANC with up to -55dB noise reduction, utilizing 6 microphones to monitor ambient sound.

You can switch between different noise control modes:

- **Noise Cancellation:** Blocks out ambient noise for an immersive listening experience.
- **Transparency Mode:** Allows you to hear your surroundings while still enjoying your audio.
- **Normal Mode:** No active noise cancellation or transparency.

These modes can be cycled through by long-pressing the touch control area or managed via the UGREEN Audio App. The app offers 4 distinct ANC modes: Deep, Medium, Light, and Adaptive.



Figure 4.1: Experience tranquility with up to -55dB adaptive noise cancellation.

4.3 UGREEN Audio App

Download the UGREEN Audio App from your device's app store to unlock the full potential of your EchoBuds Plus. The app allows you to:

- Customize touch controls.
- Select from 8 EQ presets or create custom equalizer settings.
- Switch between ANC modes and adjust levels.
- Activate Game Mode for ultra-low latency (80ms).
- Enable Spatial Sound for an immersive 3D audio experience.
- Use the "Find My Earbuds" feature.
- Access AI Real-time Translation and Meeting Note creation features (requires app update).

UGREENアプリでさらに多くの機能を体験。



Figure 4.2: Explore advanced features and customization options with the UGREEN Audio App.

4.4 Clear Calls with AI Enhancement

Equipped with 6 microphones and AI noise reduction, the EchoBuds Plus ensure crystal-clear calls even in noisy environments, focusing on your voice and filtering out distractions.



Figure 4.3: Enjoy clear communication with AI-enhanced call quality.

5. MAINTENANCE

5.1 Cleaning

- **Ear Tips:** Gently remove the silicone ear tips and wash them with mild soap and water. Rinse thoroughly and allow them to dry completely before reattaching.
- **Earbuds and Case:** Use a soft, dry, lint-free cloth to wipe the earbuds and charging case. Do not use harsh chemicals or abrasive materials.
- **Charging Contacts:** If charging issues occur, gently clean the charging contacts on both the earbuds and inside the case with a dry cotton swab.

5.2 Storage

- Always store the earbuds in their charging case when not in use to protect them and keep them charged.
- Store the device in a cool, dry place, away from extreme temperatures and direct sunlight.
- Avoid dropping or subjecting the earbuds and case to strong impacts.

5.3 Water and Sweat Resistance

The UGREEN EchoBuds Plus are IPX5 water-resistant, meaning they can withstand splashes of water and sweat. They are not designed for swimming or submersion in water.



Figure 5.1: IPX5 water resistance makes the earbuds suitable for workouts and light rain.

6. TROUBLESHOOTING

If you encounter any issues with your UGREEN EchoBuds Plus, please refer to the following common solutions:

Problem	Possible Solution
Earbuds not pairing	• Ensure earbuds are charged. • Turn off and on Bluetooth on your device. • Forget "UGREEN EchoBuds Plus" from your device's Bluetooth list and re-pair. • Reset the earbuds (refer to app or manual for specific reset procedure).
No sound from one earbud	• Ensure both earbuds are charged. • Place both earbuds back into the case, close it, and then take them out again. • Reset the earbuds.

Problem	Possible Solution
Earbuds not charging	• Ensure the charging case is charged. • Clean the charging contacts on both earbuds and inside the case. • Try a different USB-C cable and power adapter.
Poor sound quality	• Ensure ear tips provide a good seal. Try different sizes. • Check audio settings on your device and in the UGREEN Audio App. • Move closer to your device to avoid interference.

7. SPECIFICATIONS

Feature	Detail
Brand	UGREEN
Model Name	EchoBuds Plus (WS222)
Color	Black
Ear Placement	In-Ear
Headphone Form Factor	In-Ear
Impedance	32 Ohms
Noise Control	Active Noise Cancellation (-55dB)
Audio Driver Type	Dynamic Driver
Connectivity	Wireless (Bluetooth)
Bluetooth Version	6.0
Hardware Interface	USB-C
Battery Life (Earbuds)	Up to 11 hours (ANC off)
Total Playtime (with Case)	Up to 50 hours
Water Resistance	IPX5
Special Features	ANC, Lightweight, AI Real-time Translation, Spatial Sound, Custom EQ, Multi-point Connection
Recommended Uses	Travel, Business, Commuting, Sports, Office

8. WARRANTY AND SUPPORT

8.1 Warranty Information

UGREEN provides a **24-month warranty** for the EchoBuds Plus from the date of purchase. This warranty covers manufacturing defects and ensures your product is free from defects in material and workmanship under normal use. The warranty does not cover damage caused by misuse, accident, modification, unauthorized repair, or intentional damage by the user or third parties.



Figure 8.1: UGREEN offers a 24-month warranty for peace of mind.

8.2 Customer Support

For any inquiries, technical support, or warranty claims, please contact UGREEN customer service through the official UGREEN website or your purchase platform. Please have your order number and product model (WS222) ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0G5Z54Q64>

More documents and user manuals: <https://manuals.plus/>