

[Manuals.plus](#) /

› [Huuger](#) /

› Huuger Large Bakers Rack with Power Outlet Instruction Manual

Huuger B0G6DBQ8CG

Huuger Large Bakers Rack with Power Outlet Instruction Manual

Model: B0G6DBQ8CG

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Huuger Large Bakers Rack with Power Outlet. Please read these instructions carefully before assembly and use to ensure safe and proper functionality of your product.



Image: The Huuger Large Bakers Rack, showcasing its various storage compartments and integrated power outlet, set up in a kitchen environment.

SAFETY INFORMATION

- Always follow assembly instructions carefully.
- Ensure all connections are secure before placing items on the rack.
- Do not overload shelves. Refer to specifications for weight limits.
- Use the included anti-tip kit to secure the rack to a wall, especially in homes with children or pets.
- The power outlets feature overload protection. Do not exceed the specified wattage (1800W).
- Keep liquids away from power outlets.

PACKAGE CONTENTS

Before beginning assembly, ensure all parts listed in the packaging are present and undamaged. If any parts are missing or damaged, contact customer support.

The package includes:

- Wooden top and shelf panels
- Metal frame components
- Cabinet doors and hardware
- Power outlet unit with cord
- 6 S-shaped hooks
- Wire mesh shelves
- Adjustable feet
- Anti-tip kit
- Assembly tools (e.g., Allen wrench) and hardware

SETUP AND ASSEMBLY

Assembly is designed to be straightforward with clearly labeled parts and step-by-step instructions provided in the included assembly guide. It is recommended to assemble the unit on a soft, clean surface to prevent scratches.

1. Frame Assembly

Connect the metal frame components according to the diagrams in the assembly guide. Ensure all screws are tightened securely but do not overtighten until all parts are aligned.

2. Shelf and Panel Installation

Install the wooden top, middle, and bottom panels, as well as the wire mesh shelves. The wire mesh shelves are designed for ventilation and easy cleaning.



Image: Detail of the two wire mesh shelves, highlighting their ventilated and drainable design for easy cleaning.

3. Cabinet Door Attachment

Attach the cabinet doors to the designated sections. The X-style cabinet doors add a decorative touch while providing hidden storage.



Image: View of the upper and lower cabinets with doors open, demonstrating the hidden storage capacity.

4. Power Outlet Installation

The power outlet panel can be installed on either the left or right side of the rack to best suit your kitchen layout. Secure it firmly in place before plugging in any appliances.



Overload Protection
Safe & Reliable



1800W High Power
Runs More
Kitchen Appliances



Switchable Left or Right
Flexible for Any Setup

Image: Detailed view of the reversible power outlet panel, showing the three AC outlets, power switch, and overload

protection feature.

5. Attaching S-Shaped Hooks

Hang the 6 S-shaped hooks on the designated rail for easy access to mugs, utensils, or dish towels.



Image: Close-up of the 6 S-shaped hooks, demonstrating their use for hanging mugs and towels.

6. Leveling and Securing

Adjust the feet at the bottom of the rack to ensure it is stable and level on uneven floors. Finally, install the anti-tip kit to secure the rack to a wall, preventing accidental tipping.

Designed for Stability



Adjustable Feet

Keep it steady anywhere



Anti-Tip Kit

Secure and worry-free

Image: Illustrations demonstrating how to adjust the leveling feet and install the anti-tip kit for enhanced stability and safety.

OPERATING INSTRUCTIONS

Using the Power Outlets

The integrated power strip provides 3 AC outlets with overload protection, capable of handling up to 1800W. This allows you to power kitchen appliances such as coffee makers, toasters, or microwaves directly from the rack. Use the red switch to turn the power outlets on or off.

- Plug appliances directly into the outlets.
- Ensure the total wattage of all connected appliances does not exceed 1800W to prevent overload.
- Always turn off the power switch when not in use or before cleaning.

Utilizing Storage Space

The bakers rack offers diverse storage options:

- **Top Shelf:** Ideal for decorative items, cookbooks, or frequently used spices.
- **Upper Cabinets:** Use for hidden storage of pantry items, small appliances, or dishes.
- **Middle Countertop:** Provides a spacious area for coffee makers, blenders, or as an additional prep surface.
- **Microwave Compartment:** Designed to accommodate most standard microwaves.
- **Lower Cabinets:** Perfect for larger cookware, bulkier pantry items, or items you prefer to keep out of sight.
- **Side Mesh Shelves:** Suitable for drying dishes, storing fruits, vegetables, or other items requiring ventilation.
- **S-Shaped Hooks:** Convenient for hanging mugs, kitchen towels, or frequently used utensils.

MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your bakers rack.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish. For the metal frame, a mild soap solution can be used.
- **Spills:** Clean up spills immediately to prevent staining or damage to the wood surfaces.
- **Hardware:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary.
- **Power Outlets:** Ensure the power outlets are kept dry and free from dust or debris. Do not attempt to disassemble the power unit.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|--------------------------------------|---|--|
| Rack is wobbly or unstable. | Uneven floor; loose fasteners. | Adjust the leveling feet at the bottom of the rack. Ensure all assembly screws are tightened. Install the anti-tip kit if not already done. |
| Power outlets are not working. | Power switch is off; circuit overload; power cord not plugged in. | Ensure the red power switch on the outlet panel is in the "ON" position. Check if the main power cord is securely plugged into a wall outlet. Reduce the number of appliances or total wattage if an overload protector has tripped (reset by turning off and on). |
| Cabinet doors do not close properly. | Misaligned hinges; obstruction. | Check hinge alignment and adjust if necessary. Ensure nothing inside the cabinet is blocking the door from closing. |

SPECIFICATIONS

Huuger

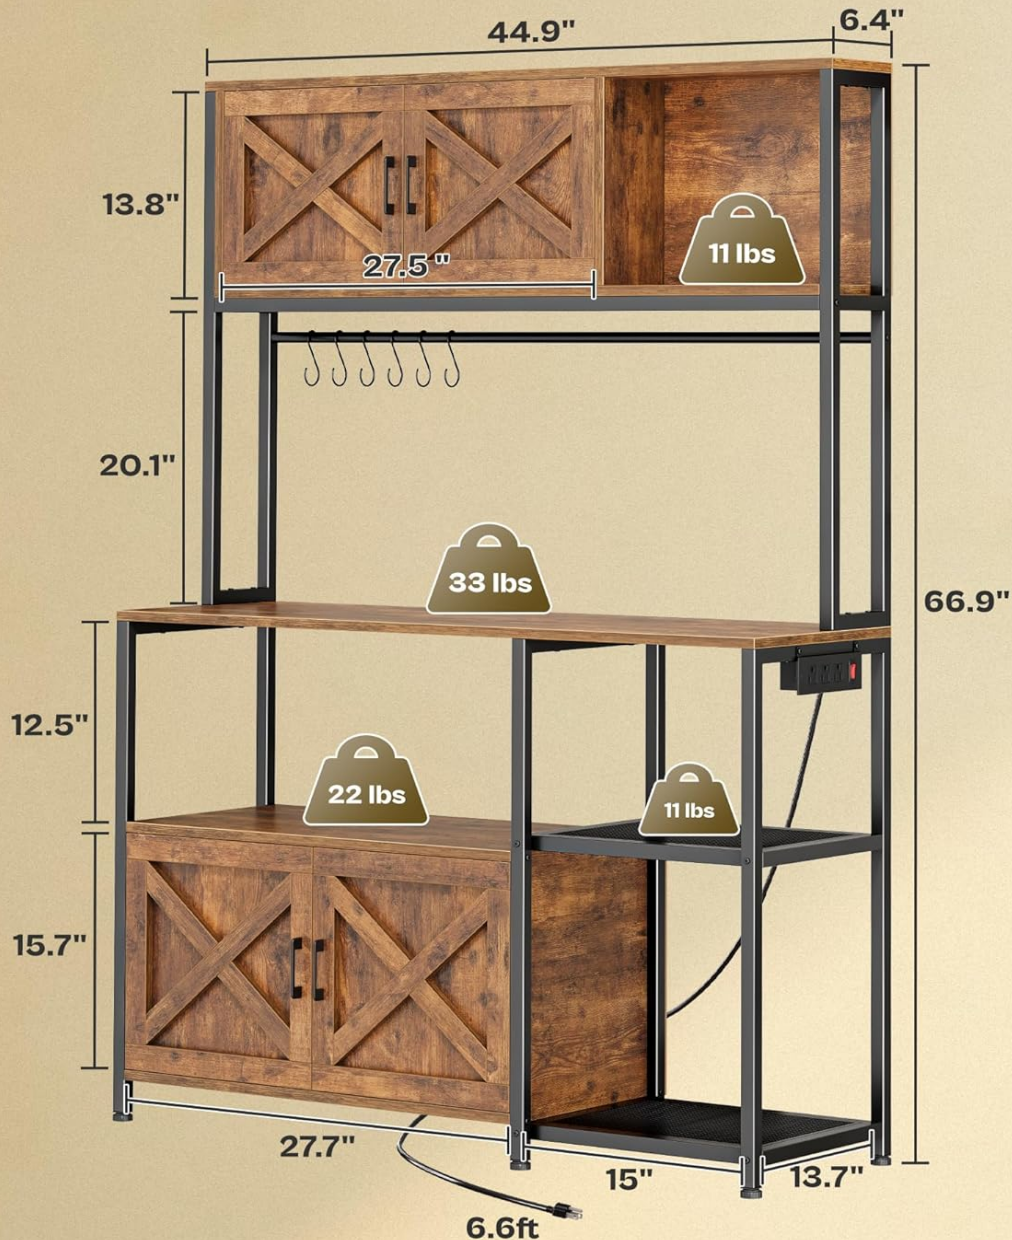


Image: Dimensional diagram of the Huuger Large Bakers Rack, including overall measurements and individual shelf weight capacities.

Model: B0G6DBQ8CG

Brand: Huuger

Material: Engineered Wood, Metal

Product Dimensions (D x W x H): 14.5" x 45.2" x 67.3"

Mounting Type: Floor Mount

Room Type: Kitchen

Number of Shelves: 4 (including main countertop)

Special Features: Built-in Power Outlets (3 AC, 1800W, Overload Protection), Cabinets, 6 S-Shaped Hooks, Mesh Shelves, Adjustable Feet, Anti-Tip Kit

Color: Rustic Brown

Finish Type: Powder Coated (Metal Frame)

Required Assembly: Yes

WARRANTY INFORMATION

Huuger products are manufactured with quality and durability in mind. This product comes with a limited warranty against manufacturing defects. Please retain your proof of purchase for any warranty claims. For specific warranty terms and conditions, please refer to the documentation included with your purchase or contact Huuger customer support.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or encounter any issues with your Huuger Large Bakers Rack, please do not hesitate to contact our customer support team. We are committed to providing excellent service.

Website: [Visit the Huuger Store on Amazon](#)

Email: Refer to your product packaging for direct email support.

Phone: Refer to your product packaging for direct phone support.

When contacting support, please have your model number (B0G6DBQ8CG) and proof of purchase readily available.

