

[Manuals.plus](#) /

› [BENLYDESIGN](#) /

› BENLYDESIGN G100 Digital Watch User Manual

## BENLYDESIGN G100

# BENLYDESIGN G100 Digital Watch User Manual

Model: G100

## INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your BENLYDESIGN G100 Digital Watch. Please read this manual thoroughly to ensure proper use and to maximize the lifespan of your timepiece.

## PACKAGE CONTENTS

Please check that all items are present in your package:

- BENLYDESIGN G100 Digital Watch
- User Manual (this document)

## PRODUCT OVERVIEW

The BENLYDESIGN G100 features a retro-inspired design with a modern digital display and durable construction. Familiarize yourself with the watch's components:





**Figure 1: Front View.** This image displays the front of the BENLYDESIGN G100 Digital Watch, highlighting its rectangular digital LED display showing the time 10:53:38, and the two control buttons on the right side of the case. The watch features a black stainless steel case and a black silicone strap.



**Figure 2: Back View.** This image shows the stainless steel back of the BENLYDESIGN G100 Digital Watch, with engravings for "BENLYDESIGN", "STAINLESS STEEL BACK", "WATER RESISTANT 5ATM", and "G-100". The black silicone strap is also visible.



**Figure 3: Angled View.** An angled perspective of the BENLYDESIGN G100 Digital Watch, showcasing its sleek black case, digital display, and the texture of the black silicone strap. The watch's minimalist design is evident.

## SETUP

### 1. Setting Time and Date

To set the current time and date on your G100 watch:

1. Press the **Mode** button (usually the bottom right button) repeatedly until the time display starts flashing or you enter the time setting mode.
2. Use the **Adjust** button (usually the top right button) to change the flashing digit (hours, minutes, year, month, day).
3. Press the **Mode** button again to move to the next setting.
4. Once all settings are correct, press the **Mode** button one last time to exit the setting mode.

### 2. Setting the Alarm

To set or activate the alarm function:

1. Press the **Mode** button until "ALARM" or "ALM" appears on the display.
2. While "ALARM" is displayed, press the **Adjust** button to toggle the alarm ON or OFF.
3. To set the alarm time, press and hold the **Mode** button until the alarm time digits begin to flash.
4. Use the **Adjust** button to set the desired alarm hour and minute.
5. Press the **Mode** button to confirm and exit the alarm setting.

Your browser does not support the video tag.

**Video 1: Watch Features Overview.** This video demonstrates the basic functions of the BENLYDESIGN G100 Digital Watch, including how to cycle through time and alarm modes, and shows the watch being worn. It highlights the watch's display and overall appearance.

## OPERATING INSTRUCTIONS

---

### 1. Mode Switching

Press the **Mode** button (bottom right) to cycle through different display modes: Time, Date, and Alarm. The current mode is typically indicated on the display.

### 2. Backlight

To illuminate the display in low-light conditions, press the **Light** button (usually the top left button, or sometimes the top right button depending on the model). The backlight will typically stay on for a few seconds.

Your browser does not support the video tag.

**Video 2: G100 Features and Wear.** This video showcases the BENLYDESIGN G100 watch's various display modes and how it looks when worn on the wrist. It provides a closer look at the digital display and the watch's overall aesthetic.

## WATER RESISTANCE GUIDELINES

---

Your BENLYDESIGN G100 Digital Watch is rated for **5 ATM (50 meters)** water resistance. This means it is suitable for:

- Daily use, such as hand washing.
- Light rain exposure.

*It is NOT suitable for swimming, showering, diving, or any activities involving prolonged water immersion or high-pressure water exposure. Do not operate buttons while the watch is wet.*

## MAINTENANCE

---

### Cleaning

To keep your watch in optimal condition:

- Wipe the watch case and strap regularly with a soft, dry cloth.
- For stubborn dirt, use a slightly damp cloth and mild soap, then wipe dry immediately.
- Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish and seals.

### Battery Replacement

The watch uses 1 C battery (included). When the display dims or functions become erratic, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure the water resistance seal is maintained.

## TROUBLESHOOTING

---

| Problem                   | Possible Cause                                  | Solution                                                                                                                                                        |
|---------------------------|-------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Display is blank or dim.  | Low battery.                                    | Replace the battery.                                                                                                                                            |
| Time is incorrect.        | Time not set properly or accidental adjustment. | Refer to "Setting Time and Date" instructions to reset the time.                                                                                                |
| Alarm does not sound.     | Alarm is turned off or set incorrectly.         | Ensure the alarm is set to ON and the time is correct.                                                                                                          |
| Buttons are unresponsive. | Temporary software glitch or water ingress.     | Try a soft reset (if applicable, by holding all buttons for a few seconds). If problem persists, contact support. Ensure watch is dry before operating buttons. |

## SPECIFICATIONS

- **Model:** G100
- **Case Size:** 38mm
- **Strap Width:** 20mm
- **Movement:** Electronic
- **Display:** LCD
- **Glass:** Mineral-hardened
- **Strap Material:** Silicone
- **Clasp Type:** Buckle
- **Water Resistance:** 5 ATM (50 meters)
- **Battery:** 1 C battery (included)

## WARRANTY AND SUPPORT

BENLYDESIGN offers comprehensive customer service. For any questions, concerns, or warranty claims regarding your G100 Digital Watch, please contact our customer support team. We are committed to responding within 24 hours to ensure your satisfaction.

For support, please visit the official BENLYDESIGN store or contact the seller directly through your purchase platform.

