

Tangkula TA-10815-HV

Tangkula Modern TV Stand Instruction Manual

Model: TA-10815-HV

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your Tangkula Modern TV Stand. Please read all instructions carefully before assembly and use to ensure safe and proper functionality of the product. Keep this manual for future reference.

Safety Information

- Assembly is required. Always follow the provided instructions carefully.
- This product is designed to hold specific weights. Ensure it is properly assembled and not overloaded to prevent tip-over risks.
- Be cautious around sharp edges during assembly and use.
- Always place the TV stand on a flat, stable surface.
- Do not allow children to climb on the unit.

2. PACKAGE CONTENTS

Before beginning assembly, verify that all parts listed below are present and undamaged. If any parts are missing or damaged, please contact customer support.

- TV Stand Components (various engineered wood panels)
- Hardware Pack (screws, dowels, hinges, support feet)
- User Manual (this document)

3. SETUP AND ASSEMBLY

Assembly of the Tangkula Modern TV Stand requires careful attention to detail. It is recommended that two adults perform the assembly. Please refer to the included assembly diagram for specific step-by-step instructions.

Dimensions



155 lbs Weight Capacity of Tabletop

Figure 3.1: Product Dimensions. The TV stand measures 63 inches in length, 14 inches in depth, and 12 inches in height. Internal shelf and cabinet dimensions are also indicated.

Fit for TVs up to 70"



Figure 3.2: TV Size Compatibility. This TV stand is designed to accommodate televisions up to 70 inches in screen size.

Assembly Steps (General Overview):

1. Unpack all components and hardware. Lay them out on a clean, soft surface to prevent scratches.
2. Identify each part using the provided labels and diagrams.
3. Attach the support feet to the bottom panel of the TV stand.
4. Assemble the main frame by connecting the side panels, middle dividers, and bottom panel using the designated hardware (dowels, screws).
5. Install the back panels into their grooves.
6. Attach the top panel to the assembled frame.
7. Install the soft-close metal hinges onto the cabinet doors and then attach the doors to the main unit. Adjust hinges for proper alignment.
8. Ensure all connections are secure before placing any items on the stand.

For detailed, step-by-step visual instructions, please refer to the separate assembly guide included in your package.

4. OPERATING INSTRUCTIONS

The Tangkula Modern TV Stand is designed for versatile use as an entertainment center or a console table.

Placement and Use:

- **TV Placement:** Carefully place your television on the top surface. Ensure the TV's base is centered and stable. The stand supports TVs up to 70 inches.
- **Open Shelves:** Utilize the two open-back shelves for media equipment such as routers, cable boxes, or gaming consoles. The open design allows for ventilation and easy cable management.
- **Side Cabinets:** The two side cabinets provide concealed storage for items like books, CDs, DVDs, or speakers. The soft-close hinges ensure quiet operation.



Figure 4.1: Ample Storage Space. The TV stand features two open-back shelves for media devices and two side cabinets for concealed storage.

Multifunctional Use



Figure 4.2: Multifunctional Use. The unit can serve as a TV stand or a decorative console table.

5. MAINTENANCE

Proper care and maintenance will extend the life and appearance of your TV stand.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, as these can damage the finish.
- **Spills:** Clean up spills immediately to prevent staining or damage to the engineered wood.
- **Hardware:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Sunlight:** Avoid prolonged exposure to direct sunlight to prevent fading or discoloration.

6. TROUBLESHOOTING

If you encounter any issues with your TV stand, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Stand is wobbly or unstable.	Loose connections; uneven floor.	Ensure all screws are tightened. Adjust the leveling feet if your floor is uneven.
Cabinet doors do not close properly or are misaligned.	Hinges are not adjusted correctly or are loose.	Adjust the screws on the soft-close metal hinges to align the doors. Tighten hinge screws.
Missing parts during assembly.	Packaging error.	Contact customer support with your purchase details and the list of missing parts.

7. SPECIFICATIONS

Detailed specifications for the Tangkula Modern TV Stand (Model TA-10815-HV).

Feature	Detail
Model Number	TA-10815-HV
Overall Dimensions (L x W x H)	63" x 14" x 12"
Middle Shelf Dimensions (W x D x H)	20" x 14" x 4.5"
Cabinet Dimensions (W x D x H)	20" x 12.5" x 9.5"
Weight Capacity of Tabletop	155 lbs
Weight Capacity of Cabinet	45 lbs
Weight Capacity of Shelf	22 lbs
Net Weight	40.5 lbs
Material	Engineered Wood, MDF, Plastic, Metal
Color	Rustic Brown
Assembly Required	Yes

Built to Last



6 Support Feet

Evenly distribute weight for a reliable construction



Soft Close Metal Hinges



Quiet



Smooth

Figure 7.1: Construction Details. Features include six robust support feet for stability and soft-close metal hinges for smooth, quiet door operation.

8. WARRANTY INFORMATION

Tangkula products are manufactured with quality and durability in mind. For specific warranty details regarding your TV stand, please refer to the warranty card included in your package or visit the official Tangkula website. Typically, warranties cover manufacturing defects under normal use. Please retain your proof of purchase for any warranty claims.

9. CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact Tangkula customer support. Have your model number (TA-10815-HV) and purchase information ready when contacting support.

- **Online Support:** Visit the official Tangkula website for FAQs and contact forms.
- **Email:** Refer to your purchase documentation for customer service email addresses.

- **Phone:** Refer to your purchase documentation for customer service phone numbers.