

[manuals.plus](#) /› [KikkaBoo](#) /› [KikkaBoo NORDY Evolutive Wooden High Chair Instruction Manual](#)**KikkaBoo 31004010185**

KikkaBoo NORDY Evolutive Wooden High Chair Instruction Manual

Model: 31004010185

INTRODUCTION

Thank you for choosing the KikkaBoo NORDY Evolutive Wooden High Chair. This product is designed to provide a safe, comfortable, and adaptable seating solution for your child, growing with them from infancy to childhood. It functions as a high chair for babies and converts into a junior chair for older children. Please read this manual carefully before assembly and use to ensure proper installation, safe operation, and optimal maintenance.

SAFETY INFORMATION

Your child's safety is paramount. Always follow these guidelines:

- **Age and Weight Limits:** Suitable as a high chair for children who can sit unaided, from approximately 6 months up to 3 years (maximum 15 kg). Converts to a junior chair for children up to 10 years (maximum 35 kg).
- **Harness System:** Always secure your child with the 3-point safety harness when using the high chair. Ensure the harness is correctly adjusted and fastened.
- **Stability:** Ensure the chair is placed on a flat, stable surface. Do not use the chair if any parts are damaged or missing.
- **Supervision:** Never leave your child unattended in the high chair or junior chair.
- **Safety Bar and Tray:** The safety bar and tray are essential for the high chair configuration. Ensure they are securely attached when in use.
- **Prevent Falls:** Do not allow children to climb on the chair. Keep the chair away from edges of tables or counters.
- **Heat Sources:** Keep the chair away from open flames, heating elements, and other strong heat sources.
- **Assembly:** Ensure all components are correctly assembled and tightened before each use. Regularly check for loose screws or worn parts.

SETUP AND ASSEMBLY

The KikkaBoo NORDY high chair requires assembly. An Allen key is included; a screwdriver may also be needed. Follow the step-by-step instructions provided in the packaging. Ensure all parts are present before beginning assembly.

- 1. Unpack Components:** Carefully remove all parts from the packaging and verify against the parts list in your included manual.
- 2. Assemble Frame:** Connect the main wooden frame components using the provided screws and Allen key. Ensure all connections are tight and secure.
- 3. Install Seat and Footrest:** Slide the seat and footrest into the desired height slots. Do not fully tighten until you have confirmed the correct position for your child's age and size.
- 4. Attach Safety Bar and Tray:** For high chair use, attach the safety bar and then the removable tray. Ensure the tray locking mechanism is engaged.
- 5. Secure Harness:** Thread the 3-point safety harness through the designated slots in the seat and backrest.



Image: Baby seated in the KikkaBoo NORDY high chair, demonstrating the adjustable seat and footrest for proper ergonomic positioning.



Image: Detail of the side frame, highlighting the multiple slots for adjusting the seat and footrest height.

OPERATING INSTRUCTIONS

Adjusting Seat and Footrest

The KikkaBoo NORDY high chair features 10 adjustable positions for both the seat and footrest to accommodate your child's growth and ensure an ergonomic posture. To adjust:

1. Loosen the screws on the side of the chair that secure the seat or footrest.
2. Carefully slide the seat or footrest to the desired height slot.
3. Ensure both sides are at the same height and securely tighten the screws.

10 POSICIONES PARA EL ASIENTO Y EL REPOSAPIÉS



Image: The high chair from the side, illustrating the ten possible height adjustments for the seat and footrest.

Using the Removable Tray

The tray can be easily attached and removed for cleaning or to allow your child to sit directly at the family table.

- To Attach:** Align the tray with the slots on the safety bar and push it down until it clicks securely into place.
- To Remove:** Locate the release buttons or levers on the underside or sides of the tray (refer to your specific manual for exact location) and press them while lifting the tray upwards.



Image: Close-up view of the tray's attachment point and release button.

Using the 3-Point Harness

The 3-point harness ensures your child remains safely seated. Always use the harness when the chair is in high chair mode.

1. Place your child in the seat.
2. Bring the waist straps around your child's waist and connect them to the buckle.
3. Adjust the straps to fit snugly but comfortably around your child.



Image: Front view of the high chair, clearly showing the 3-point harness system.

Converting to Junior Chair

As your child grows, the NORDY high chair can be converted into a junior chair. This involves removing the safety bar and tray, and adjusting the seat and footrest to appropriate heights for an older child.

1. Remove the tray and safety bar.
2. Adjust the seat and footrest to lower positions suitable for an older child, allowing them to sit comfortably at a standard table. The footrest can serve as a lower seat or be removed entirely if not needed.
3. The 3-point harness can be removed or tucked away if not required for the junior chair configuration.



Image: Visual representation of the chair's three configurations: high chair for baby, intermediate chair for toddler, and junior chair for older child.

MAINTENANCE

Regular maintenance will prolong the life of your KikkaBoo NORDY high chair.

- **Cleaning:** Wipe down wooden surfaces with a damp cloth and mild soap. Avoid abrasive cleaners or excessive moisture, which can damage the wood. Dry immediately after cleaning.
- **Tray Cleaning:** The removable tray can be easily wiped clean with a damp cloth and mild detergent.
- **Harness Cleaning:** The fabric harness can be spot cleaned with mild soap and water. Allow to air dry completely.
- **Inspections:** Periodically check all screws and fasteners to ensure they are tight. Inspect the wood

for any cracks or splinters and the harness for any fraying or damage. Replace any damaged parts immediately.

- **Storage:** Store the chair in a dry place, away from direct sunlight or extreme temperatures, to prevent wood warping or damage.

TROUBLESHOOTING

If you encounter any issues with your KikkaBoo NORDY high chair, please refer to these common solutions:

- **Difficulty Assembling:** Ensure you are following the assembly instructions precisely. Check that all parts are oriented correctly. Do not overtighten screws until all components are loosely fitted.
- **Wobbly Chair:** Verify that all screws are fully tightened. Ensure the chair is on a level surface. If the issue persists, disassemble and reassemble, paying close attention to the alignment of the wooden parts.
- **Seat/Footrest Not Adjusting:** Ensure the screws are sufficiently loosened before attempting to slide the panels. Check that no debris is obstructing the adjustment slots.
- **Tray Not Attaching/Detaching:** Confirm that the release mechanism is fully engaged or disengaged. Check for any obstructions in the tray's attachment points.

For further assistance, please contact KikkaBoo customer support.

SPECIFICATIONS

Feature	Detail
Model Number	31004010185
Product Dimensions	49 x 49.5 x 79.9 cm
Product Weight	6.5 kg
Material Composition	Solid Beech Wood and Plywood
Recommended Age (High Chair)	6 months - 3 years
Maximum Weight (High Chair)	15 kg
Maximum Weight (Junior Chair)	35 kg
Adjustable Positions	10 for seat and footrest
Safety Harness	3-point
Tray	Removable
Assembly Required	Yes
Portable	Yes

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the documentation included with your purchase or contact KikkaBoo directly through their official website or the retailer where the product was purchased. Keep your proof of purchase for any warranty claims.