

Monster TVLink 300

Monster TVlink 300 Wireless Headphones Instruction Manual

Model: TVLink 300

1. INTRODUCTION

Thank you for choosing the Monster TVlink 300 Wireless Headphones. This manual provides essential information for setting up, operating, and maintaining your headphones to ensure an optimal listening experience. The TVlink 300 offers clear, low-latency audio for television viewing, extended battery life, and comfortable wear, making it ideal for private listening without disturbing others.

2. PACKAGE CONTENTS

Please check the package for the following items:

- Monster TVlink 300 Wireless Headphones
- Transmitter Charging Base
- USB-C Charging Cable
- Optical Audio Cable
- 3.5mm AUX Audio Cable
- RCA Adapter Cable
- User Manual (this document)



Figure 2.1: Package Contents and Component Overview

3. PRODUCT OVERVIEW

Familiarize yourself with the main components and controls of your Monster TVlink 300 Wireless Headphones and Transmitter Charging Base.

Headphones

- **On/Off Button:** Powers the headphones on or off.
- **Volume Up Button:** Increases audio volume. Also functions as Previous Song button.
- **Volume Down Button:** Decreases audio volume. Also functions as Next Song button.
- **Multi-function Button (MFB):** Controls playback (play/pause), answers/ends calls.
- **Mic:** For voice communication.
- **USB-C Charging Port:** For direct charging of headphones.
- **Charging Interface to the Base:** Connects to the charging base for automatic charging.
- **Indicator Light:** Displays power and connection status.

Transmitter Charging Base

- **On/Off Button:** Powers the transmitter on or off.
- **Multi-function Button (MFB):** For pairing and mode selection.
- **USB-C Charging Port:** For powering the transmitter.
- **Optical Input from TV:** Connects to your TV's optical audio output.
- **Aux-in Port:** Connects to your TV's 3.5mm audio output.
- **LED Indicator Light:** Displays power, connection, and mode status.

4. SETUP

4.1 Powering the Transmitter

1. Connect the USB-C charging cable to the transmitter's USB-C port.
2. Plug the other end of the USB-C cable into a power adapter (not included) or a powered USB port.
3. Press the On/Off button on the transmitter to power it on. The LED indicator will light up.

4.2 Connecting the Transmitter to Your TV

The TVlink 300 transmitter offers multiple connection options. Choose the one compatible with your television.

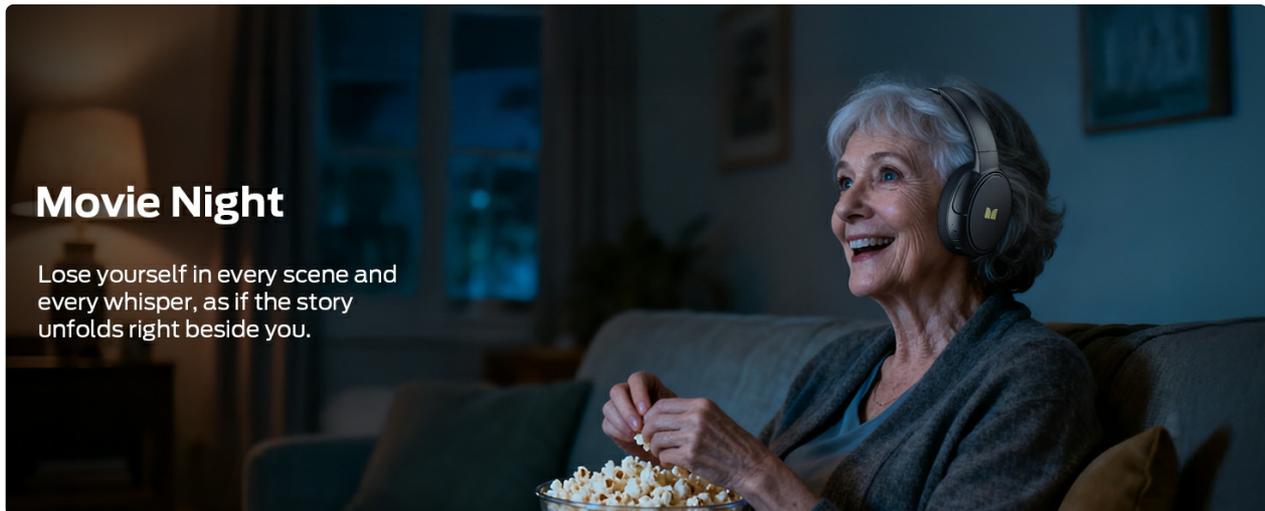


Figure 4.1: Flexible Connection Options

Optical Connection (Recommended for best audio quality)

1. Connect one end of the Optical Audio Cable to the 'Optical Input' port on the transmitter.
2. Connect the other end to the 'Optical Out' (or 'Digital Audio Out') port on your TV.
3. On your TV's audio settings, select 'Optical Out' or 'Digital Audio Out' as the audio output. Ensure the format is set to PCM/Stereo, not Dolby Digital or DTS.

AUX Connection

1. Connect one end of the 3.5mm AUX Audio Cable to the 'Aux-in' port on the transmitter.
2. Connect the other end to the 'Headphone Out' or 'Audio Out' 3.5mm port on your TV.
3. If your TV has a 'Headphone Out' port, plugging in the cable may mute the TV speakers. Adjust TV volume as needed.

RCA Connection

1. Connect the 3.5mm AUX Audio Cable to the 'Aux-in' port on the transmitter.
2. Attach the RCA Adapter Cable to the other end of the 3.5mm AUX Audio Cable.
3. Connect the red and white RCA plugs to the corresponding 'Audio Out' (L/R) ports on your TV.
4. On your TV's audio settings, ensure 'Audio Out' is enabled.

4.3 Charging the Headphones

The headphones can be charged using the charging base or directly via a USB-C cable.

Using the Charging Base (Recommended)

1. Ensure the transmitter charging base is powered on.
2. Place the headphones onto the charging base, aligning the charging contacts.
3. The headphone indicator light will show charging status (e.g., red for charging, off/blue for fully charged).

Direct USB-C Charging

1. Connect the USB-C charging cable to the USB-C port on the headphones.
2. Plug the other end into a power adapter or a powered USB port.

3. The headphone indicator light will show charging status.

A full charge provides up to 45 hours of playback. Allow approximately 2-3 hours for a full charge.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

- **To Power On:** Press and hold the On/Off button on the headphones for approximately 3 seconds until the indicator light flashes.
- **To Power Off:** Press and hold the On/Off button on the headphones for approximately 3 seconds until the indicator light turns off.

5.2 Automatic Connection

Once the transmitter is connected to your TV and powered on, and the headphones are powered on, they should automatically connect. The indicator lights on both devices will confirm a successful connection.

5.3 Volume Control

- **Increase Volume:** Press the Volume Up button.
- **Decrease Volume:** Press the Volume Down button.

5.4 Bluetooth Pairing (for other devices)

The headphones can also connect to other Bluetooth-enabled devices like phones or tablets.

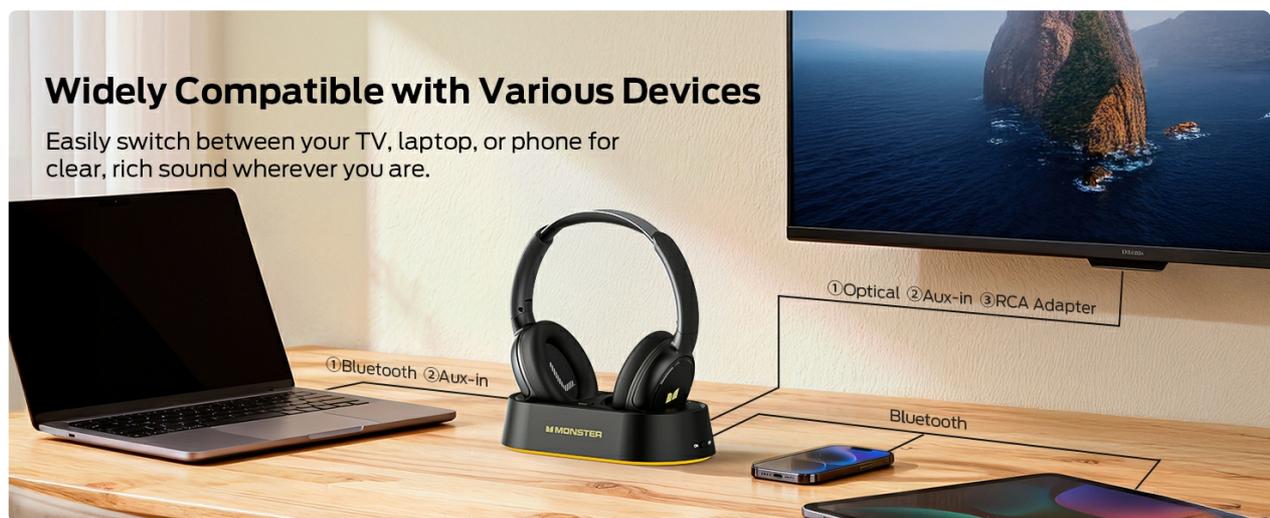


Figure 5.1: Wide Device Compatibility

1. Ensure the headphones are powered off.
2. Press and hold the On/Off button for approximately 5-7 seconds until the indicator light flashes rapidly, indicating pairing mode.
3. On your device (phone, tablet), enable Bluetooth and search for 'Monster TVlink 300'.
4. Select the headphones to pair. The indicator light will turn solid blue when successfully paired.

5.5 Media Control (when paired via Bluetooth)

- **Play/Pause:** Press the Multi-function Button (MFB) once.
- **Next Track:** Press and hold the Volume Down button.

- **Previous Track:** Press and hold the Volume Up button.

5.6 Call Management (when paired via Bluetooth)

- **Answer/End Call:** Press the Multi-function Button (MFB) once.
- **Reject Call:** Press and hold the Multi-function Button (MFB) for 2 seconds.

5.7 Mute Function

The headphones feature a mute button on the side for quickly silencing audio, useful during commercials or interruptions.

6. MAINTENANCE

6.1 Cleaning

- Wipe the headphones and transmitter with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, solvents, or spray directly onto the device.
- Keep charging contacts clean and free of dust.

6.2 Storage

- Store the headphones in a cool, dry place away from extreme temperatures and direct sunlight.
- The foldable design allows for compact storage when not in use.
- If storing for an extended period, charge the headphones fully every few months to preserve battery life.

7. TROUBLESHOOTING

If you encounter issues, please refer to the following common solutions:

Problem	Possible Cause	Solution
No sound from headphones	Headphones or transmitter not powered on; Not connected; Incorrect TV audio output settings; Low battery.	Ensure both devices are on. Check connection cables. Verify TV audio output (e.g., PCM for Optical). Charge headphones.
Sound delay (lag)	Interference; TV processing delay.	Ensure headphones are connected to the transmitter (not directly to TV via Bluetooth if TV has high latency). Minimize interference sources.
TV speakers still playing sound	TV audio settings not configured for external output only.	Access your TV's audio settings and look for options like 'Speaker Output' or 'Audio Out'. Some TVs allow simultaneous output, others require selecting 'External Speakers' or 'Optical Out' to disable internal speakers. If using AUX, some TVs mute internal speakers automatically.

Problem	Possible Cause	Solution
Headphones not pairing with Bluetooth device	Headphones not in pairing mode; Device Bluetooth off; Out of range.	Ensure headphones are in pairing mode (rapidly flashing indicator). Turn Bluetooth on your device. Move closer to the device.
Headphones not charging	Improper placement on base; Faulty cable/power source; Dirty contacts.	Ensure headphones are correctly seated on the charging base. Try direct USB-C charging. Check cable and power adapter. Clean charging contacts.

8. SPECIFICATIONS

Feature	Specification
Model Name	TVLink 300
Item Model Number	H20
Connectivity Technology	Wireless (Bluetooth)
Wireless Communication Technology	Bluetooth 5.3
Earpiece Shape	Over Ear
Battery Life	Up to 45 Hours
Charging Time	Approx. 2-3 Hours
Compatible Devices	Television, Smartphones, Tablets
Control Method	Touch/Buttons
Special Features	Low Latency Audio Sync, Private Listening, Foldable Design
Material	Faux Leather (ear cushions)
Included Components	Mic
Batteries	1 A battery required (included)

9. WARRANTY AND SUPPORT

9.1 Warranty Information

Specific warranty details for the Monster TVLink 300 Wireless Headphones are typically provided with your purchase documentation or can be found on the official Monster website. Please retain your proof of purchase for warranty claims.

9.2 Customer Support

For further assistance, technical support, or inquiries, please visit the official Monster website or contact their customer service department. Contact information can usually be found on the product packaging or the brand's website.

© 2025 Monster. All rights reserved.