

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [PATONA](#) /

› PATONA Premium Telescopic Monopod Tripod Model 4204 Instruction Manual

PATONA 4204

PATONA Premium Telescopic Monopod Tripod Model 4204 Instruction Manual

Model: 4204

INTRODUCTION

This manual provides instructions for the safe and effective use of your PATONA Premium Telescopic Monopod Tripod, Model 4204. This lightweight and durable aluminum monopod is designed to provide stable support for cameras and accessories, extending up to 155 cm and featuring universal 1/4 and 3/8 inch thread mounts.

Ultraportabel Design

Passt perfekt in die mitgelieferte Tragetasche – ideal für Reisen, Outdoor-Aufnahmen und schnellen Aufbau unterwegs.



Image: The monopod's ultra-portable design allows it to fit easily into the included carry bag or a backpack, making it ideal for travel and outdoor photography. It weighs only 370g.

SAFETY INFORMATION

- Ensure all locking mechanisms are securely fastened before attaching equipment or extending the monopod.
- Do not exceed the maximum load capacity of the monopod.
- Avoid using the monopod in extreme weather conditions (e.g., strong winds, heavy rain) without proper protection for your equipment.
- Keep hands and fingers clear of telescoping sections when extending or collapsing to prevent pinching.
- Store the monopod in its carry bag when not in use to protect it from damage.

PACKAGE CONTENTS

Verify that all items are present in the package:

- PATONA Premium Telescopic Monopod Tripod (Model 4204)

- Carry Bag

SETUP

1. Attaching Your Device

The monopod features universal 1/4 inch and 3/8 inch thread mounts for compatibility with most cameras and accessories.

1. Locate the mounting screw at the top of the monopod.
2. Carefully screw your camera, smartphone holder, or other compatible accessory onto the thread until it is secure. Do not overtighten.

Universelle Gerätekompatibilität

Standard 1/4" und 3/8" Gewinde garantieren Kompatibilität mit den meisten Kameras und professioneller Fotoausrüstung



Mit Smartphones



Mit Action-Kameras



Gruppenfoto

Image: The monopod's universal 1/4" and 3/8" threads allow attachment of various devices, including smartphones and action cameras, as shown in the examples.

2. Adjusting the Hand Strap

The non-slip handle includes an adjustable hand strap for added security during use.

1. Slide your hand through the strap.

2. Adjust the strap to a comfortable and secure fit around your wrist.



Image: Detail of the monopod's non-slip grip and the adjustable hand strap, designed for secure handling.

OPERATING INSTRUCTIONS

1. Extending and Collapsing the Monopod

The monopod features a quick extendable telescopic mechanism, allowing adjustment from 44 cm to 155 cm.

1. To extend: Twist each section counter-clockwise slightly to unlock, pull to the desired length, then twist clockwise to lock securely. Repeat for all sections.
2. To collapse: Twist each section counter-clockwise slightly to unlock, push the section back in, then twist clockwise to lock. Repeat for all sections until fully collapsed.

Teleskop-Höhensteuerung

Verstellbares Teleskopdesign, das sich von kompakten 44 cm auf volle 155 cm ausziehen lässt – ideal für Aufnahmen aus niedriger Perspektive, auf Augenhöhe oder aus der Vogelperspektive.



44 cm — 155 cm

Höhen- & Winkelkontrolle für jede Aufnahme.

Image: Visual representation of the monopod's telescopic height adjustment, demonstrating its range from 44 cm (collapsed) to 155 cm (fully extended).

2. Using the Monopod for Stable Recording

The monopod provides stable support for photography and videography, ideal for various scenarios.

1. Extend the monopod to a comfortable height that provides the desired angle for your shot.
2. Ensure all sections are securely locked.
3. Place the monopod's foot firmly on the ground. For added stability, lean the monopod slightly towards your body.
4. Use the hand strap for a secure grip and to prevent accidental drops.

Vertikale Stabilität für unterwegs

Aufnehmen mit sicherem Halt • Ausgewogene Last • Zuverlässig



Image: Examples of the monopod providing vertical stability, both when standing independently with a camera and when held by a user during outdoor activities.

Überall bereit für Schöpfer

Vlogs • Reisen • Schnelle Aufnahmen – Sofortige Stabilität für handgeführtes Filmen



Image: The monopod is versatile for various creative uses, such as vlogging or capturing quick shots with a smartphone, providing instant stability for handheld filming.

MAINTENANCE

- **Cleaning:** Wipe the monopod with a soft, dry cloth after each use to remove dust and dirt. For stubborn grime, use a slightly damp cloth and then dry thoroughly.
- **Storage:** Store the monopod in its provided carry bag in a cool, dry place away from direct sunlight and extreme temperatures.
- **Inspection:** Periodically check all locking mechanisms and threads for wear or damage. Do not use if any part is damaged.
- **Avoid Water:** The monopod is not water-resistant. Avoid prolonged exposure to water or moisture.

TROUBLESHOOTING

Problem: Monopod sections do not extend or collapse smoothly.

Solution: Ensure the locking mechanisms are fully disengaged (twisted counter-clockwise). Clean any dirt or debris from the telescoping sections. Do not force the sections.

Problem: Camera/device feels unstable on the monopod.

Solution: Verify that your camera or accessory is securely screwed onto the 1/4 or 3/8 inch thread. Ensure all monopod sections are fully locked after extension. Check that the monopod is placed on a stable surface.

Problem: Monopod is difficult to carry.

Solution: Ensure the monopod is fully collapsed and stored in its carry bag. The monopod is designed to be lightweight (0.36 kg) and portable.

SPECIFICATIONS

Brand	PATONA
Model Name	4204
Material	Aluminium
Colour	Black
Minimum Height	44 Centimetres
Maximum Height	155 Centimetres
Folded Size	44 cm
Item Weight	0.36 Kilograms
Compatible Devices	Camera
Thread Mounts	1/4 inch & 3/8 inch
Special Features	Foldable, Telescopic
Water Resistance Level	Not Water Resistant

WARRANTY AND SUPPORT

PATONA is a German brand with over 20 years of experience, committed to quality and customer satisfaction. For any questions, technical support, or warranty claims regarding your PATONA Premium Telescopic Monopod Tripod, please contact our customer service team.

Please refer to your purchase documentation for specific warranty terms and contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0G6K9MXFB>

More documents and user manuals: <https://manuals.plus/>