

[Manuals.plus](#) /

› [Seesii](#) /

› SEESII 2-in-1 Pole Electric Pruning Shears (Model PS051Pro) Instruction Manual

Seesii PS051Pro

SEESII 2-in-1 Pole Electric Pruning Shears Instruction Manual

Model: PS051Pro

IMPORTANT SAFETY INSTRUCTIONS

Read all safety warnings, instructions, illustrations, and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious injury.

General Safety

- Always wear appropriate personal protective equipment (PPE), including safety glasses, gloves, and sturdy footwear.
- Keep children and bystanders away while operating the pruning shears. Distractions can cause you to lose control.
- Do not operate power tools in explosive atmospheres, such as in the presence of flammable liquids, gases, or dust.
- Avoid unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the tool.
- Do not overreach. Keep proper footing and balance at all times. This enables better control of the power tool in unexpected situations.

Battery Safety

- Use only the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Do not short-circuit a battery pack or allow metallic objects to contact battery terminals.
- Do not expose battery packs to rain or wet conditions. Water entering a battery pack may increase the risk of electric shock or fire.
- Dispose of used batteries responsibly according to local regulations.

Blade Safety

- The blades are extremely sharp. Keep fingers and all body parts away from the cutting area.
- Always disconnect the battery pack before performing any adjustments, changing accessories, or storing the power tool.
- Ensure the blades are clean and free of debris before and after each use.

PRODUCT OVERVIEW AND PACKAGE CONTENTS

Product Features


- **2-in-1 Versatile Design:** Functions as a handheld electric pruning shear or attaches to an extendable pole for high branch trimming.
- **Powerful 2.2" Cutting Capacity:** Easily cuts through branches up to 2.2 inches in diameter.
- **Extended 9ft Reach:** Safely trim high branches from the ground without a ladder.
- **4 Adjustable Cutting Modes:** Select from 0.6", 1.4", 1.8", and 2.2" cutting diameters.
- **Long-Lasting Battery Performance:** Two 4000mAh high-capacity batteries provide extended operation.
- **Upgraded Brushless Motor:** Delivers increased power, longer battery runtime, and extended motor lifespan.
- **Sharp SK5 Steel Blade:** Durable high-carbon steel blade for clean, smooth cuts. Includes an extra replacement blade.
- **Built-In Work Light:** Provides clear visibility for pruning in dim or shaded areas.
- **Digital Display:** Shows real-time battery life and cut count for efficient monitoring.
- **Safety Lock:** Prevents accidental starts for enhanced user safety.

Package Contents

Verify that all items are present in your package:

- Electric Pruning Shears (1)
- Telescopic Pole (1)
- 4.0Ah Batteries (2)
- Fast Charger (1)
- Spare Blade (1)
- Tool Kit (1)
- Gloves (1 pair)
- Shoulder Strap (1)
- User Manual (1)

What's in the Box

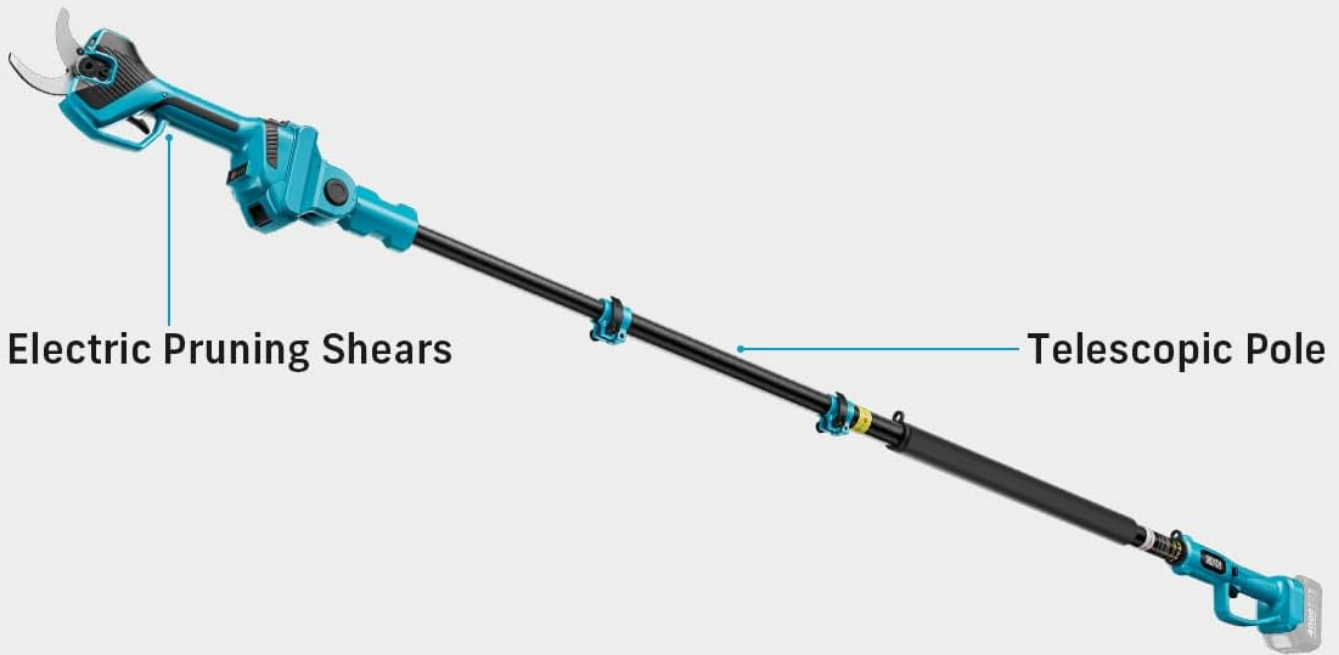

2 × 4.0Ah Batteries



Fast Charger



Shoulder Strap



Gloves



Spare Blade



Tool Kit



User Manual

Image: All components included in the SEESII 2-in-1 Pole Electric Pruning Shears package, including the pruner, telescopic pole, batteries, charger, spare blade, tool kit, gloves, shoulder strap, and user manual.

SETUP

Battery Charging and Installation

1. Connect the fast charger to a power outlet.

2. Insert the 4.0Ah batteries into the charger. The indicator light on the charger will show the charging status.
3. Once fully charged, remove the batteries from the charger.
4. Align the charged battery with the battery slot on the bottom of the electric pruning shears and slide it in until it clicks securely into place.



Image: The two 4000mAh rechargeable batteries and the fast charger. These batteries provide long-lasting performance, supporting up to 4,000 cuts on a full charge and recharging in 1-2 hours.

Assembling the Pole Pruner

1. To use the pruner with the telescopic pole, align the electric pruning shears head with the top end of the pole and secure it firmly.
2. Attach the handle section of the pole to the bottom of the main pole.
3. Adjust the length of the telescopic pole to your desired reach, up to 9 feet, by loosening and tightening the locking mechanisms.
4. Attach the shoulder strap to the designated points on the pole for comfortable and balanced operation.

Your browser does not support the video tag.

Video: This video demonstrates the step-by-step process of assembling the SEESII 2.2" Pole Electric Pruning Shears, including attaching the pruner head to the telescopic pole and securing the shoulder strap.

Up to 9ft Reach

Safely Prune High Branches from the Ground

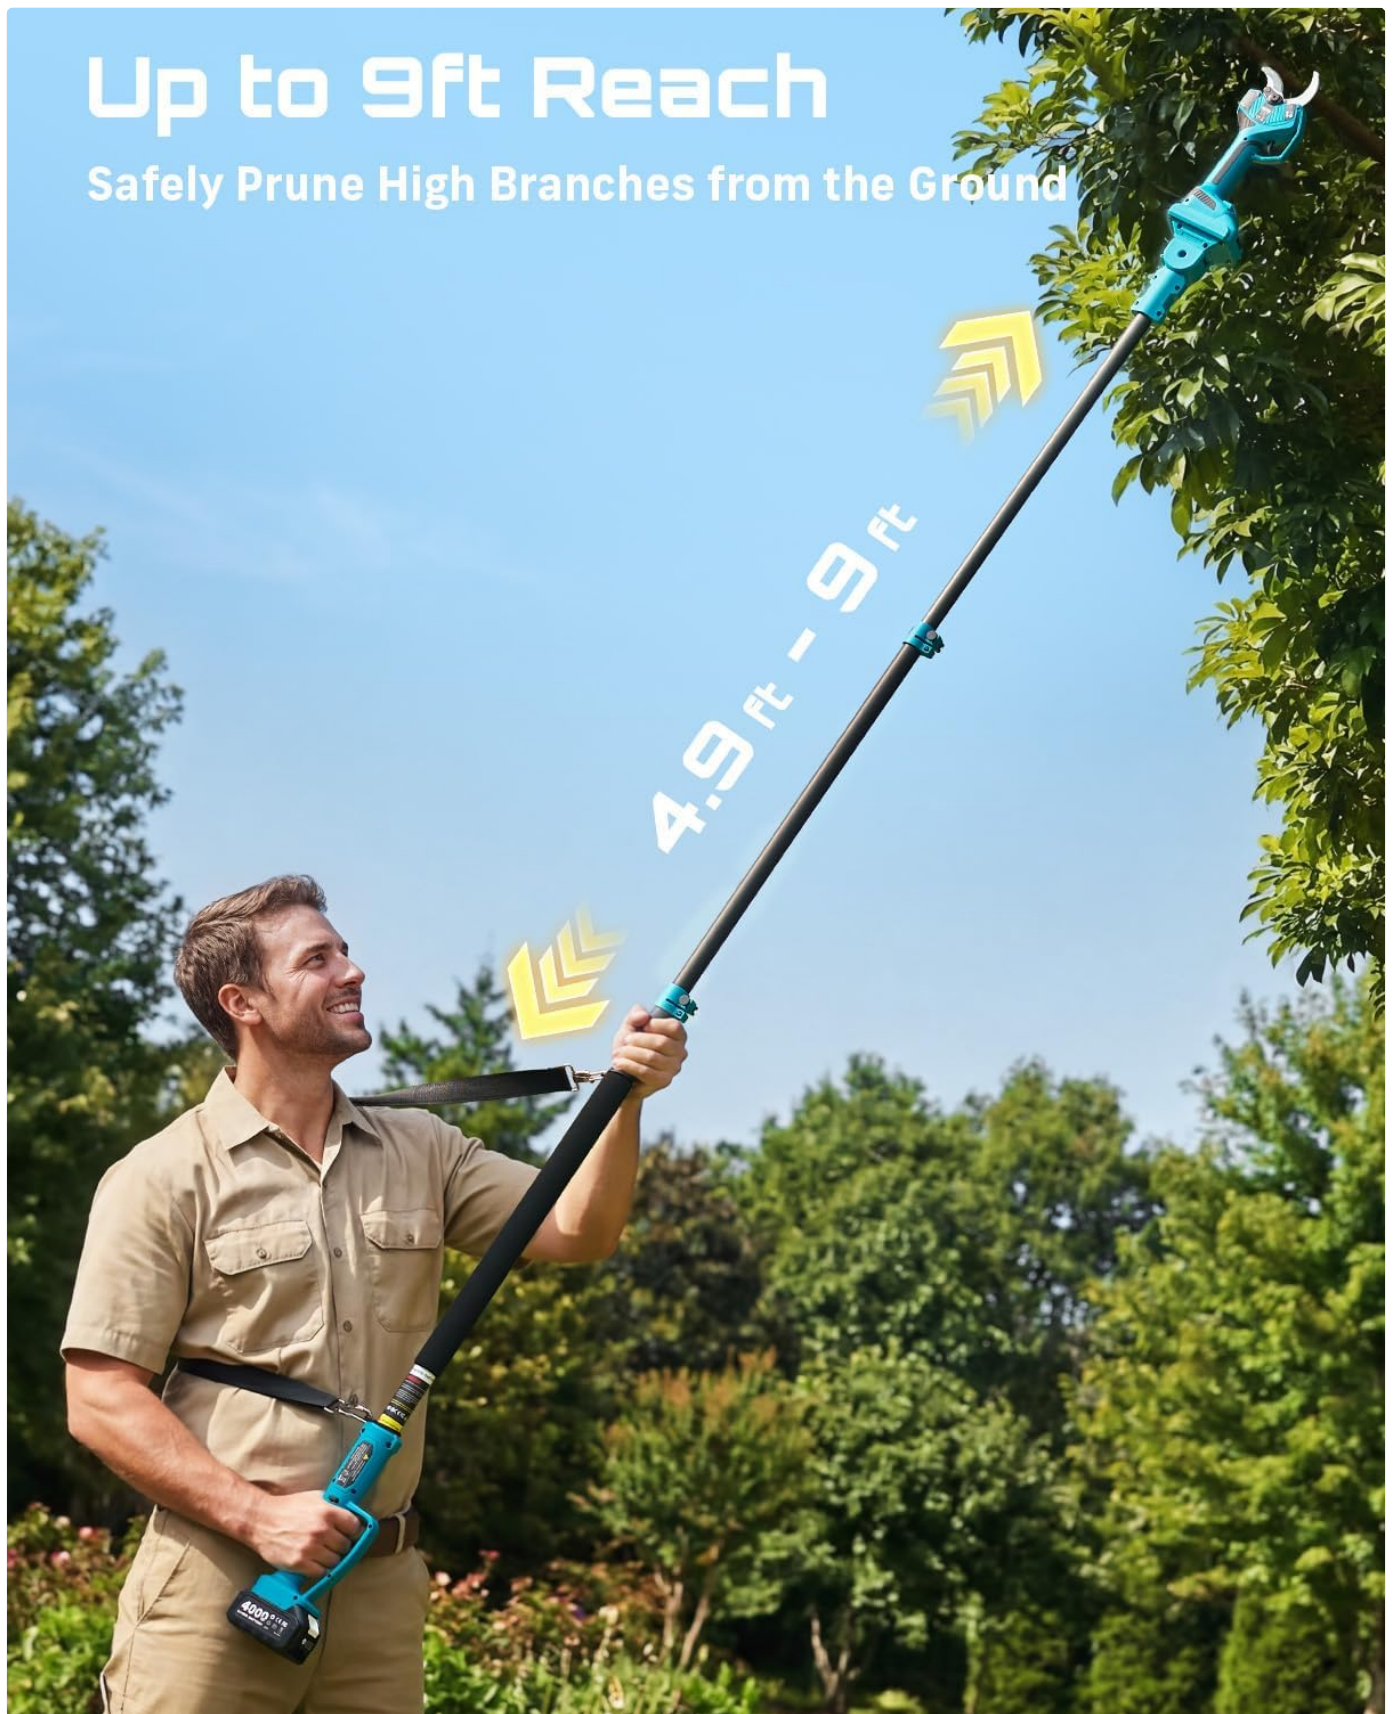


Image: A user demonstrating the extended 9-foot reach of the pole pruner, allowing for safe trimming of high branches from the ground without the need for a ladder.

OPERATING INSTRUCTIONS

Powering On/Off

1. Ensure a charged battery is securely installed.
2. To power on, hold the safety lock button and then double-press the trigger. The blades will open, indicating the pruner

is ready for use.

3. To power off, press and hold the power button until the indicator lights turn off.

Adjusting Cutting Modes

The pruner offers four adjustable cutting diameters to suit various branch sizes:

- **0.6" (15mm):** Ideal for flowers and small stems.
- **1.4" (35mm):** Suitable for general garden pruning.
- **1.8" (40mm):** Recommended for fruit tree branches.
- **2.2" (55mm):** For thicker limbs and mature branches.

To adjust the cutting mode, press the power button repeatedly to cycle through the available cutting diameters. The digital display will indicate the selected mode.

Your browser does not support the video tag.

Video: This video illustrates how to switch between the four cutting modes (0.6", 1.4", 1.8", 2.2") by pressing the power button, allowing the user to accommodate different branch sizes.

4 Cutting Modes



15mm / 0.6"
Flowers & Small Stems



35mm / 1.4"
Garden Pruning



40mm / 1.5"
Fruit Tree Branches



55mm / 2.2"
Larger Tree Branches

Image: Visual representation of the four adjustable cutting modes, demonstrating the pruner's versatility for various pruning tasks from small flowers to thick branches.

Using the Work Light

The integrated work light provides illumination for pruning in low-light conditions.

1. Locate the light switch on the pruner handle.
2. Slide the switch to turn the work light on or off as needed.

Your browser does not support the video tag.

Video: A short demonstration of the built-in work light on the SEESII electric pruning shears, showing how it illuminates the cutting area for improved visibility.



Image: The electric pruner's built-in work light in action, providing clear visibility for pruning tasks during dusk or in shaded garden areas.

Digital Display

The digital display on the pruner provides real-time information:

- **Battery Life Indicator:** Shows the remaining battery charge.
- **Cut Count:** Tracks the number of cuts made, helping you monitor usage.

MAINTENANCE

Blade Cleaning and Lubrication

Regular cleaning and lubrication extend the life and performance of your blades.

1. **Disconnect Power:** Always remove the battery before cleaning or performing maintenance.
2. **Clean Blades:** Use a damp cloth to wipe sap and debris from the blades. For stubborn residue, use a blade cleaner or rubbing alcohol.
3. **Lubricate:** Apply a few drops of machine oil or specialized blade lubricant to the pivot points and cutting edges of the blades. Operate the pruner a few times to distribute the lubricant.

Blade Replacement

A spare SK5 steel blade is included for replacement when the original blade becomes dull or damaged.

1. **Disconnect Power:** Ensure the battery is removed from the pruner.
2. **Open Blades:** Manually open the blades as wide as possible.
3. **Remove Screws:** Using the provided tool kit, carefully unscrew the bolts holding the moving blade in place.
4. **Remove Old Blade:** Gently remove the worn or damaged moving blade.
5. **Install New Blade:** Position the new spare blade, ensuring it aligns correctly with the gear mechanism.
6. **Secure Screws:** Reinsert and tighten the screws to secure the new blade. Do not overtighten.
7. **Test:** Reinstall the battery and perform a few test cuts to ensure proper operation.

Your browser does not support the video tag.

Video: This video provides a visual guide on how to safely replace the moving blade of the electric pruning shears, including removing the

old blade and installing the new one.

Sharp SK5 Steel Blade

Smooth Cuts Through Thick Branches



Image: A close-up view of the sharp SK5 high-carbon steel blade making a clean cut through a branch. The product includes a spare blade for extended usability.

TROUBLESHOOTING

If you encounter issues with your SEESII Electric Pruning Shears, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Pruner does not turn on.	Battery not installed correctly or discharged. Safety lock not disengaged.	Ensure battery is fully charged and properly seated. Hold safety lock and double-press the trigger to activate.
Blades do not cut effectively or get stuck.	Blades are dull, dirty, or damaged. Attempting to cut branches exceeding maximum capacity.	Clean and lubricate blades. Replace dull or damaged blades. Ensure branch diameter is within the 2.2" limit.
Battery does not charge.	Charger not connected properly. Faulty charger or battery.	Verify charger is securely plugged into an outlet and the battery. Contact customer support if issues persist.

SPECIFICATIONS

Feature	Specification
Brand	Seesii
Model Number	PS051Pro
Cutting Capacity	Up to 2.2 inches (55mm)
Adjustable Cutting Modes	0.6", 1.4", 1.8", 2.2" (15mm, 35mm, 40mm, 55mm)
Extended Reach (with pole)	Up to 9 feet
Battery Type	Lithium-ion
Battery Capacity	2 x 4000mAh
Motor Type	Brushless
Blade Material	SK5 High-Carbon Steel
Item Weight	9.7 pounds
Product Dimensions	110"L x 4"W (with pole)

WARRANTY AND SUPPORT

SEESII is committed to providing high-quality products and customer satisfaction.

- **Technical Support:** Enjoy 36 months of technical support from the date of purchase.
- **Customer Service:** Our support team aims to provide a fast response within 24 hours for any inquiries or issues.

For assistance, please contact SEESII customer service through the platform where you purchased the product or visit the official SEESII website for contact information.



Image: A customer service representative ready to assist, highlighting the 36 months of technical support and commitment to fast responses within 24 hours.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B0G6KDY2SX>

More documents and user manuals: <https://manuals.plus/>