

[Manuals.plus](#) /

› [Sekey](#) /

› Sekey 250L Foldable Beach Wagon Instruction Manual

Sekey 250L

Sekey 250L Foldable Beach Wagon Instruction Manual

Model: 250L | Brand: Sekey

INTRODUCTION

This manual provides instructions for the safe and efficient use of your Sekey 250L Foldable Beach Wagon. Please read these instructions carefully before initial use and retain for future reference.



Image: The Sekey 250L Foldable Beach Wagon in its unfolded state, ready for use.

SAFETY WARNINGS

- Do not exceed the maximum weight capacity of 400 lbs (181 kg).
- Ensure all parts are securely locked in place before loading or moving the wagon.
- Keep hands and fingers clear of folding mechanisms during setup and folding to prevent pinching.
- Do not use the wagon for transporting people, especially children. This product is designed for cargo only.
- Always engage the wheel brakes when the wagon is stationary, especially on inclines.
- Avoid pulling the wagon at excessive speeds or over extremely rough terrain that could cause instability.
- Distribute weight evenly within the wagon to maintain stability.

SETUP AND UNFOLDING

The Sekey 250L Beach Wagon is designed for quick and easy setup with no assembly required. Follow these steps to unfold your wagon:

1. Place the folded wagon on a flat, stable surface.
2. Grasp the top edges of the wagon and pull them apart gently. The frame will begin to expand.
3. Push down on the center of the wagon's base until it lies flat and the fabric is taut.
4. Ensure the handle is extended and locked into a comfortable pulling position.



Image: The wagon shown both in its expanded, high-capacity state and folded into a compact size for storage.

OPERATING INSTRUCTIONS

Loading the Wagon

The wagon has an extra-large capacity of 250 liters and can support up to 400 lbs (181 kg). Distribute items evenly to maintain balance and prevent tipping. Place heavier items at the bottom and center of the wagon.

Huge capacity **Tiny** form

OURS



250L
Storage Space



40%
Smaller

OTHERS



80L

Fall
Over



Image: Visual comparison illustrating the large 250L storage capacity of the Sekey wagon compared to smaller alternatives.

Maneuvering and Wheels


Your Sekey wagon is equipped with 7-inch diameter, 3.5-inch wide all-terrain wheels designed to glide effortlessly over various surfaces, including sand, grass, and rough terrain. The anti-slip rubber strip on the wheels enhances traction and reduces vibrations.

- **Adjustable Handle:** The adjustable handle allows for comfortable pulling, keeping the cart aligned with your movements.
- **360° Swivel Wheels:** The front wheels feature a 360° swivel design, enabling effortless turning and navigation in tight spaces.
- **Brakes:** Built-in brakes provide reliable stopping power. Engage the brakes by pressing down on the red levers located on the front wheels when the wagon is stationary.



Image: Detail of the wagon's large wheels, highlighting their design for navigating uneven surfaces.

Navigates **Tight Spaces Easily**

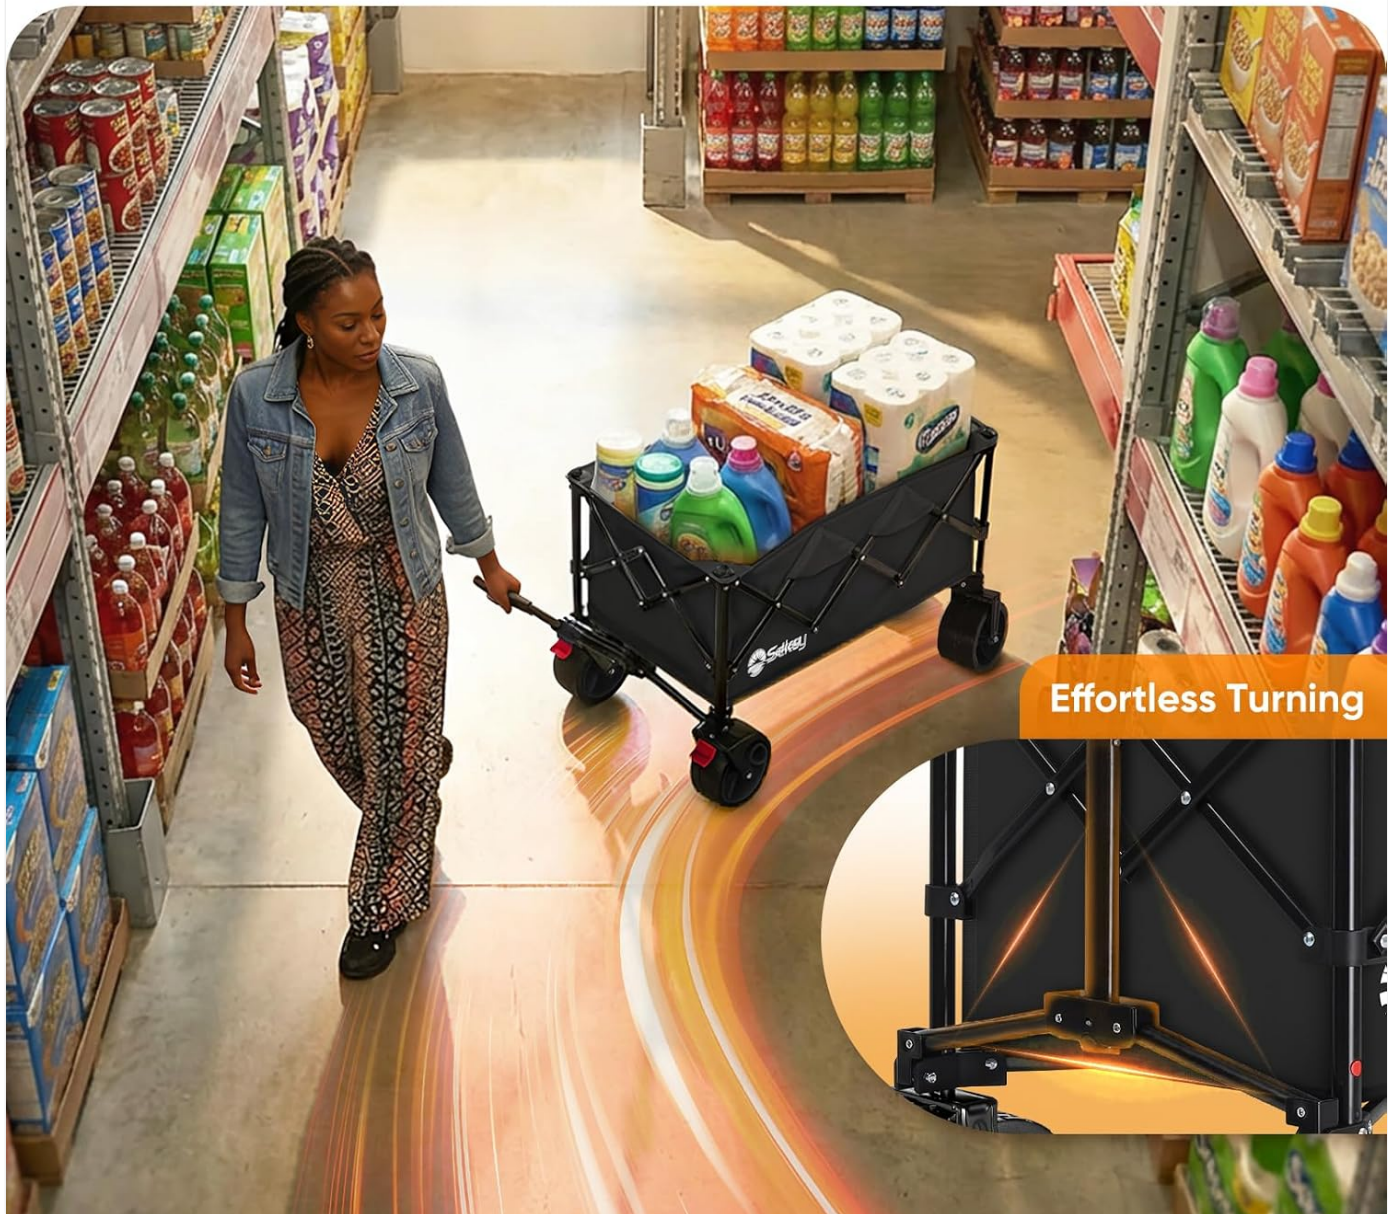

Effortless Turning

Image: The wagon being used in a retail environment, showcasing its maneuverability in confined areas.

Folding for Storage

To fold the wagon for compact storage:

1. Ensure the wagon is empty.
2. Locate the pull tab in the center of the wagon's base.
3. Pull the tab upwards firmly. The wagon's sides will begin to collapse inwards.
4. Continue to push the sides together until the wagon is fully folded.
5. Secure the folded wagon with the integrated strap to keep it compact.

PRODUCT DIMENSION



Image: Detailed dimensions of the wagon in both its open and folded configurations.

MAINTENANCE

Regular maintenance will ensure the longevity and optimal performance of your Sekey Beach Wagon.

- **Cleaning:** The wagon's fabric (Oxford Fabric, PVC) can be cleaned with a damp cloth and mild soap. Allow to air dry completely before folding and storing. Do not use harsh chemicals or abrasive cleaners.
- **Frame Care:** The carbon steel frame is rust-resistant. Wipe down any dirt or moisture after use, especially if exposed to saltwater or damp conditions, to prevent corrosion.
- **Wheel Inspection:** Periodically check the wheels for debris, wear, or damage. Ensure they spin freely and the brakes engage correctly.
- **Storage:** Store the wagon in a dry, cool place away from direct sunlight when not in use to preserve the fabric and frame integrity.



Image: Visual representation of the durable materials and construction of the wagon.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Wagon does not unfold or fold smoothly.	Mechanism obstructed or not fully engaged.	Ensure no items are obstructing the folding mechanism. Apply gentle, even pressure when unfolding or pulling the center tab to fold.
Wheels are difficult to turn or roll.	Debris in wheel mechanism, brakes engaged, or uneven load.	Check wheels for sand, dirt, or other debris and clean if necessary. Ensure brakes are disengaged. Redistribute load evenly.

Problem	Possible Cause	Solution
Wagon feels unstable during transport.	Overloaded or unevenly distributed weight.	Reduce load to within 400 lbs capacity. Redistribute items to ensure even weight distribution.
Handle is floppy when folded.	No dedicated locking mechanism for the handle in folded state.	This is a design characteristic. Exercise caution when carrying the folded wagon to avoid finger pinching.

SPECIFICATIONS

Feature	Detail
Model	250L
Product Dimensions (Unfolded)	40.6" D x 21.3" W x 34.3" H
Storage Space (Internal)	31.5" L x 18.1" W x 13.4" H (250 Liters)
Weight Capacity	400 lbs (181 kg)
Material (Fabric)	600D Oxford Fabric, Polyvinyl Chloride (PVC)
Material (Frame)	Carbon Steel
Wheel Diameter	7 inches
Wheel Width	3.5 inches
Special Features	Big Capacity, Locking Caster, Maneuverable, Sand Friendly, 360° Swivel Wheels, Built-in Brakes

WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact Sekey customer service directly. Refer to the product packaging or the official Sekey website for the most current contact details. You can also visit the official Sekey store on Amazon for more information:[Sekey Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question