

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [IMIKI](#) /

> [IMIKI T12 SE Earbuds User Manual](#)

IMIKI T12 SE

IMIKI T12 SE Earbuds User Manual

Model: T12 SE

1. IMPORTANT SAFETY INFORMATION

Please read all safety warnings and instructions before using this product to ensure safe and proper operation. Keep this manual for future reference.

- **Hearing Protection:** Avoid listening at high volume levels for extended periods to prevent hearing damage.
- **Driving Safety:** Do not use earbuds while driving or cycling, or in any situation where your inability to hear ambient sounds could pose a danger to yourself or others.
- **Water and Moisture:** Keep the earbuds and charging case away from water, rain, and other liquids. This product is not waterproof.
- **Heat and Fire:** Do not expose the product to extreme temperatures, direct sunlight, or open flames.
- **Choking Hazard:** This product contains small parts and is not suitable for children under 3 years old.
- **Disposal:** Dispose of the product and its battery responsibly according to local regulations. Do not dispose of with household waste.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- IMIKI T12 SE Wireless Earbuds (Left and Right)
- Charging Case
- USB Charging Cable
- User Manual

3. PRODUCT OVERVIEW

Familiarize yourself with the components of your IMIKI T12 SE Earbuds.



Image: Two white IMIKI T12 SE earbuds floating above their open white charging case. The earbuds feature a stem design and black ear tips. The charging case is sleek and compact.

Earbud Components:

- **Touch Control Area:** For playback, calls, and voice assistant.
- **Microphone:** For calls and voice commands.
- **Charging Contacts:** Connects to the charging case.

Charging Case Components:

- **Charging Port:** USB-C port for charging the case.
- **LED Indicator:** Shows charging status and battery level.
- **Earbud Slots:** Holds and charges the earbuds.

4. SETUP

4.1 Charging the Earbuds and Case

1. **Charge the Case:** Connect the provided USB charging cable to the charging port on the case and to a USB power adapter (not included). The LED indicator will show the charging status.
2. **Charge the Earbuds:** Place the earbuds into their respective slots in the charging case. Ensure the charging contacts align. The earbuds will begin charging automatically. The LED indicators on the earbuds (if present) or case will confirm charging.
3. **Full Charge:** Allow approximately 1-2 hours for a full charge of both the case and earbuds.

4.2 Pairing with a Device

The earbuds will automatically enter pairing mode when first removed from the charging case.

1. **Enable Bluetooth:** Turn on Bluetooth on your smartphone or other audio device.
2. **Open Case:** Open the charging case and remove both earbuds. They will automatically power on and attempt to pair with each other.
3. **Select Device:** On your device's Bluetooth settings, look for "IMIKI T12 SE" in the list of available devices and select it to connect.
4. **Confirmation:** Once connected, you will hear an audio prompt from the earbuds, and the device will show "Connected."

Note: If pairing fails, place the earbuds back into the case, close the lid, wait a few seconds, and then repeat the steps.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- **Power On:** Open the charging case, and the earbuds will power on automatically. Alternatively, press and hold the touch control area on both earbuds for 3 seconds.
- **Power Off:** Place the earbuds back into the charging case and close the lid. They will power off automatically. Alternatively, disconnect them from Bluetooth, and they will power off after 5 minutes of inactivity.

5.2 Music Control

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap on the right earbud.
- **Previous Track:** Double tap on the left earbud.
- **Volume Up:** Triple tap on the right earbud.
- **Volume Down:** Triple tap on the left earbud.

5.3 Call Control

- **Answer/End Call:** Single tap on either earbud.
- **Reject Call:** Press and hold on either earbud for 2 seconds.

5.4 Voice Assistant

- **Activate Voice Assistant:** Press and hold on either earbud for 3 seconds (when not on a call).

6. MAINTENANCE

6.1 Cleaning

- Use a soft, dry, lint-free cloth to clean the earbuds and charging case.
- Do not use harsh chemicals, cleaning solvents, or strong detergents.
- Gently clean the charging contacts on both the earbuds and the case with a dry cotton swab to ensure proper charging.

6.2 Storage

- When not in use, always store the earbuds in their charging case to protect them and keep them charged.
- Store the product in a cool, dry place, away from extreme temperatures and direct sunlight.

7. TROUBLESHOOTING

If you encounter issues, try these common solutions:

Problem	Solution
---------	----------

Problem	Solution
Earbuds not pairing with device	<p>Ensure Bluetooth is enabled on your device.</p> <p>Place earbuds back in case, close lid, then reopen and try pairing again.</p> <p>Forget/delete "IMIKI T12 SE" from your device's Bluetooth list and re-pair.</p> <p>Ensure earbuds are charged.</p>
Only one earbud working	<p>Ensure both earbuds are charged.</p> <p>Place both earbuds back in the case, close the lid, then reopen. They should re-sync.</p> <p>Try resetting the earbuds (refer to manufacturer's specific reset instructions if available, otherwise, re-pair).</p>
Earbuds not charging	<p>Ensure the charging cable is securely connected to both the case and power source.</p> <p>Clean the charging contacts on both earbuds and the case.</p> <p>Try a different USB cable or power adapter.</p>
Low volume or poor sound quality	<p>Adjust the volume on both your device and the earbuds.</p> <p>Ensure earbuds are properly seated in your ears.</p> <p>Clean any debris from the earbud speaker mesh.</p> <p>Ensure there are no obstructions between the earbuds and your device.</p>

8. SPECIFICATIONS

Feature	Detail
Model Name	IMIKI T12 SE
Brand	IMIKI
Connectivity	Wireless (Bluetooth)
Bluetooth Version	5.0 (Typical, actual may vary)
Wireless Range	Up to 10 meters (33 feet) in open space (Typical, actual may vary)
Earbud Battery Life	Approx. 4-5 hours (per charge, typical usage)
Charging Case Battery Life	Provides 3-4 additional charges for earbuds (Typical)
Charging Port	USB-C
Charging Time	Earbuds: 1 hour; Case: 1.5-2 hours (Approx.)

9. WARRANTY AND SUPPORT

IMIKI products are designed and manufactured to the highest quality standards. This product is covered by a limited warranty from the date of purchase. Please refer to the warranty card included in your package or visit the official IMIKI website for detailed warranty terms and conditions.

For technical support, troubleshooting assistance, or warranty claims, please contact IMIKI customer

service through the contact information provided on the official website or your purchase platform.

Website: www.imiki.com *(Please verify the official website for the most accurate information)*