

MYSTILUCK Wireless Controller

MYSTILUCK Wireless Controller Instruction Manual

Model: Wireless Controller

INTRODUCTION

This manual provides detailed instructions for setting up, operating, and maintaining your MYSTILUCK Wireless Controller. This controller is designed for compatibility with PS5, PC, MAC, iOS, Android, and Steam Deck, offering a versatile gaming experience.

PACKAGE CONTENTS

- MYSTILUCK Wireless Controller
- USB Charging Cable
- Instruction Manual (this document)

SETUP AND FIRST USE

Charging the Controller

Before first use, fully charge the controller using the provided USB cable. Connect the USB cable to the controller's charging port and to a compatible USB power source (e.g., console, PC, or USB wall adapter).

Important Note: When charging, it is recommended not to use the controller. Use the supplied USB cable for charging. If the controller is used while charging, the power output may exceed the input, leading to a perception that the controller is not charging.

LONG WORKING HOURS BUILT

Tip: Fully charged before first use!



Image: The controller's internal 1500mAh battery, indicating 6-8 hours working time and 2-3 hours charging time via Type-C.

Pairing the Controller

When connecting the device to a host for the first time, do not touch the joysticks on the controller. The joysticks are automatically calibrated during the pairing process. Calibration is complete once pairing is successful.

The controller supports multiple connection modes for various platforms:

- **PS5:** Follow the console's instructions for pairing a new wireless controller.

- **PC (Windows 10 and above):** Connect via Bluetooth or USB cable. Ensure Bluetooth is enabled on your PC.
- **MAC:** Connect via Bluetooth or USB cable.
- **iOS/Android (10 and above):** Pair via Bluetooth in your device's settings.
- **Steam Deck:** Connect via Bluetooth or USB cable.

5 Connection Modes

A truly worthy multi-platform gaming controller



For Android



For PS-5



For iOS



PC



Steam Deck



**Compatible with PS-5, PC (Windows 10 and above)
Mac, Steam Deck, Android 10 and above, and iOS**

Image: Visual representation of the controller's 5 connection modes, highlighting compatibility with various platforms.

RGB Lighting Modes

The controller features 7 RGB light colors (Red, Orange, Yellow, Green, Turquoise, Blue, Purple) and 4 lighting modes:

- Dazzling
- Monochromatic Light
- Monochromatic Breathing
- Monochromatic Breathing Cycle

Refer to the controller's specific button combinations (usually a dedicated button or a combination with the 'Share' or 'Home' button) to cycle through these modes and colors.

7 COLORS LIGHT & 4 LED MODES

With 7 color magic light and free switching of 4 modes, injects a charming atmosphere into the gaming scene and makes the controller show cool texture.



Image: The controller displaying its customizable 7-color RGB lighting and various LED modes.

Hall Effect Joysticks and Triggers

The controller is equipped with Hall Effect joysticks and adaptive triggers. This technology provides precise control and eliminates joystick drift. The triggers offer adjustable resistance levels and a response time of less than 0.1 ms, with 256 levels of pressure sensitivity.

Finely Tuned Hall Effect Triggers

► Response time <0.1ms



Hall Effect Joysticks

► Response time <0.1ms

► Response time <0.1ms

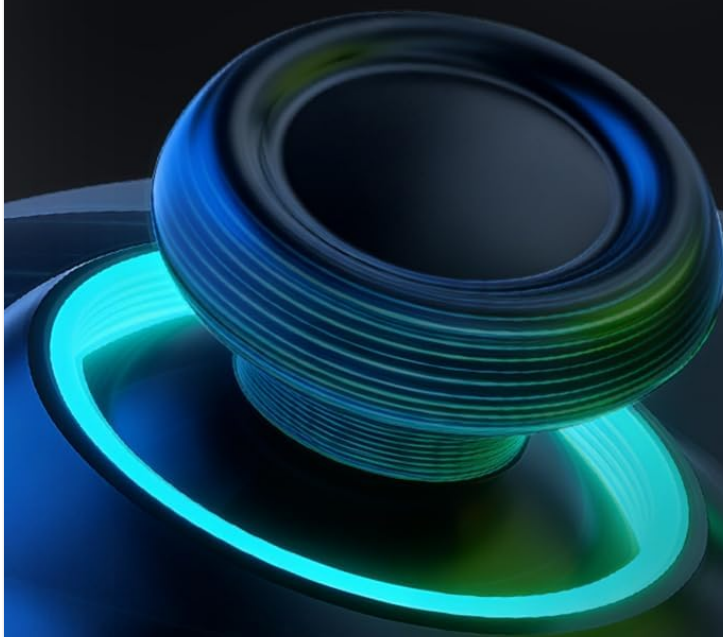


Image: Detailed view of the Hall Effect triggers and joysticks, emphasizing their quick response time.

Dual Vibration and Turbo Function

The gamepad includes two vibration motors with 4 adjustable vibration levels (100%, 75%, 50%, 0%) for enhanced gaming immersion.

The Turbo function offers two modes: automatic Turbo and manual Turbo, with three adjustable speeds (5-10-15Hz). This feature is particularly useful for shooter games.

- To increase Turbo speed: Press the **TURBO** button and push the right 3D joystick upward.
- To decrease Turbo speed: Press the **TURBO** button and push the right 3D joystick downward.
- The default Turbo speed is the middle gear.

DUAL VIBRATION

With adjustable vibration speed intensities in 4 levels
it brings you the most realistic gaming experience



Image: The controller with visual effects representing dual vibration, showing a 75% intensity level.

TURBO FUNCTION

It relieves users of the need to press buttons repeatedly and reduces the fatigue during gameplay

5 shots/s ▬

10 shots/s ▬ ▬

15 shots/s ▬ ▬ ▬



**There are three gears (5-10-15HZ) to adjust the TURBO speed;
TURBO + pushing the right 3D joystick upward: increase one gear of continuous firing speed;
TURBO + pushing the right 3D joystick downward: decrease one gear of continuous firing speed;
The default is the middle gear.**

Image: The controller with an arrow pointing to the 'TURBO' button, explaining how to adjust its speed.

3.5mm Headphone Jack and Touchpad

A 3.5mm headphone jack is integrated, allowing connection of headsets with microphones or traditional headphones for online chat and realistic audio. The central touchpad supports precise swipe, tap, and press movements.

6-Axis Gyro Motion Control

The built-in 6-axis gyroscope chip enables precise motion control, linking player body movements to in-game character

actions for a more immersive experience.



Image: A user demonstrating the 6-axis gyro motion control feature of the controller.

Programmable Keys

The controller features two programmable keys (M1 and M2) on the back. These can be configured to create custom combos and simplify complex in-game operations.

2 Programming keys

Easily create combos, simplify complex operations
and gain an edge in battles



Image: The back of the controller highlighting the M1 and M2 programmable keys.

MAINTENANCE

To ensure the longevity and optimal performance of your MYSTILUCK Wireless Controller, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the controller. Avoid using harsh chemicals or abrasive materials.

- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Charging:** Always use the provided USB cable for charging. Avoid overcharging or completely draining the battery frequently.
- **Handling:** Avoid dropping the controller or subjecting it to strong impacts.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Controller does not turn on.	Low battery.	Charge the controller fully using the supplied USB cable.
Controller does not pair.	Not in pairing mode; interference; incorrect pairing procedure.	Ensure the controller is in pairing mode. Check for other Bluetooth devices causing interference. Follow the specific pairing instructions for your device (PS5, PC, etc.). Remember not to touch joysticks during initial pairing.
Joystick drift or inaccurate input.	Calibration issue; software glitch.	Ensure joysticks are not touched during initial pairing. If issues persist, try resetting the controller (refer to specific reset instructions if available, or contact support).
Vibration not working.	Vibration level set to 0%; game does not support vibration.	Check the vibration level settings on the controller. Ensure the game you are playing supports vibration feedback.
Controller not charging.	Incorrect cable; power source issue; using controller while charging.	Use only the supplied USB cable. Ensure the power source is functional. Avoid using the controller while it is charging.

SPECIFICATIONS

Model	Wireless Controller
Compatibility	PS5, PC (Windows 10+), MAC, iOS, Android (10+), Steam Deck
Battery Capacity	1500 mAh (1 A pile necessarie. (incluse))
Working Time	6-8 hours (with lights on)
Charging Time	2-3 hours (Type-C)
Dimensions	16.2 x 11.6 x 6.5 cm
Weight	310 grams
Connectivity	Wireless (Bluetooth), USB-C
Special Features	7 RGB Colors, 4 LED Modes, Hall Effect Joysticks & Triggers, Dual Vibration (4 levels), Turbo Function (3 speeds), 3.5mm Headphone Jack, Touchpad, 6-Axis Gyroscope, 2 Programmable Keys
ASIN	B0G6SFG19C

WARRANTY AND SUPPORT

For any quality issues with the product, please contact our store. We offer a replacement or refund. For necessary software updates for the controller, please send us an email. We will respond within 24 hours of receiving your message.

Return Policy: If you wish to return a product within 30 days of receipt because you have changed your mind, please consult the Amazon help page on returns. If you have received a defective or damaged product, please consult the Amazon help page on defective items. For specific information on purchases made on the Marketplace, please consult the Amazon help page on Marketplace returns.

Please refer to the Amazon website for the most up-to-date warranty and return policies.

© 2023 MYSTILUCK. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question