

ZMISHIBO OBS42

ZMISHIBO 106 cm Ceiling Fan with Light - User Manual

Model: OBS42

1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your ZMISHIBO 106 cm Ceiling Fan with Light (Model OBS42). Designed for modern living spaces, this fan features retractable blades, adjustable CCT LED lighting (3000K-6500K), a reversible DC motor for year-round use, and 6 speed settings, all controlled by a convenient remote. Please read this manual thoroughly before installation and use to ensure safe and efficient operation.

2. IMPORTANT SAFETY INSTRUCTIONS


WARNING: To reduce the risk of fire, electric shock, or personal injury, always follow these basic precautions:

- Read all instructions carefully before installing and using the fan.
- Installation must be performed by a qualified electrician in accordance with all local and national electrical codes.
- Ensure the power supply is disconnected at the circuit breaker or fuse box before beginning installation or performing any maintenance.
- Do not insert any objects into the fan blades while the fan is operating.
- Keep children and pets away from the fan during operation.
- Ensure the mounting structure can safely support the weight of the fan (approximately 10 kg).
- Use only the parts supplied with the fan for installation.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged before installation.

- Ceiling Fan Unit (with retractable blades and integrated LED light)
- Remote Control
- Wall Mount for Remote Control
- Short Suspension Rod (15 cm)
- Long Suspension Rod (25 cm)
- Mounting Hardware (screws, anchors, washers, etc.)
- User Manual

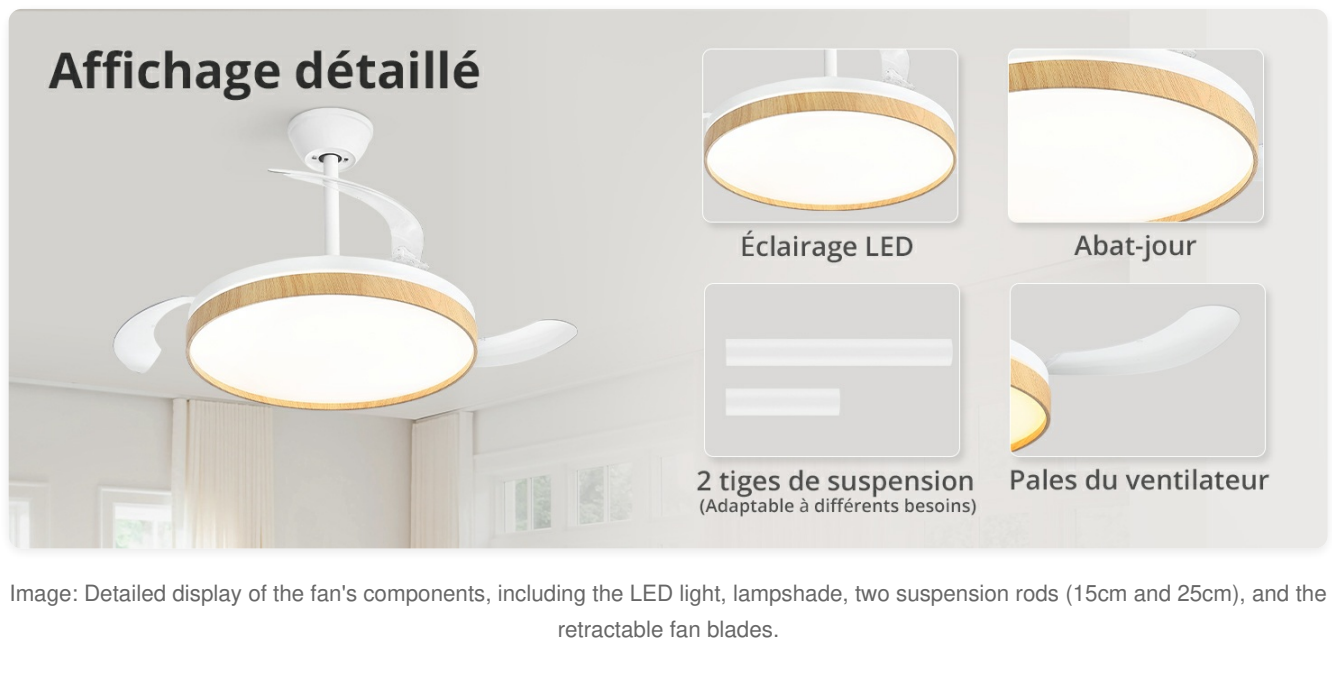

4. INSTALLATION INSTRUCTIONS

Professional installation is recommended. Ensure power is off before proceeding.

1. **Prepare the Mounting Location:** Ensure the ceiling junction box is securely mounted and can support the fan's weight.
2. **Install the Mounting Bracket:** Attach the mounting bracket to the ceiling junction box using the provided screws and washers.
3. **Assemble the Downrod:** Choose either the 15 cm or 25 cm suspension rod based on your ceiling height. Feed the electrical wires through the chosen downrod.
4. **Connect Wiring:** Carefully connect the fan's electrical wires to the household wiring according to the wiring diagram in the full manual (not provided here). Ensure all connections are secure.
5. **Attach Fan to Mounting Bracket:** Lift the fan assembly and hook it onto the mounting bracket. Secure it with the provided screws.
6. **Secure Canopy:** Slide the canopy up to cover the mounting bracket and wiring, then secure it in place.
7. **Install Remote Control Batteries:** Insert 2 AAA batteries (not included) into the remote control.

Télécommande

Multifonction, profitez d'une vie intelligente



**6 vitesses
de vent**



**températures
de couleur réglables**



**Moteur
DC réversible**



**Minuterie
2/4 heures**



**Service après-vente
(SAV)**



**Ultra
silencieux**



Image: Product information detailing dimensions (106 cm total diameter, 48 cm light diameter, 15 cm and 25 cm rod options) and suitability for sloped ceilings (up to 15 degrees) and room sizes (up to 3.5m x 3.5m).

5. OPERATING INSTRUCTIONS

Your ZMISHIBO ceiling fan is controlled via the included remote control.

5.1 Remote Control Functions



Image: Overview of the remote control, highlighting buttons for light control, fan speed (1-6), reversible motor, color temperature, brightness, and timer functions. It also shows the included wall mount for convenient storage.

- **Light ON/OFF:** Press to turn the LED light on or off.
- **All OFF:** Press to turn off both the fan and the light.
- **Fan ON/OFF:** Press to turn the fan on or off.
- **Speed Control (1-6):** Select desired fan speed from 1 (lowest) to 6 (highest).
- **Brightness Adjustment:** Use the brightness buttons to increase or decrease the light intensity (10%-100%).
- **Color Temperature Adjustment:** Use the color temperature buttons to cycle through warm white (3000K), neutral white (4500K), and cool white (6500K).
- **Quick Color Temperature:** Dedicated buttons for 3000K, 4500K, 6500K.
- **Timer (2H/4H):** Set the fan to automatically turn off after 2 or 4 hours.
- **Reversible Motor:** Press to switch between summer and winter modes.
- **Natural Wind Mode:** Simulates a natural breeze by varying fan speeds.

5.2 Summer & Winter Modes

The reversible DC motor allows for year-round comfort.

Circulation d'Air Réversible Été & Hiver



Image: Illustration of the fan's reversible air circulation. In Summer Mode, the fan rotates forward to create a downward cool breeze. In Winter Mode, it rotates in reverse to push warm air down from the ceiling.

- **Summer Mode (Forward Rotation):** Creates a downward airflow, generating a cooling breeze. Ideal for warmer months.
- **Winter Mode (Reverse Rotation):** Creates an upward airflow, circulating warm air trapped near the ceiling throughout the room. Helps to reduce heating costs.

5.3 Adjustable Color Temperature and Brightness

Customize your lighting to suit any mood or activity.



Image: Demonstrates the adjustable color temperatures (3000K, 4500K, 6000K) and continuous dimming capability from 10% to 100% brightness.

- The integrated LED light offers three color temperatures: 3000K (warm white), 4500K (neutral white), and 6500K

(cool white).

- Brightness can be adjusted continuously from 10% to 100% to create the perfect ambiance.

5.4 Quiet Operation

The DC motor ensures quiet performance, suitable for bedrooms and living areas.



Image: Illustrates the low noise level of the fan, rated at approximately 35dB, making it suitable for quiet environments like bedrooms

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

- **Cleaning:** Dust the fan and light fixture regularly with a soft, dry cloth. For stubborn dirt, use a slightly damp cloth with mild soap, then wipe dry immediately. Do not use abrasive cleaners or solvents.
- **Blade Cleaning:** When cleaning the retractable blades, ensure the fan is turned off and the power is disconnected. Gently wipe each blade.
- **Light Source:** The LED light source is integrated and not user-replaceable. If the light fails, please contact customer support.
- **Check Connections:** Periodically check all electrical connections and mounting screws to ensure they are secure.

7. TROUBLESHOOTING

If you encounter issues with your fan, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fan does not start	No power supply; Remote control batteries are dead; Loose wiring connection.	Check circuit breaker; Replace remote batteries; Verify all wiring connections are secure (ensure power is off).
Light does not work	No power supply; Remote control batteries are dead; Loose wiring connection; LED module failure.	Check circuit breaker; Replace remote batteries; Verify all wiring connections are secure (ensure power is off); Contact customer support for LED module replacement.
Fan wobbles	Loose mounting screws; Unbalanced blades.	Ensure all mounting screws are tightened; Check if blades are properly seated and balanced.
Remote control not responding	Dead batteries; Obstruction between remote and receiver; Remote not paired.	Replace batteries; Ensure clear line of sight; Refer to pairing instructions (if applicable, usually automatic).
Excessive noise	Loose screws; Parts rubbing; Improper installation.	Check and tighten all screws; Ensure no parts are touching; Re-check installation steps.

If the problem persists after trying these solutions, please contact ZMISHIBO customer support.

8. SPECIFICATIONS

Brand	ZMISHIBO
Model Number	OBS42
Size	106 cm (42 inches)
Color	Light Wood
Material	Wood, Metal, Acrylic
Light Source	Integrated LED 38W
Color Temperature (CCT)	3000K-6500K (Adjustable)
Brightness	Dimmable (10%-100%)
Fan Motor	DC 30W, Reversible
Fan Speeds	6 Speeds
Control Method	Remote Control (included)
Timer Function	2H / 4H
Noise Level	<35dB (at lowest speed)
Power Source	Corded Electric
Installation Type	Ceiling Mount
Energy Label	C
Country of Origin	China

9. WARRANTY AND CUSTOMER SUPPORT

ZMISHIBO is committed to providing high-quality products and excellent customer service.

- Warranty:** This product comes with a 3-year warranty, covering manufacturing defects and product issues.
- Customer Support:** We offer professional 24-hour online technical support. Our team is always available to answer your questions and assist with any concerns.
- Contact:** For warranty claims or technical assistance, please refer to the contact information provided on your product packaging or the seller's platform.


Affichage détaillé



Éclairage LED



Abat-jour

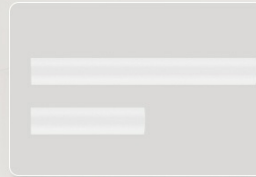

2 tiges de suspension
(Adaptable à différents besoins)



Pales du ventilateur

Image: Details on ZMISHIBO's commitment to customer satisfaction, including a 3-year warranty and 24-hour online technical support.

© 2026 ZMISHIBO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question