

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Lefant](#) /
- › [Lefant M210 Robot Vacuum Cleaner User Manual](#)

Lefant M210

Lefant M210 Robot Vacuum Cleaner User Manual

Model: M210

INTRODUCTION

Thank you for choosing the Lefant M210 Robot Vacuum Cleaner. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your device. Please read it thoroughly before use and keep it for future reference.

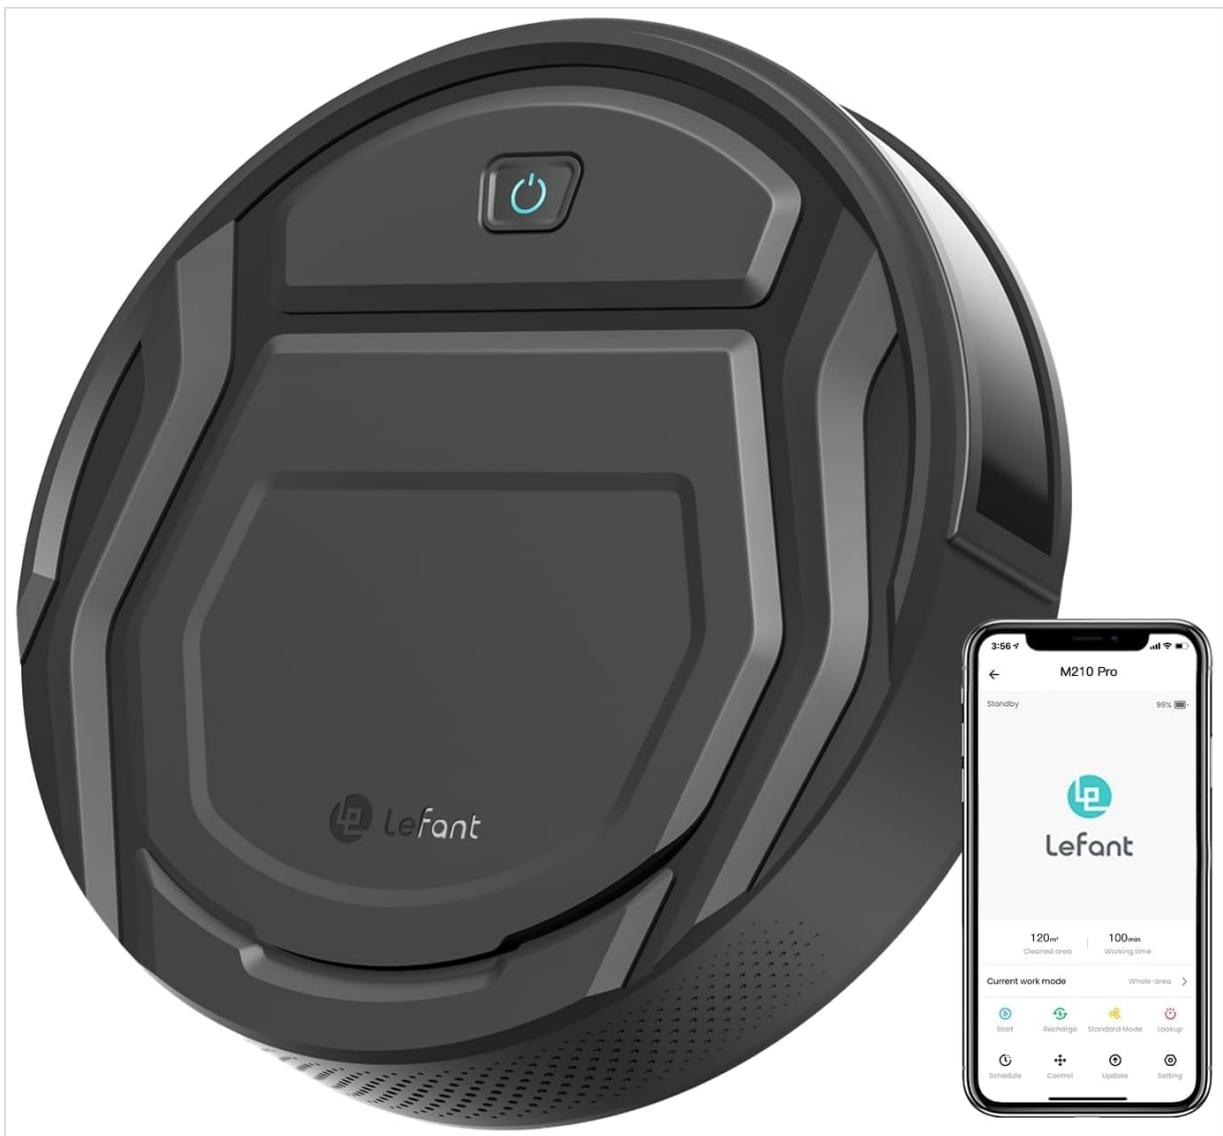


Image: The Lefant M210 Robot Vacuum Cleaner, showcasing its compact design.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. This includes:

- Read all instructions before using the appliance.
- Do not operate the vacuum cleaner in areas with flammable or combustible materials.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Ensure the charging dock is placed against a wall on a level surface.
- Only use the original power adapter and charging dock provided by the manufacturer.

PACKAGE CONTENTS

Verify that all components are present in the package:

- Lefant M210 Robot Vacuum Cleaner
- Charging Dock
- Power Adapter
- Side Brushes (2 pairs)

- High-Performance Filter
- Cleaning Tool
- User Manual

SETUP

1. Prepare the Robot

1. Remove all protective films and stickers from the robot and charging dock.
2. Attach the side brushes by pressing them onto the posts until they click into place.

2. Place the Charging Dock

- Place the charging dock against a wall in an open, uncluttered area.
- Ensure there is at least 0.5 meters (1.6 feet) of clear space on either side of the dock and 1.5 meters (4.9 feet) in front.
- Connect the power adapter to the charging dock and plug it into a wall outlet.

3. Charge the Robot

Place the robot onto the charging dock, ensuring the charging contacts align. The indicator light on the robot will show charging status. Fully charge the robot before first use (approximately 4-5 hours).

4. Connect to the Lefant App

1. Download the "Lefant" app from the App Store or Google Play.
2. Register an account and follow the in-app instructions to connect your M210 robot vacuum cleaner to your home Wi-Fi network.

OPERATING INSTRUCTIONS


Starting and Stopping Cleaning

- **Start:** Press the power button on the robot or use the Lefant app to start a cleaning cycle.
- **Pause:** Press the power button again to pause cleaning.
- **Return to Dock:** Press the home button on the robot or use the app to send the robot back to its charging dock.

Cleaning Modes

The Lefant M210 offers various cleaning modes to suit different needs:

Mehrere Reinigungsmodi, um Ihren Anforderungen gerecht zu werden

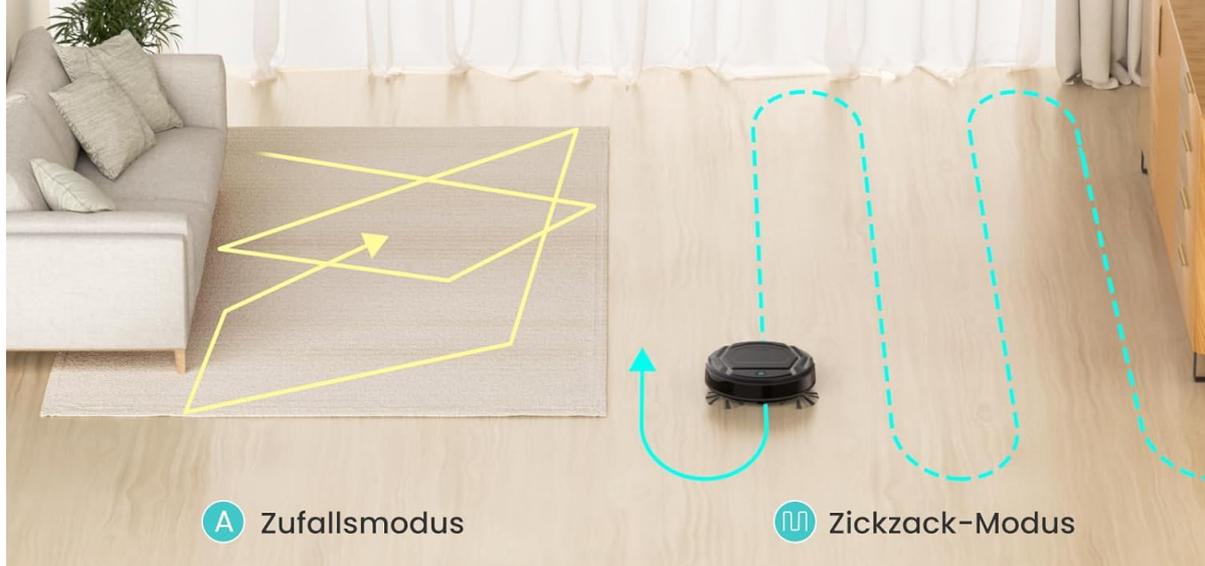


A Zufallsmodus

Z Zickzack-Modus



K Kantenmodus

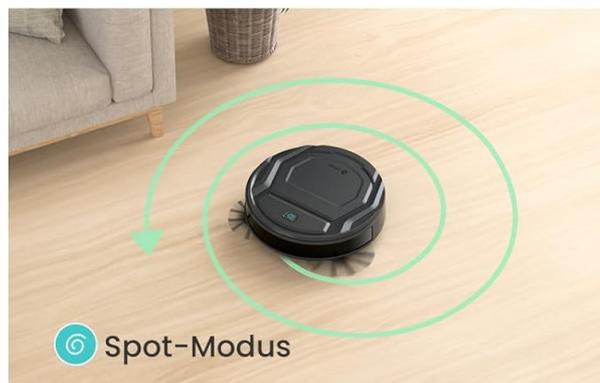

S Spot-Modus

Image: Illustration of the Lefant M210's various cleaning modes, including Random, Zigzag, Edge, and Spot cleaning.

- **Auto Cleaning:** The robot automatically cleans in a zigzag pattern, adjusting to the environment.
- **Spot Cleaning:** Focuses on a specific dirty area, cleaning in a spiral pattern.
- **Edge Cleaning:** Cleans along walls and furniture edges.
- **Scheduled Cleaning:** Set cleaning times via the Lefant app.

Efficient Cleaning Path

Effiziente und Intelligente Reinigung

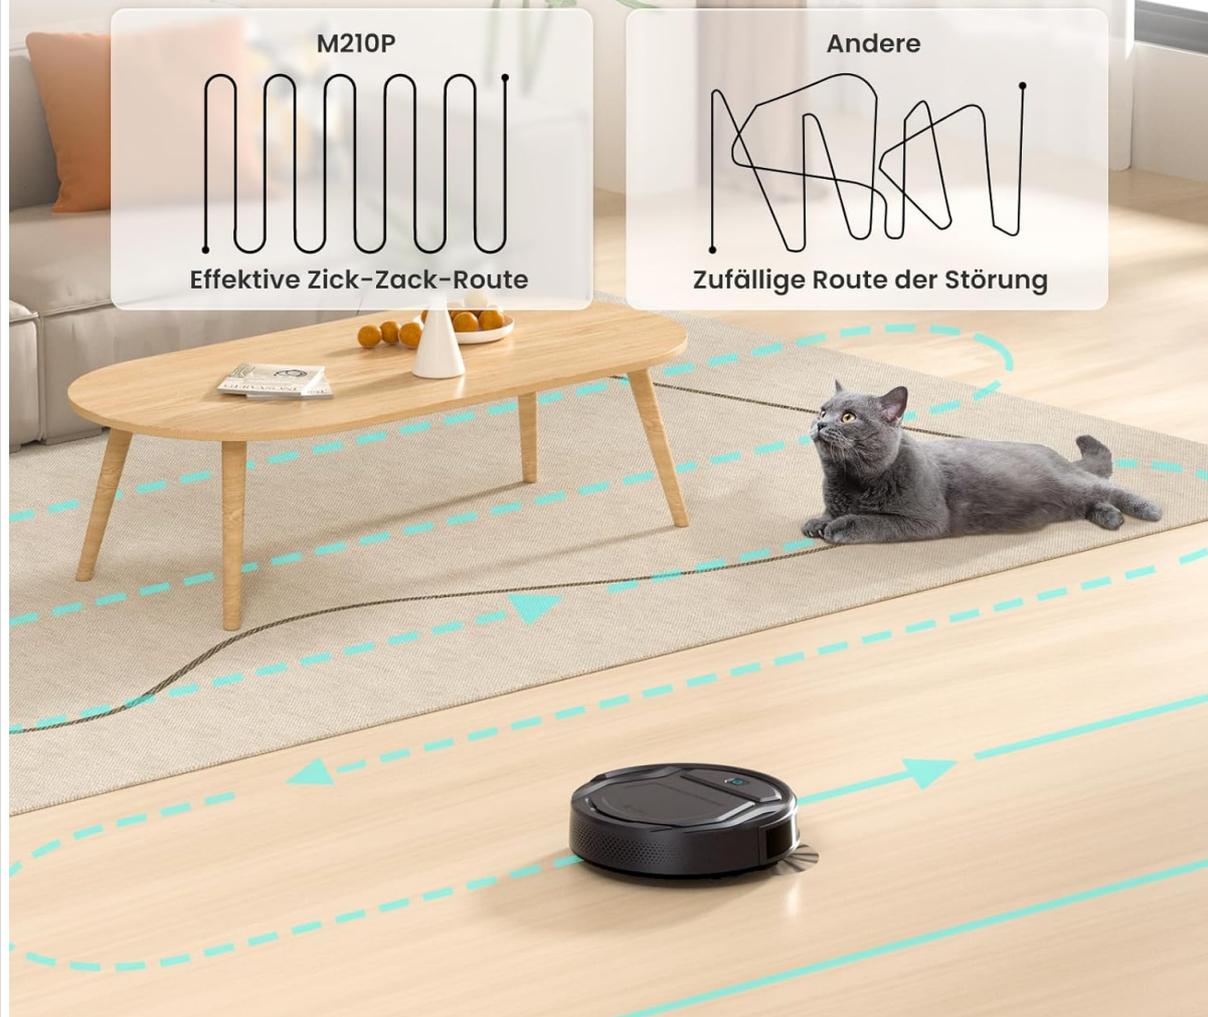


Image: The Lefant M210 utilizes an effective zigzag route for thorough and intelligent cleaning, avoiding random patterns.

Pet Hair Cleaning

The Lefant M210 is designed to effectively pick up pet hair, making it suitable for homes with pets. Its powerful suction and brush design help manage pet dander and fur.

Tierhaarmagnet

Lefant M210P Design für Familien mit Haustieren



Image: The Lefant M210 Robot Vacuum Cleaner effectively collects pet hair, as demonstrated in a home setting with a dog and child.

FreeMove Technology 3.0

The M210 is equipped with updated FreeMove Technology 3.0, which helps the robot navigate around obstacles and avoid getting stuck, ensuring a smooth cleaning process.

Aktualisierte FreeMove-Technologie 3.0



Image: The Lefant M210 demonstrating its updated FreeMove Technology 3.0 for enhanced navigation and obstacle avoidance.

Voice Control

The Lefant M210 supports voice control through Amazon Alexa and Google Home. Connect your robot to these services via the Lefant app for convenient hands-free operation.

Intelligente Sprachsteuerung

„Hey Alexa, schalte den M210P ein“

„Hey Google, schalte den M210P ein.“



Image: The Lefant M210 integrates with Amazon Alexa and Google Home for intelligent voice control, allowing users to start cleaning with simple commands.

MAINTENANCE

Regular maintenance ensures optimal performance of your Lefant M210. Always turn off the robot and disconnect it from the charging dock before performing any maintenance.

1. Emptying the Dustbin (After each use)

1. Press the dustbin release button and pull out the dustbin.
2. Open the dustbin cover and empty its contents into a trash bin.
3. Clean the filter with the provided cleaning tool or tap it gently to remove debris. Do not wash the filter with water.
4. Reinsert the filter and close the dustbin cover. Place the dustbin back into the robot.

2. Cleaning the Side Brushes (Weekly or as needed)

- Gently pull the side brushes upwards to remove them.
- Remove any hair or debris wrapped around the brushes or the brush posts.
- Reattach the brushes, ensuring they click into place.

3. Cleaning the Sensors and Charging Contacts (Monthly or as needed)

- Use a clean, dry cloth to wipe the anti-drop sensors on the bottom of the robot.
- Clean the charging contacts on both the robot and the charging dock.



Image: The Lefant M210 features a design optimized for easy maintenance, reducing hair tangles compared to traditional robot vacuum designs.

TROUBLESHOOTING

If your robot vacuum cleaner encounters issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Robot does not turn on.	Low battery or not charged.	Place the robot on the charging dock and ensure it is fully charged.
Robot cannot return to charging dock.	Charging dock is obstructed or too far.	Ensure the charging dock is in an open area and free from obstacles. Manually place the robot on the dock if needed.

Problem	Possible Cause	Solution
Cleaning performance is poor.	Dustbin full, filter clogged, or brushes tangled.	Empty the dustbin, clean or replace the filter, and clean the side brushes.
Robot gets stuck frequently.	Too many obstacles or uneven surfaces.	Clear the cleaning area of loose cables, small objects, and thick rugs.
App connection issues.	Incorrect Wi-Fi password, router issues, or robot not in pairing mode.	Ensure correct Wi-Fi credentials. Restart your router and the robot. Follow app instructions for pairing mode.

SPECIFICATIONS

Feature	Detail
Brand	Lefant
Model Name	M210
Model Number	M210P
Color	Black
Product Dimensions (L x W x H)	28 x 8 x 28 cm (11 x 3.1 x 11 inches)
Item Weight	3.14 kg (6.92 lbs)
Dustbin Capacity	500 Liters <i>(Note: This capacity is unusually large for a robot vacuum dustbin and may refer to a different metric or be a typo in the source data.)</i>
Voltage	220 Volts
Material	Plastic
Special Feature	Anti-collision
Surface Recommendation	Carpet, Hard Floors
Controller Type	App Control
Battery Composition	Lithium-ion
Run Time	Up to 120 minutes
Noise Level	55dB

Lange Laufzeit Bis zu 120 Minuten

Genießen Sie ein völlig sauberes Zuhause mit
einer einzigen Ladung



Image: The Lefant M210 offers a long runtime of up to 120 minutes on a single charge, capable of cleaning up to 120 square meters.

Kleine Größe und Leiser Betrieb



Image: The Lefant M210's compact size (7.8cm height) allows it to clean under furniture, and its quiet operation at 55dB ensures minimal disturbance.

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please refer to the official Lefant website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

Lefant Official Website: www.lefant.com