

[Manuals.plus](#) /

› [Lifetime Air](#) /

› Lifetime Air High-Speed Portable Fan User Manual (Model 8711252436517)

## Lifetime Air 8711252436517

# Lifetime Air High-Speed Portable Fan User Manual

Model: 8711252436517

## INTRODUCTION

Thank you for choosing the Lifetime Air High-Speed Portable Fan. This manual provides essential information for the safe and efficient use of your new fan. Please read these instructions carefully before first use and retain them for future reference.

## PRODUCT OVERVIEW

The Lifetime Air High-Speed Portable Fan is a compact, battery-powered device designed to provide personal cooling. It features three adjustable speed settings and convenient USB-C charging.





*Figure 1: Front view of the Lifetime Air High-Speed Portable Fan. This image shows the fan's main body and the air outlet grille.*

**Key Components:**

- **Air Outlet:** Where the airflow is directed.
- **Control Buttons:** For power and speed adjustment.
- **USB-C Charging Port:** For recharging the internal battery.

- **Base:** Provides stability when placed on a surface.

## SETUP

---

1. **Unboxing:** Carefully remove the fan and all accessories from the packaging.
2. **Initial Charge:** Before first use, fully charge the fan. Connect the provided USB-C cable to the fan's charging port and the other end to a compatible USB power source (e.g., computer, wall adapter). The charging indicator light will provide feedback (refer to the "Charging" section for details).

## OPERATING INSTRUCTIONS

---

The fan features two intuitive buttons for control.



*Figure 2: The fan held in hand, illustrating the position of the two control buttons on the side.*

1. **Power On/Off:** Press the top button once to turn the fan on at the lowest speed setting. Press and hold the top button for 2 seconds to turn the fan off.
2. **Adjusting Speed:** While the fan is on, press the bottom button repeatedly to cycle through the three available speed settings:
  - Press once for Speed 1 (Low)
  - Press twice for Speed 2 (Medium)
  - Press three times for Speed 3 (High)

## CHARGING

---

The fan is equipped with a rechargeable Li-ion battery and a USB-C charging port.



*Figure 3: Bottom view of the fan, highlighting the USB-C charging port and indicator light.*

- Connect the USB-C cable to the fan's charging port and to a 5V-1A USB power adapter or computer USB port.
- A small indicator light near the charging port will illuminate during charging.
- Charging time may vary depending on the power source.
- Do not use the fan while it is charging to ensure optimal battery life and safety.

## MAINTENANCE

---

- **Cleaning:**
  - Ensure the fan is turned off and unplugged before cleaning.
  - Wipe the exterior of the fan with a soft, dry cloth.
  - Do not use abrasive cleaners, solvents, or immerse the fan in water.
  - Use a soft brush or compressed air to gently remove dust from the air inlet and outlet grilles.
- **Storage:**
  - Store the fan in a cool, dry place away from direct sunlight when not in use for extended periods.
  - Ensure the battery is partially charged (around 50%) before storing to prolong battery life.

## TROUBLESHOOTING

---

| Problem               | Possible Cause                                             | Solution                                                                                                       |
|-----------------------|------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|
| Fan does not turn on. | Battery is depleted.                                       | Charge the fan using the USB-C cable.                                                                          |
| Fan does not charge.  | Faulty cable or power source.                              | Try a different USB-C cable or a different USB power adapter. Ensure the connection is secure.                 |
| Weak airflow.         | Fan is on a low speed setting. / Air inlet/outlet blocked. | Press the speed adjustment button to increase speed. / Check for and remove any obstructions from the grilles. |

## SPECIFICATIONS

|                        |                 |
|------------------------|-----------------|
| Brand                  | Lifetime Air    |
| Model Number           | 8711252436517   |
| Dimensions (L x W x H) | 13 x 4 x 9 cm   |
| Number of Speeds       | 3               |
| Input                  | 5V - 1A         |
| Battery Type           | Li-ion 2200 mAh |
| Charging Port          | USB-C           |
| Material               | Plastic         |
| Power Source           | Battery Powered |

## SAFETY INFORMATION

- Keep the fan away from water and high humidity.
- Do not insert fingers or foreign objects into the fan grilles.
- Do not expose the fan to extreme temperatures or direct sunlight for prolonged periods.
- Use only the provided or a certified USB-C cable for charging.
- Keep out of reach of children.
- Do not attempt to disassemble or repair the fan yourself. Contact qualified personnel for service.

## WARRANTY AND SUPPORT

No specific warranty information is provided in the product details. For support or inquiries regarding your Lifetime Air High-Speed Portable Fan, please refer to the retailer's return policy or contact the manufacturer directly via their official channels.

