

[Manuals.plus](#) /

› [PHILIPS](#) /

› Philips All-in-One 7000 Trimmer MG7963/28 User Manual

PHILIPS MG7963/28

Philips All-in-One 7000 Trimmer User Manual

Model: MG7963/28

IMPORTANT SAFETY INFORMATION

Read this user manual carefully before using the appliance and save it for future reference. Always follow basic safety precautions when using electrical appliances.

- **Electrical Hazard:** Avoid using the trimmer near water while charging to prevent electrical hazards. Do not immerse the appliance in water while it is connected to the power supply.
- **Children:** This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- **Damage:** Do not use the appliance if it is damaged. If the appliance is damaged, contact Philips customer service.
- **Attachments:** Only use original Philips attachments and accessories.
- **Intended Use:** This appliance is intended for trimming hair on the human body only. Do not use it for any other purpose.

PRODUCT OVERVIEW

The Philips All-in-One 7000 Trimmer (Model MG7963/28) is a versatile grooming tool designed for precision trimming of beard, hair, nose, ear, and body hair. This 23-piece kit offers a comprehensive solution for various styling needs, featuring advanced technologies for an efficient and comfortable grooming experience.

PHILIPS

All-in-One Trimmer

7000 Series

23 in 1


All-in-One trimmer

Image: The Philips All-in-One 7000 Trimmer demonstrating its versatility for beard, hair, and body grooming.

Key Features:

- **23-Piece Kit:** Includes various attachments for comprehensive grooming.
- **Self-Sharpening Steel Blades:** Designed for long-lasting precision without the need for blade oil.
- **BeardSense Technology:** Adapts power to beard density for an even trim.
- **180-Minute Runtime:** Powerful lithium-ion battery provides extended cordless use.
- **Wet or Dry Use:** 100% showerproof for convenient grooming and easy cleaning.
- **24 Length Settings:** Ranging from 0.5 mm to 16 mm for precise styling.

Included Attachments:

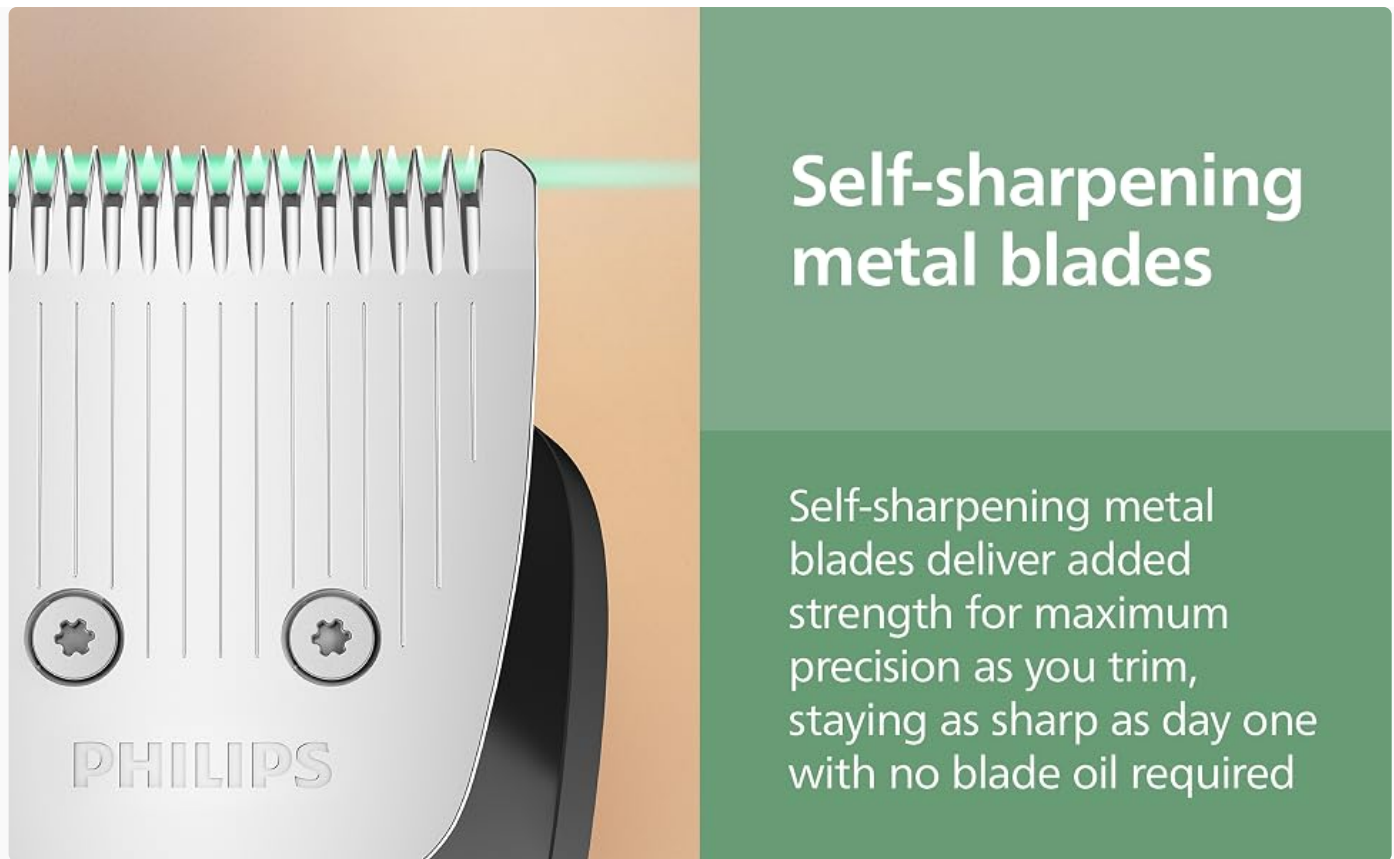

Self-sharpening metal blades

Self-sharpening metal blades deliver added strength for maximum precision as you trim, staying as sharp as day one with no blade oil required

Image: A display of the various trimming heads and combs included with the Philips All-in-One 7000 Trimmer.

- Full Metal Blade
- Detail Trimmer
- Nose and Ear Trimmer
- Wide Hair Clipper
- Body Trimmer
- Premium Precision Comb (1-3 mm, 11 settings in 0.2 mm steps)
- Adjustable Combs (3-13 mm)
- Body Combs (3, 5 mm)
- Eyebrow Comb
- Hair Combs
- Fading Combs
- Travel Lock Attachment
- Cleaning Brush
- Soft Pouch
- USB-A Charging Cable (Power adapter not included)

SETUP

Charging the Trimmer:

Before first use, fully charge the trimmer. Ensure the trimmer is turned off before connecting it to the charger.

1. Insert the small end of the USB-A charging cable into the charging port at the bottom of the trimmer.
2. Connect the large end of the USB-A cable to a compatible USB power adapter (not included) and plug it into a wall outlet.

3. The battery indicator light will show the charging status. A full charge takes approximately 70 minutes and provides up to 180 minutes of cordless runtime.
4. A 5-minute quick charge provides enough power for one trimming session.



Image: The USB-A charging cable and visual indicators for battery runtime and quick charge feature.

Attaching and Detaching Trimming Heads/Combs:

- **To Attach a Trimming Head:** Align the desired trimming head with the trimmer body and press it down firmly until you hear a click.
- **To Detach a Trimming Head:** Pull the trimming head upwards and away from the trimmer body.
- **To Attach a Comb:** Slide the desired comb onto the trimming head until it locks into place. Ensure it is securely fastened.
- **To Detach a Comb:** Slide the comb off the trimming head.

OPERATING INSTRUCTIONS

The Philips All-in-One 7000 Trimmer offers 24 length settings, from 0.5 mm to 16 mm, allowing for precise control over your grooming style.



Image: Visual representation of the 24 length settings available with the various combs for beard and body.

General Trimming Tips:

- Ensure your hair is clean and dry before trimming for best results.
- Always move the trimmer against the direction of hair growth.
- Start with a longer length setting and gradually reduce it until you achieve your desired length.

Specific Grooming Applications:

- **Beard Trimming and Styling:** Use the full metal blade for sharp lines. For length, attach the premium precision comb (1-3 mm) or adjustable comb (3-13 mm). The BeardSense Technology automatically adjusts motor power to handle dense beard areas, ensuring an even trim.
- **Hair Clipping:** Attach the wide hair clipper head with the appropriate hair comb for desired hair length.
- **Nose and Ear Hair Trimming:** Use the dedicated nose and ear trimmer attachment. Insert it gently into the nostril or ear and move it in a circular motion.
- **Body Grooming:** Attach the body trimmer head. For sensitive areas, use the intimate comb or body combs (3, 5 mm) for a gentle and effective trim.

Advanced Features:

- **Self-Sharpening Blades:** The durable alloy steel blades are designed to sharpen themselves during use, maintaining their precision without requiring oil.

Premium precision comb

With 11 length settings in 0.2 mm steps from 1 to 3 mm to trim to the exact length you want for your perfect look



Image: A close-up view of the self-sharpening metal blades, highlighting their design for long-lasting performance.

- **Premium Precision Comb:** Offers 11 length settings in 0.2 mm steps (1-3 mm) for extremely precise beard styling.

Accessories included



Full metal blades



Detail trimmer



Nose and ear trimmer



Wide hair clipper



Premium precision comb 1-3 mm



Adjustable comb 3-13 mm



Travel lock attachment



Cleaning brush



Soft pouch



Body trimmer



Intimate comb



Body combs 3, 5 mm



Eyebrow comb



Hair combs



Fading combs



USB-A cable included
Power adaptor not included

Image: The premium precision comb with its detailed length adjustment dial, offering fine control over trimming length.

- **BeardSense Technology:** This feature scans the beard density 125 times per second and automatically boosts power when needed, ensuring a consistent and even trim even through the densest parts of your beard.

Premium precision comb

With 11 length settings in 0.2 mm steps from 1 to 3 mm to trim to the exact length you want for your perfect look



Image: Visual representation of BeardSense technology, showing how the trimmer adapts power based on beard density for an even trim.

- **100% Showerproof:** The trimmer is fully waterproof, allowing for comfortable wet or dry use and easy cleaning under running water.

MAINTENANCE

Cleaning the Trimmer:

Regular cleaning ensures optimal performance and hygiene of your trimmer.

1. Turn off the trimmer and disconnect it from the power supply before cleaning.
2. Remove the trimming head and any attached combs.
3. Rinse the trimming head and combs thoroughly under warm running water.
4. The trimmer body is 100% showerproof and can also be rinsed under running water.
5. Use the provided cleaning brush to remove any stubborn hair particles from the blades or combs.
6. Allow all parts to air dry completely before reattaching or storing the trimmer.

Blade Care:

The Philips All-in-One 7000 Trimmer features self-sharpening steel blades that do not require oiling or manual sharpening. Do not attempt to disassemble the blade unit or sharpen the blades yourself, as this may damage them and void your warranty.

TROUBLESHOOTING

If you encounter issues with your Philips All-in-One 7000 Trimmer, refer to the following common solutions:

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer for at least 5 minutes. Ensure the USB-A cable and power adapter are working correctly.
Reduced trimming performance.	Hair buildup in blades or comb.	Clean the trimming head and comb thoroughly under running water. Use the cleaning brush to remove trapped hairs.
Battery not charging.	Faulty cable, adapter, or connection.	Check if the USB-A cable is securely connected. Try a different USB power adapter or wall outlet.
Skin irritation after trimming.	Incorrect technique or dull blades.	Ensure blades are clean. Trim against the direction of hair growth. Use the appropriate comb for sensitive areas. If irritation persists, consult a dermatologist.

If the problem persists after trying these solutions, please contact Philips customer support for further assistance.

SPECIFICATIONS

Feature	Detail
Model Number	MG7963/28
Brand	PHILIPS
Power Source	Battery Powered (Lithium-ion)
Runtime	Up to 180 minutes
Charge Time	Approx. 70 minutes (full charge), 5 minutes (quick charge)
Cutting Lengths	0.5 mm to 16 mm (24 settings)
Blade Material	Alloy Steel (Self-sharpening)
Special Features	BeardSense Technology, 100% Showerproof
Attachments	23 pieces (various trimming heads and combs)
Item Weight	336 g
Manufacturer	Philips Electronics Ltd

WARRANTY AND SUPPORT

For detailed warranty information, product registration, and customer support, please visit the official Philips website or contact Philips customer service in your region. Keep your proof of purchase for warranty claims.

Online Support: www.philips.com/support

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0G72MV9HL>

More documents and user manuals: <https://manuals.plus/>