

[Manuals.plus](#) /

› [HOOBRO](#) /

› HOOBRO BK18MB01 Bread Box Instruction Manual

## HOOBRO BK18MB01

# HOOBRO Bread Box

**MODEL: BK18MB01**

*Instruction Manual*

### Introduction

Thank you for choosing the HOOBRO BK18MB01 Bread Box. This manual provides essential information for the safe assembly, operation, and maintenance of your new bread box. Please read these instructions carefully before use and retain them for future reference.

The HOOBRO BK18MB01 is designed to provide a practical and elegant storage solution for your kitchen. Crafted from natural bamboo, it helps preserve the freshness of your baked goods and can also be used for other kitchen items.



Natural Bamboo  
Material



Sturdy  
Door Lock



Easy-to-Clean  
Surface



Simple  
Assembly



Image: Overview of the HOOBRO Bread Box highlighting its key features: natural bamboo construction, sturdy door lock, easy-to-clean surface, and simple assembly.

## Safety Information

- Ensure all components are present and undamaged before assembly.
- Assemble the bread box on a clean, flat, and stable surface to prevent damage or injury.
- Keep small parts and packaging materials away from children and pets to avoid choking hazards.
- Do not overload the bread box or the top shelf to maintain stability.
- Avoid exposing the bamboo material to excessive moisture or direct sunlight for prolonged periods to prevent warping or discoloration.
- Use only a soft, damp cloth for cleaning. Avoid abrasive cleaners or harsh chemicals.

## Package Contents

Please verify that all the following components are included in your package:

- Top Panel (1)
- Bottom Panel (1)
- Side Panels (2)
- Back Panel (1)
- Front Door Assembly (1)
- Hardware Pack (screws, dowels, door handle)
- Instruction Manual (this document)

## Assembly Instructions

---

Assembly of the HOOBRO BK18MB01 Bread Box is designed to be straightforward and requires no special tools. Follow these steps carefully:

1. **Prepare the Workspace:** Clear a flat, clean, and stable surface for assembly. Unpack all components and verify against the package contents list.
2. **Attach Side Panels to Bottom Panel:** Secure the two side panels to the bottom panel using the provided screws and dowels. Ensure they are aligned correctly.
3. **Install Back Panel:** Slide or attach the back panel into the grooves or designated areas on the side and bottom panels. Secure with screws if applicable.
4. **Attach Top Panel:** Place the top panel onto the assembled structure, aligning it with the side and back panels. Secure it with the remaining screws.
5. **Install Front Door Assembly:** Carefully attach the front door assembly to the designated hinges or slots. Ensure the door opens and closes smoothly.
6. **Attach Door Handle:** Secure the door handle to the front door using the provided screw.
7. **Final Check:** Gently test the stability of the assembled bread box. Ensure all screws are tightened and the door operates correctly.

# Corner Design

Effortlessly fits into kitchen corners, saving space.



Image: Diagram illustrating the corner-fitting design of the bread box, showing its dimensions for placement.

## Operating Instructions

The HOOBRO BK18MB01 Bread Box is designed for convenient and versatile storage:

- **Placement:** Position the bread box on a stable, flat kitchen countertop. Its corner-fitting design allows it to integrate seamlessly into kitchen corners, optimizing space.
- **Opening and Closing the Door:** The bread box features a transparent, wavy acrylic door with a secure locking mechanism. Gently pull the handle to open the door. Push the door firmly until it clicks into place to ensure a tight seal.
- **Storage:** Use the spacious interior to store bread, pastries, bagels, and other baked goods to help maintain their freshness. The design also accommodates fruits, spices, coffee, tea, or small kitchen utensils.
- **Top Shelf:** The upper shelf with raised edges provides additional storage for small items like spice jars, condiments, or decorative pieces, preventing them from slipping off.



Image: The bread box in use, storing an assortment of bread on a kitchen countertop.



Image: The bread box demonstrating its versatility by storing fresh fruits inside and small desserts on its top shelf.



Image: The bread box used for storing kitchenware such as cups and plates, showcasing its adaptable storage capabilities.



Image: Detailed view of the bread box's front door, highlighting the transparent wavy acrylic and the door handle.

### Care and Maintenance

- **Cleaning:** Wipe the bread box regularly with a soft, damp cloth. For stubborn stains, a mild soap solution can be used, followed by wiping with a clean, damp cloth and drying thoroughly.
- **Avoid Harsh Cleaners:** Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the bamboo finish and acrylic door.
- **Drying:** Ensure the bread box is completely dry after cleaning to prevent moisture damage to the bamboo.
- **Placement:** Avoid placing the bread box near heat sources or in direct sunlight to prevent warping, cracking, or fading of the bamboo.

### Troubleshooting

| Problem                       | Possible Cause                                | Solution                                                                                                           |
|-------------------------------|-----------------------------------------------|--------------------------------------------------------------------------------------------------------------------|
| Door does not close properly. | Misalignment during assembly or loose hinges. | Check that the door is correctly seated in its hinges/slots. Tighten any loose screws on the door assembly.        |
| Bread box feels unstable.     | Loose connections or uneven surface.          | Ensure all assembly screws are securely tightened. Place the bread box on a flat, level surface.                   |
| Scratches on countertop.      | Missing or damaged non-slip feet.             | Verify that the non-slip feet are properly attached to the bottom of the bread box. Replace if damaged or missing. |

### Specifications

- **Model:** BK18MB01
- **Brand:** HOOBRO
- **Material:** Natural Bamboo
- **Color:** Black
- **Product Dimensions (L x W x H):** 32L x 32W x 23.9H centimetres (12.6"L x 12.6"W x 9.4"H)
- **Item Weight:** 2.3 kg
- **Included Components:** Bread Box (unassembled)



Image: Technical drawing with precise measurements of the bread box, including overall dimensions and internal clearances.

## Warranty Information

Specific warranty details for the HOOBRO BK18MB01 Bread Box are not provided in this manual. For information regarding warranty coverage, terms, and conditions, please refer to the product packaging, the retailer's website where the product was purchased, or contact HOOBRO customer support directly.

# Customer Support

If you have any questions, require assistance with assembly, or encounter any issues not covered in this manual, please contact HOOBRO customer support. Contact information can typically be found on the product packaging or on the official HOOBRO website.

© 2026 HOOBRO. All rights reserved.

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question