

AGXOV M302-80GB

AGXOV M302-80GB MP3 Player User Manual

Your comprehensive guide to setup, operation, and maintenance.

1. INTRODUCTION

Welcome to the user manual for your new AGXOV M302-80GB MP3 Player. This device combines modern streaming capabilities with traditional offline music playback, offering a versatile audio experience. Featuring a stable Android platform, 4.02-inch touchscreen, Bluetooth, and Wi-Fi connectivity, it supports popular music services like Spotify, Amazon Music, and Deezer. This manual provides essential information to help you get started and make the most of your device.

2. PRODUCT OVERVIEW

The AGXOV M302-80GB MP3 Player is designed for flexible music listening and multimedia consumption. It features an 8-core processor for smooth operation and a HiFi audio decoding chip for clear sound quality.

Key Features:

- **Operating System:** Stable Android platform
- **Processor:** Integrated 8-core processor
- **Display:** 4.02-inch touchscreen (LCD/TFT)
- **Connectivity:** Bluetooth, Wi-Fi
- **Pre-installed Apps:** Spotify, Amazon Music, Deezer, Omnia
- **Memory:** 16GB internal + 64GB microSD (80GB total), expandable up to 512GB via microSD card
- **Battery:** 2000 mAh, up to 50 hours music playback, 8 hours video playback
- **Audio Formats:** MP3, FLAC, WAV, APE, OGG, AAC, WMA
- **Video Formats:** MP4, RMVB, MKV, FLV, DAT, MPG, MOV, TS
- **Additional Functions:** FM Radio, Voice Recorder, E-book Reader, File Manager, Calendar

Leistungstarkes System Große Kapazität

Android 9.0

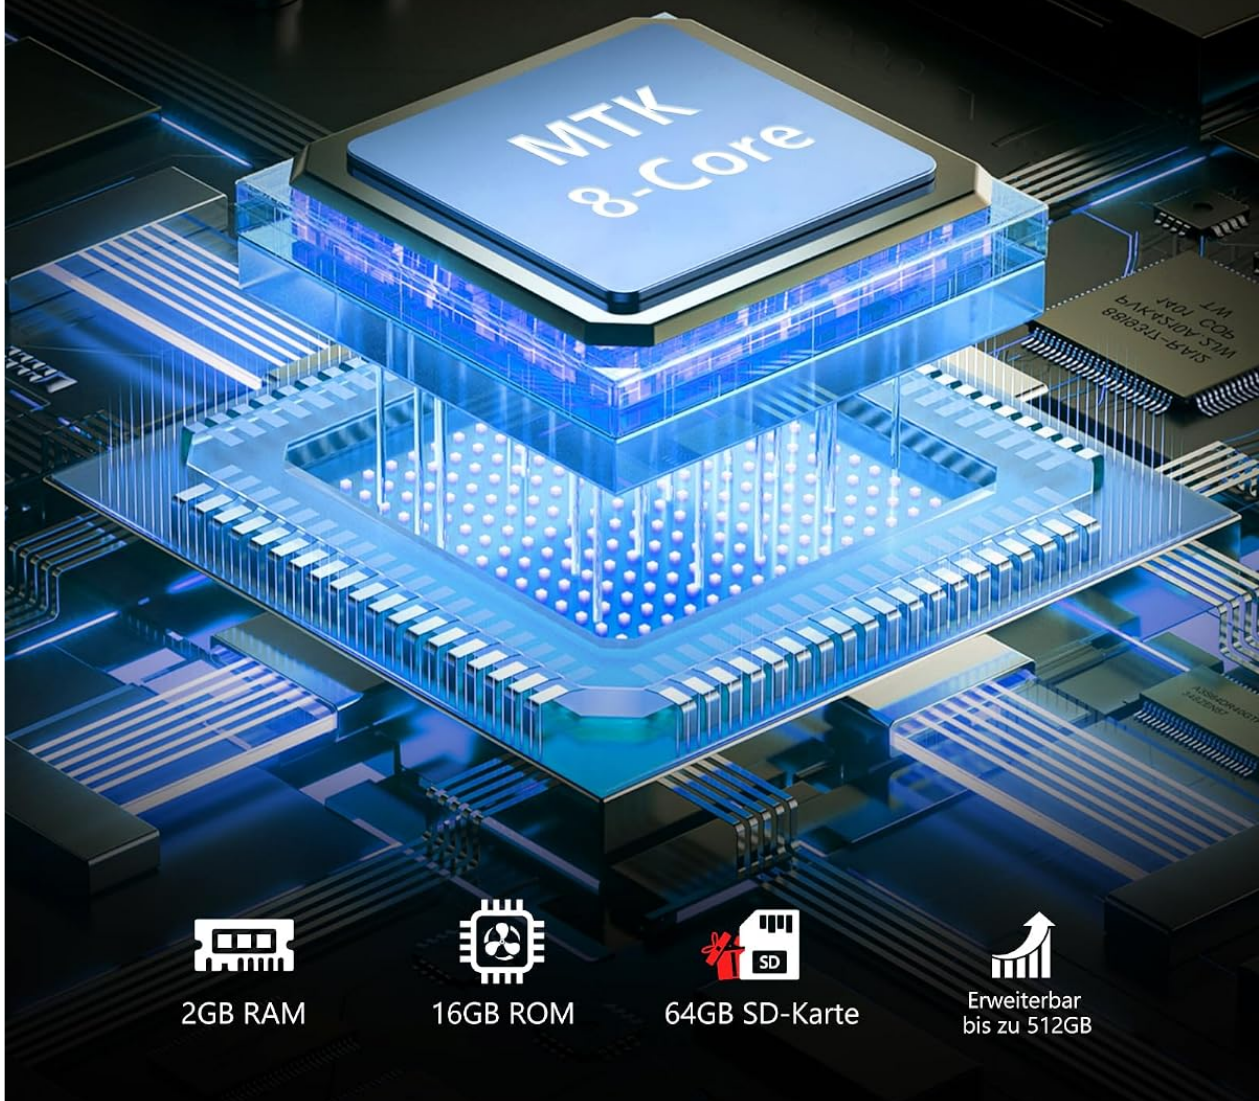


Image: Overview of the AGXOV M302-80GB MP3 Player, showcasing its powerful system and Android 9.0 capabilities, including 2GB RAM, 16GB ROM, and 64GB SD card, expandable up to 512GB.

Vielfältige Funktionen

Kombinieren Sie einen Musikplayer, Videoplayer, FM-Radio, Sprachaufnahme, E-Book-Reader und mehr in einem kompakten und tragbaren Format.



Image: The MP3 player screen showing diverse functions, combining a music player, video player, FM radio, voice recording, and e-book reader in a compact format.

Hi-Fi-Klangqualität

Unterstützte Musikformate:

MP3, OGG, FLAC, AAC, WAV, WMA, APE



Image: Demonstrating Hi-Fi sound quality, with a user enjoying music through headphones. The player supports various music formats including MP3, OGG, FLAC, AAC, WAV, WMA, and APE.

3. SETUP

3.1 Charging the Device

Before first use, fully charge your MP3 player. Connect the provided USB Type-C cable to the device's charging port and the other end to a compatible USB power adapter (5V/1A 10W maximum recommended) or a computer's USB port. The battery indicator on the screen will show charging progress. A full charge may take approximately 3 hours or more.

Großkapazitäts-Akku

Extrem lange Laufzeit

2000 mAh

 **50^{Std}
Musik**

 **8^{Std}
Video**



USB Type-C Aufladung

Image: The MP3 player connected via USB Type-C for charging, highlighting its 2000 mAh large capacity battery, offering up to 50 hours of music or 8 hours of video playback.

3.2 Power On/Off

- **To Power On:** Press and hold the power button located on the side of the device until the screen lights up.
- **To Power Off:** Press and hold the power button, then select 'Power Off' from the on-screen options.

3.3 Initial Configuration

Upon first power-on, follow the on-screen prompts to set up your device. This typically includes selecting your preferred language, setting the date and time, and connecting to a Wi-Fi network.

3.4 Memory Expansion

The device comes with 16GB internal memory and a 64GB microSD card pre-installed, totaling 80GB. You can expand the storage further by replacing the microSD card with one up to 512GB. Locate the microSD card slot, gently insert the card until it clicks into place, ensuring correct orientation.

4. OPERATING INSTRUCTIONS

4.1 Navigation

The AGXOV M302-80GB features a responsive 4.02-inch touchscreen. Navigate through menus and applications by tapping, swiping, and pinching gestures similar to a smartphone.

4.2 Music Playback

- **Local Files:** Connect the player to your computer via USB cable. Transfer your music files (MP3, FLAC, WAV, APE, OGG, AAC, WMA) to the device's internal storage or microSD card. Open the pre-installed music player app to browse and play your library.
- **Streaming Services:** Open pre-installed apps such as Spotify, Amazon Music, or Deezer. Log in with your account credentials. Ensure you are connected to Wi-Fi for streaming. You can also download playlists for offline listening within these apps.

4.3 Bluetooth Connectivity

To connect to Bluetooth headphones or speakers:

1. Go to **Settings > Connected devices > Bluetooth**.
2. Turn on Bluetooth.
3. Put your Bluetooth audio device into pairing mode.
4. Select your device from the list of available devices to pair.

Universelle Bluetooth Unterstützung mit



- Verbesserter Verbindungsstabilität
- Schnellerer Kopplung mit all Ihren Geräten

Image: The MP3 player demonstrating universal Bluetooth support, showing improved connection stability and faster pairing with various devices like headphones and earbuds.

4.4 Wi-Fi Connectivity

To connect to a Wi-Fi network:

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Turn on Wi-Fi.
3. Select your desired network from the list and enter the password if prompted.

4.5 FM Radio

Plug in wired headphones (acting as an antenna) and open the FM Radio app to listen to local radio stations.

4.6 Voice Recorder

Use the pre-installed Voice Recorder app to record audio. Recordings are saved to the device's storage.

4.7 Video Playback

Transfer video files (MP4, RMVB, MKV, FLV, DAT, MPG, MOV, TS) to your device. Open the video player app to enjoy your videos on the 4.02-inch screen.



Image: The MP3 player showcasing an excellent 1080P viewing experience, supporting various video formats including RM, RMVB, FLV, MP4, DAT, MKV, MPG, MOV, and TS.

4.8 E-book Reader

Transfer TXT format e-books to the device and use the e-book reader app for reading.

4.9 App Management

You can install additional apps from compatible sources or uninstall pre-installed applications to free up storage space. To uninstall an app, long-press its icon and drag it to the 'Uninstall' option, or go to **Settings > Apps & notifications**.



Image: The MP3 player screen demonstrating how to personalize your player by uninstalling unneeded applications to free up storage space.

4.10 System Updates

Regularly check for system updates to ensure optimal performance and access to new features. Connect to Wi-Fi and go to **Settings > System > System update** to check for and install available updates.

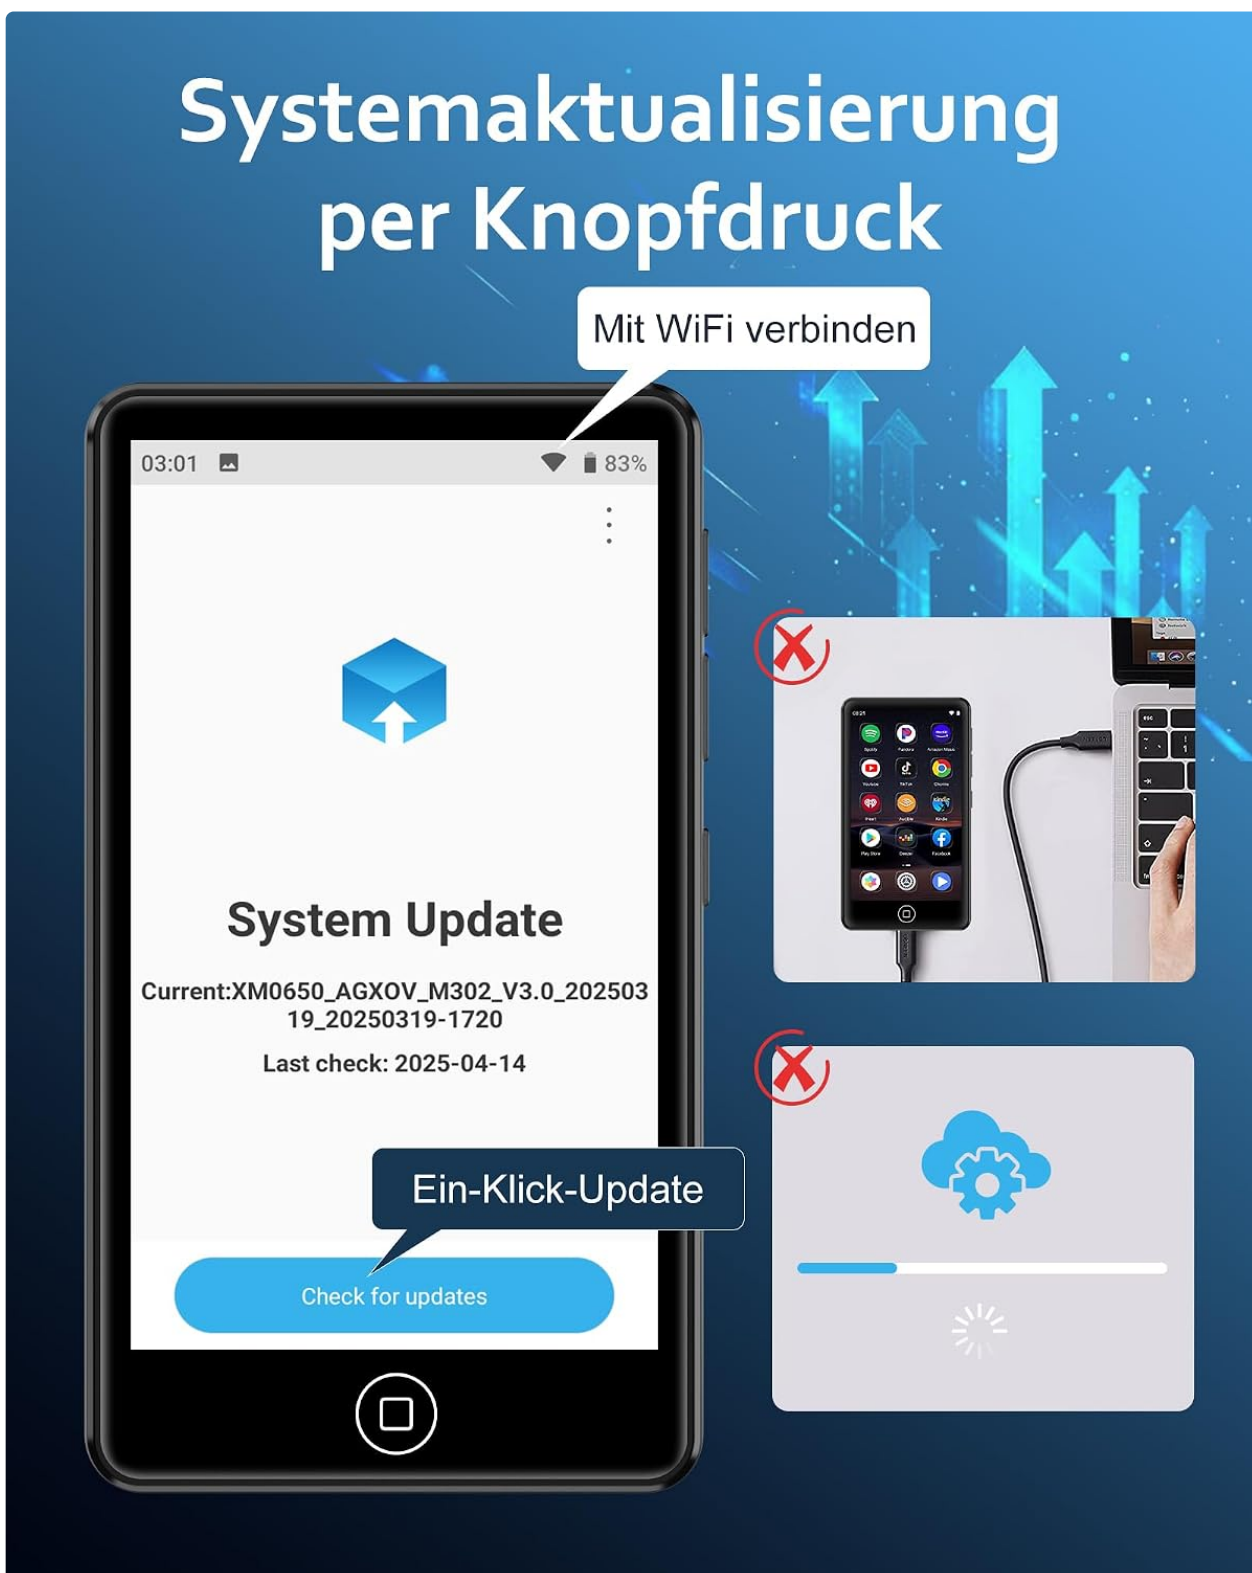


Image: The MP3 player displaying the system update screen, indicating that updates can be performed with a single click after connecting to Wi-Fi.

5. MAINTENANCE

5.1 Cleaning

To clean your device, use a soft, dry, lint-free cloth. Avoid using abrasive cleaners, solvents, or aerosol sprays, which may damage the screen or casing.

5.2 Battery Care

To prolong battery life:

- Avoid exposing the device to extreme temperatures.
- If storing the device for an extended period, ensure it is charged to about 50% to prevent deep discharge.
- Use only the provided charging cable or a certified equivalent.

5.3 Software Updates

As mentioned in section 4.10, regularly check for and install system updates to maintain optimal performance, security, and compatibility.

6. TROUBLESHOOTING

If you encounter issues with your AGXOV M302-80GB MP3 Player, refer to the following common solutions:

- **Device not turning on:** Ensure the battery is charged. Connect the device to a charger for at least 30 minutes, then try pressing and holding the power button again.
- **Cannot connect to Wi-Fi/Bluetooth:** Verify that Wi-Fi/Bluetooth is enabled in settings. Ensure you are within range of the network/device and that the password (for Wi-Fi) is correct. Restarting the device can often resolve connectivity issues.
- **Apps crashing or slow performance:** Close unnecessary background applications. Clear the cache of problematic apps via **Settings > Apps & notifications > [App Name] > Storage & cache > Clear cache**. A device restart can also help.
- **Insufficient storage space:** Delete old files, photos, or videos. Uninstall unused applications (refer to section 4.9). Check if your microSD card is properly inserted and recognized.
- **Poor sound quality:** Ensure your headphones or speakers are properly connected and functioning. Check the audio file format and quality. Try playing a different audio file.
- **Device unresponsive:** If the device becomes unresponsive, press and hold the power button for approximately 10-15 seconds to force a restart.

7. SPECIFICATIONS

Feature	Specification
Brand	AGXOV
Model Number	M302-80GB
Digital Storage Capacity	80 GB (16GB internal + 64GB microSD), expandable up to 512 GB
Display Technology	Touchscreen (LCD/TFT)
Screen Size	4.02 Inches

Battery Capacity	2000 mAh
Battery Life (Music)	Up to 50 Hours
Battery Life (Video)	Up to 8 Hours
Connectivity Technology	Bluetooth, Wi-Fi
Compatible Media Types	MP3, FLAC, WAV, APE, OGG, AAC, WMA (Audio); MP4, RMVB, MKV, FLV, DAT, MPG, MOV, TS (Video); TXT (E-book)
Compatible Devices	Headphones, Speakers
Special Features	Streaming Services (Spotify, Amazon Music, Deezer), FM Radio, Voice Recorder
Item Weight	230 g

8. WARRANTY AND SUPPORT

8.1 Warranty Information

Your AGXOV M302-80GB MP3 Player comes with a **12-month warranty** from the date of purchase. This warranty covers manufacturing defects and ensures reliable care. Please retain your proof of purchase for warranty claims.

8.2 Customer Support

For any questions regarding the setup, operation, maintenance, or troubleshooting of your device, please contact AGXOV customer service. Refer to the product packaging or the retailer's website for specific contact details. Our support team is available to assist you in optimizing your product experience.